

## HARDWARE MANUAL

Expert Vibro – Installation and start-up



Copyright © 2003-2018 Delphin Technology AG. All rights reserved.

This document's content, especially text, images, and graphics are protected by copyright. When not otherwise stated, the copyright belongs to Delphin Technology AG, Lustheide 81, in 51427 Bergisch Gladbach, Germany.

All the trademarks and brands used in this manual refer only to the respective product or trademark holder. Delphin Technology claims no rights other than those to its own trademarks and brands.

## Contents

<b>1 Introduction</b>	<b>7</b>
1.1 Safety advice	8
1.2 System requirements	9
1.3 Symbols used	9
1.4 Included in delivery:	10
<b>2 Getting started</b>	<b>11</b>
2.1 Installing the programs	11
2.2 PC connection	12
2.3 Starting the device	19
2.4 Basic settings	19
<b>3 Expert Vibro Displays and connections</b>	<b>21</b>
3.1 Power supply	21
3.2 Display, LEDs	22
3.3 COM interfaces, CAN bus	22
3.4 Sensor connection (sensor terminals)	24
<b>4 Configuration and operation</b>	<b>25</b>
4.1 Overview	25
4.2 Configuring the network via the display	27
4.3 Configuring and operating the display	30
4.4 Configuration via an Internet browser	31
4.4.1 Settings	32
4.4.1.1 NTP/PTP status	33
4.4.2 Configuration	33
4.4.2.1 Channels overview (Show configuration table)	34
4.4.2.2 View current values (live channel values)	34
4.4.2.3 Resetting configuration	35
4.4.3 Service	36
4.4.3.1 System report	37
4.4.3.2 PROFIBUS GSD file	37
4.4.3.3 XML network configuration template	38
4.4.3.4 USB network driver	38
4.4.4 System	39
4.4.4.1 Update firmware	40
4.4.4.2 Firmware changelog	40
4.4.4.3 Device restart (reboot)	41
4.4.4.4 Restart measurement data acquisition (restart server)	41
4.5 Connecting slave devices	42
4.6 Configuring the Expert Vibro device via the DataService Configurator	44
4.7 Settings for all dialogues	46
4.7.1 Additional settings tab	48
4.7.2 Sensor compensation tab	49
4.7.3 Information tab	51
4.7.4 Basic channel selection	52
4.7.5 Advanced channel selection	52
4.7.6 Trigger options	53
4.7.7 Inherit status	54

4.8 Device Properties context menu .....	55
4.8.1 Configuring device properties .....	55
4.8.2 Saving and loading device configurations .....	56
4.8.3 Creating the network configuration .....	58
4.9 System channels .....	59
4.9.1 Time and clock settings .....	59
4.9.2 Directory (User management) .....	63
4.9.3 Display .....	66
4.9.4 Drives .....	67
4.9.5 LED .....	70
4.9.6 System monitoring .....	71
4.9.7 Network settings .....	72
4.9.7.1 Mail settings .....	74
4.9.7.2 Time and clock settings .....	88
4.9.8 Power saving .....	88
4.9.9 System Settings .....	89
4.10 Configuring channels (sensors) .....	90
4.10.1 Trigger Group .....	91
4.10.2 Configuring the rotation speed .....	95
4.10.3 Analogue inputs (Expert Vibro/Expert Transient) .....	96
4.10.3.1 Configuring analogue inputs .....	96
4.10.4 Track .....	98
4.10.4.1 Relationship between triggers, time data and spectra .....	99
4.10.4.2 Main settings tab .....	100
4.10.4.3 Filter tab .....	102
4.10.4.4 FFT/spectrum .....	112
4.10.4.5 Min/Max/Peak-to-peak (PP) .....	129
4.10.4.6 Average/RMS .....	130
4.10.4.7 Vector sum .....	132
4.10.4.8 Local min/max values .....	133
4.10.4.9 Sample rate .....	136
4.10.5 Raw data track .....	136
4.10.6 Configuring digital inputs .....	136
4.10.6.1 Counter (hardware) .....	138
4.10.6.2 Frequency .....	139
4.10.7 Digital outputs (Expert Vibro / Expert Transient) .....	141
4.11 Configuring software channels .....	144
4.11.1 Adder .....	145
4.11.2 Operating hours counter .....	145
4.11.3 Differentiator .....	145
4.11.4 Event (Mail) .....	146
4.11.5 Flip-flop .....	150
4.11.6 Limit value .....	152
4.11.7 Pulse generator .....	153
4.11.8 Integrator .....	162
4.11.9 Channel group .....	163
4.11.10 Linearisation .....	163
4.11.11 Logic .....	165

4.11.12 Variable .....	169
4.11.13 Average .....	170
4.11.14 PID controller .....	171
4.11.14.1 Introduction to control technology .....	171
4.11.14.2 Controller parameter settings .....	175
4.11.14.3 Configuring PID controllers .....	176
4.11.15 Pulse width modulation (PWM) .....	181
4.11.16 Calculation channel .....	183
4.11.17 Batch alarms .....	187
4.11.18 Shift register .....	188
4.11.19 Setpoint .....	189
4.11.20 Statistics .....	193
4.11.21 Status filter .....	194
4.11.22 Status generator .....	196
4.11.23 Status monitoring .....	197
4.11.24 Stopwatch .....	198
4.11.25 System monitoring .....	200
4.11.26 Tolerance filter .....	201
4.11.27 Trigger .....	202
4.11.28 Clock .....	203
4.11.29 Alarm clock .....	204
4.11.30 Counter .....	206
4.11.31 Time delay .....	209
4.12 Configuring interfaces .....	212
4.12.1 TCP/IP services .....	213
4.12.1.1 Modbus Device (Server) .....	213
4.12.1.2 Modbus Device (Client) .....	214
4.12.1.3 Modbus channel .....	216
4.12.2 CAN connection .....	219
4.12.2.1 CAN protocol .....	221
4.12.2.2 CAN bus channel .....	221
4.12.3 COM connection .....	226
4.12.3.1 PROFIBUS protocol .....	229
4.12.3.2 PROFIBUS channel .....	232
4.12.3.3 Modbus RTU Slave/Master .....	235
4.12.3.4 User-defined protocol .....	242
4.12.4 LAN .....	256
4.12.5 USB device .....	259
4.12.6 USB device (host, such as memory) .....	260
4.12.7 WLAN (option) .....	262
4.12.8 WWAN (option) .....	265
4.12.9 OpenVPN .....	266
4.13 Device memory .....	271
4.13.1 Main settings tab .....	272
4.13.2 External memory backup tab .....	274
4.13.3 Channel list tab .....	276
<b>5 Measurement technology notes .....</b>	<b>278</b>
5.1 Galvanic isolation .....	278

5.2 Earthing .....	279
5.3 Earth loops .....	280
5.4 Shielding .....	281
5.5 ESD protection .....	282
5.6 Potential differences .....	282
<b>6 Technical specifications Expert Vibro 8/16 .....</b>	<b>285</b>
7.1 Connection examples .....	290
7.1.1 Connecting sensors .....	290
7.1.2 Connecting actuators .....	291
<b>8 Appendix .....</b>	<b>294</b>
8.1 ISO 9001 certificate .....	294
8.2 EC declaration on conformity .....	295

## 1 Introduction

Dear User,

Thank you for purchasing a device from the **Expert Vibro** series. With this device you have acquired a high quality product with extensive options for data acquisition and processing.

This manual is included in the delivery. Always keep the manual available for reference. To avoid any damage occurring to yourself or your equipment, carefully follow the guidance and safety precautions given in this manual. If your equipment has a problem that this manual does not address, please contact us.

This manual is intended for technicians and engineers or similarly qualified persons wishing to use the device.

If you find errors in the product or in this documentation, or if you have any suggestions for its improvement, we welcome your feedback.


### Contact:

Delphin Technology AG  
Lustheide 81  
51427 Bergisch Gladbach (Refrath), Germany  
Phone: (+49-2204) 97685-0  
Fax: (+49-2204) 97685-85  
E-mail: [info@delphin.de](mailto:info@delphin.de)  
[www.delphin.de](http://www.delphin.de)

### Contact USA:

Delphin Technology AG  
4860 Cox Road, Suite 2000  
Glen Allen, VA 23660  
Virginia, United States  
Phone: (+1-804) 217-8391  
Fax: (+1-804) 747-6182  
E-mail: [info@delphin.de](mailto:info@delphin.de)  
[www.delphin.com](http://www.delphin.com)

## 1.1 Safety advice



# WARNING!

**Connecting terminals carry electrical potential from the attached sensors/actuators.**

**Before coming into contact with the connections, ensure the power is off. Check for any voltages at the connecting terminals when the attached sensors have varying degrees of electrical potential or when they have high electrical potentials with earthing, for example, when measuring electrical current for a mains voltage phase.**

**See also**  
**Potential differences. See also "[Potential differences](#)" on page 282.**

### Installing modules, memory card or battery



Electronic components are sensitive to ESD (**E**lectro-**S**tatic **D**ischarge). Therefore, discharge any electrostatic energy before opening the device, for example to install an I/O module or to replace the integrated memory card. We recommend wearing an anti-static wrist band (static discharge wrist band) and to carry out the work on a conductive surface.

ESD damage can have a number of effects, from deviation in individual specifications to total device failure.



## 1.2 System requirements


To ensure trouble-free operation of the **Delphin** products, ensure that the hardware requirements listed below are met.

- Operating system  
Microsoft Windows Vista, Windows 7, Windows 8, Windows 10 and Windows Server 2008 R2 in 32-bit or 64-bit versions, each in either English or German editions.  
We recommend using a 64-bit version.
- Main memory  
At least 2 GB;  
Recommended: 3 GB for 32-bit systems, 8 GB for 64 bit systems
- Screen  
Resolution at least 1024×768 pixels, 96 DPI fixed font size (100%)
- CPU  
At least one PC with 2 GHz class dual core processor  
Recommended: System with quad core processor from 3 GHz
- Hard disk  
For ProfiSignal-Go at least 150 MB free hard disk space  
For ProfiSignal-Viewer at least 150 MB free hard disk space  
For ProfiSignal-Klicks at least 1000 MB free hard disk space  
For other ProfiSignal versions, at least 500 MB free hard disk space

## 1.3 Symbols used

To make reading this help easier for you, we use the following symbols:

To make reading this manual easier for you, we use the following symbols:



**WARNING!**

**This symbol warns of a potential hazard which - if the safety requirements are not followed - may be fatal or cause serious physical injury.**



**Indicates important information.**



### Info

Refers to a special option or explains an interesting feature.

We use italics to emphasise individual terms in the text. We also highlight keyboard inputs to be made by you. We have highlighted the menus used in the program in grey, the arrows indicate the corresponding submenus to be called: **Connect** → **Add Delphin device**. Titles of dialogue boxes, all buttons, and checkboxes, and input field names, and so on, are also highlighted in grey and additionally identified using italics: *Display status*. User inputs are in most cases illustrated with examples and highlighted in yellow: Use **192.168.251.252** as the IP address.

We hope that this helps you to more quickly identify the corresponding fields, buttons, and menus, and to locate these in the program.

## Device labelling



CE symbol: The CE symbol guarantees that our products meet the requirements of relevant EU directives.

### 1.4 Included in delivery:

Included in delivery:

- **Expert Vibro** device
- Connecting plugs for inputs and outputs and power supply
- Brackets for rail mountings
- Ethernet crossover cable
- DVD of the software **ProfiSignal**
- Quick Start Guide
- Screwdriver

## 2 Getting started

The device is designed for use as a modular measurement, control, and monitoring device and is fitted with many settings and connection options. They are also equipped with a range of inputs and outputs, field bus interfaces, and software channels to enable the performance of monitoring, control, and regulation tasks. The device has 16 GB internal memory and can function as a stand alone independent unit. Data that has been acquired can be transferred via interfaces in runtime mode, via time-controlled events, or via the device's available interfaces.

This section outlines:

- How to set up the device.
- Which programs must be installed.
- How to establish a connection between a PC and the device.
- The settings required to acquire measurement signals from the device.

### 2.1 Installing the programs



**You need administrator rights to install the program.**

Install the DVD **ProfiSignal**. During the installation, ensure that you install the *DataService Configurator* as a program (and not as a service).

After default installation you will find both of these symbols on your desktop:



DataService  
Konfigurator



ProfiSignal

The program works DataService Configurator from **Delphin** as a link between the PC and the measuring hardware. All devices are immediately configured in DataService Configurator.

The ProfiSignal program evaluates and displays measurement data.



### Note for administrators

For the connection between PC and the device, you must enable at least ports 80 and 1033.

## 2.2 PC connection

For the connection between PC and the device, you must enable ports 80 and 1033. If you use Windows firewall, you may see a warning message when you add the connection, and a user with administrator rights will need to authorise the connection.

See also [XML network configuration template](#), [LAN connection](#)



### Info


As an alternative to the procedure described here, you can set the IP address and subnet mask used also via the **Expert Vibro** device's display, see [Network configuration via the display](#).

## Preparing the device to PC connection


- Connect your PC and the device using the Ethernet crossover cable supplied. Alternatively you can connect the device and PC also via a network hub or switch.

## Establish device connection


1. Start the DataService Configurator program, to create the connection and make the configuration.  
The DataService starts and the Connections tab is displayed on the left-hand side in the DataService Configurator.
2. Via the menu item **Connect** → **Find Delphin device on LAN**. Also, as shown in the image, you can use the **Add driver (connection)** context menu in the DataService entry on the left of the window.

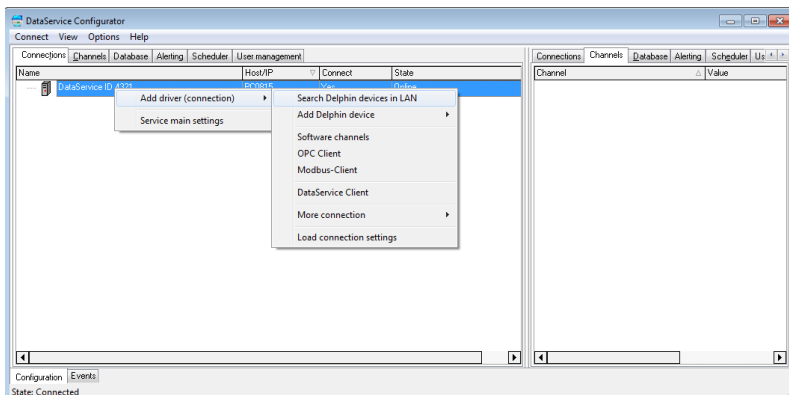

- The device search takes place and a dialogue with the found device(s) is displayed.

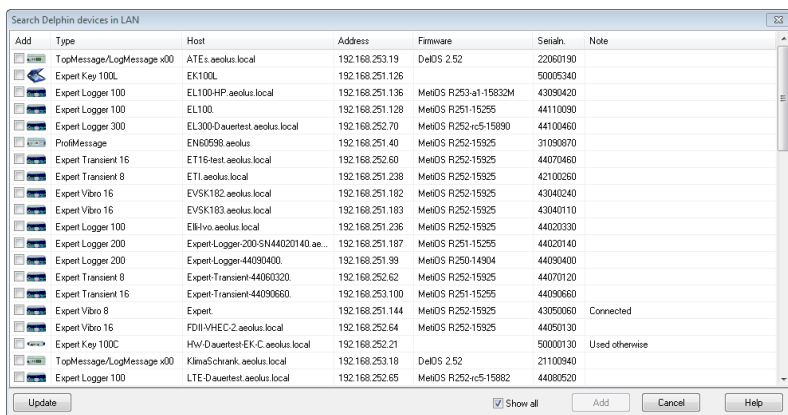


- In the **Add** column, enable the device or devices that you want to connect to. Then click **Add**.  
If the device IP address does not correspond with that of your PC, you must first assign a different network address. If no devices are found, for example, if the scan required for searching (port 16555) is not permitted in the network, you can either try a direct connection with your PC (with no network) or the method described below for direct connection with PC and fixed address.
- If the device's [User management](#) is enabled, another dialogue opens. Here, under username and password, enter your login data. The successful connection is then displayed with IP address and status. The information in the DataService... line, Host/IP column is the hostname or IP address of your
- PC.

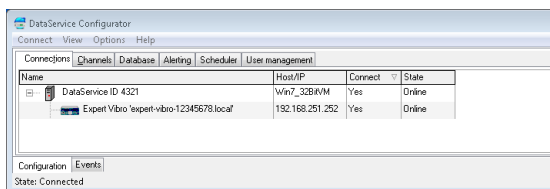

### Set different network address

If the device IP address does not correspond with that of your PC, after a device search you will be able to change the address, before you connect to the device:

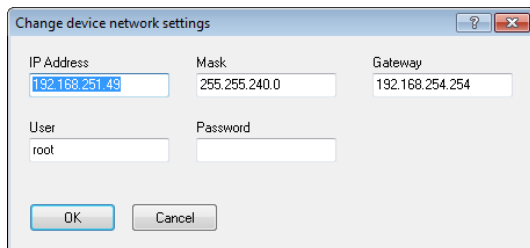

IP Address	Mask	Gateway
192.168.251.48	255.255.240.0	192.168.254.254
User	Password	
root		

Buttons: OK, Cancel

Enter a suitable IP address corresponding to your PC IP address (similar but not the same) and subnet mask. For a new device, use the **root** user, username and password are then only relevant if you have enabled [User management](#) on the device. Enter the required data and click **OK**. The settings are saved and you will need to carry out a new search (click on **Update**).

Alternatively you can also change the IP address using the touch display: click on **Network** and then on the number to be changed. Using the keys above or below the numbers, you can increase or decrease the displayed numbers.

A third option is configuration via any Internet browser:

1. Launch your Internet browser and in the address bar enter **http://** and the current device address, for example **http://192.168.251.252**. The device connection is established and the home page is shown.
2. In the **Settings** section, click on **Network**. The page with the network settings is displayed.
3. Enter the desired new address for your network in **IP address**. You can also specify subnet mask and gateway or DNS and NTP servers, refer also to [Configuration via an Internet browser](#).
4. Finally click on **Save** to save your settings.

## Direct connection with PC and fixed address


If your network does not allow scanning (port 16555 not enabled), then the DataService Configurator cannot find the device. In this case you will need to establish a direct connection between the PC and device, and set the PC to the device address range in order to be able to make a connection. While you have a connection, you can set your device address to one that is suitable for your network, as described above. Ports 80 (connection via web browser) and/or 1033 (connection via DataService Configurator) must be enabled for the TCP protocol.

The **Delphin** device IP address is identified at the factory with a sticker. If the sticker has been lost during transport and can no longer be found,

please search for it using IP address 192.168.251.252 (net mask: 255.255.240.0).


(Temporarily) set your PC to a different address in the same IP segment:

1. Open the dialogue for your network connections.
2. Depending on the operating system, open the dialogue either via the Windows Start button and **Network settings** or via the Control Panel and **Network and Sharing Center**.
3. Display the connection (interface) **Properties** via which you want to connect the device (normally called LAN connection). In Windows Vista and in Windows 7, click on **Show status**, and then on **Properties**.
4. Display the Internet protocol **Properties**.

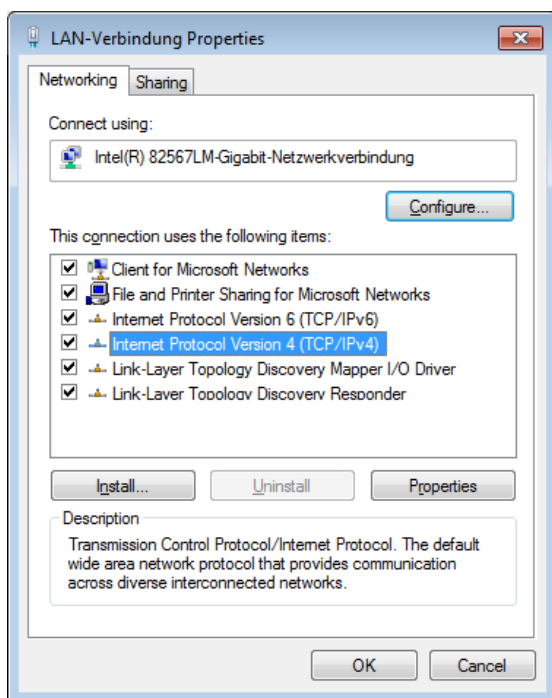

5. In the following dialogue you can either enter a fixed address for your PC or, if the PC is set to DHCP and to be used in the LAN, use the option of specifying an **alternative configuration** for cases where the network (server)


is unavailable (recommended procedure).

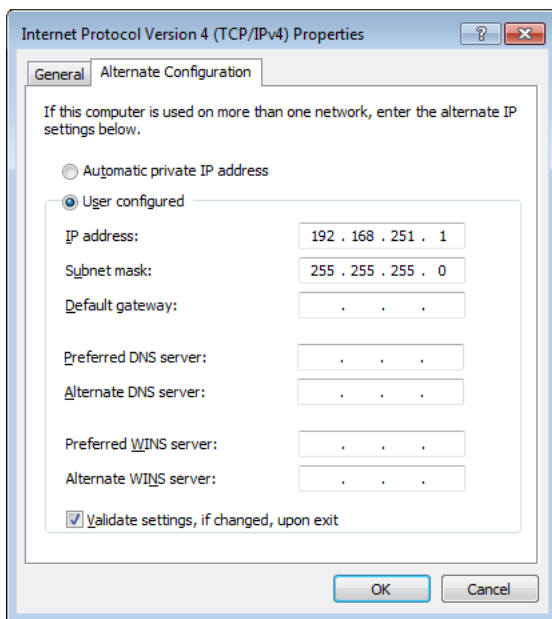

6. Enter an address that is within the same segment as the device address (see above figure for an example). Also set the subnet mask.
7. Close the dialogue with **OK**.  
Then try again to make a connection with the device. However, please use the **Connect** → **Add Delphin device** menu to do this, and enter your device type.



8. Enter the IP address of the device in the dialogue, for example, **192.168.251.252**.

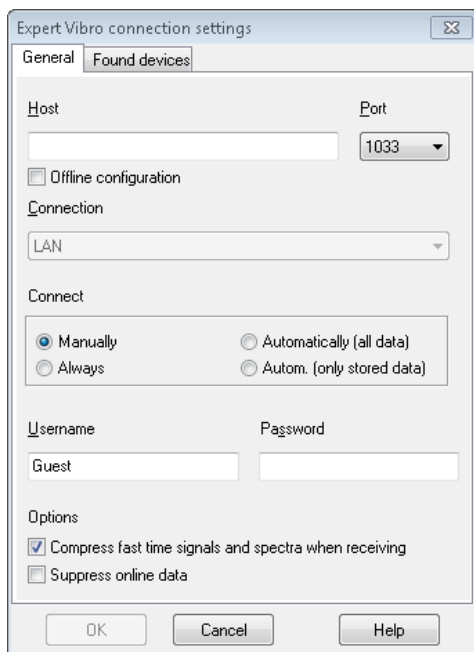

The image shows a screenshot of the 'Expert Vibro connection settings' dialog box. It has two tabs: 'General' and 'Found devices'. The 'General' tab is active. The dialog contains the following fields and options:


- Host:** A text input field.
- Port:** A dropdown menu with '1033' selected.
- Offline configuration**
- Connection:** A dropdown menu with 'LAN' selected.
- Connect:** A group box containing four radio buttons:
  - Manually**
  - Automatically (all data)**
  - Always**
  - Autom. (only stored data)**
- Username:** A text input field with 'Guest' entered.
- Password:** A text input field.
- Options:** A group box containing two checkboxes:
  - Compress fast time signals and spectra when receiving**
  - Suppress online data**

At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Help'.

9. If the device's [User management](#) is enabled, enter your login data under *Username* and *Password*.
10. For time signals and spectra, you have the option to compress acquired measurement values. Compression reduces memory requirements significantly and comes with losses.  
Note: Compression can cause the min/max characteristic values to not exactly match the time signal or spectrum.
11. Click **OK** to create the connection.
12. While you have a connection, set your device address to an IP address that is suitable for your network, as described above. However do not forget to reset your PC to the original address.

## Offline configuration

If you want to work with a saved [Configuration](#) offline, select **Connect** → **Add Delphin device** and your device type.

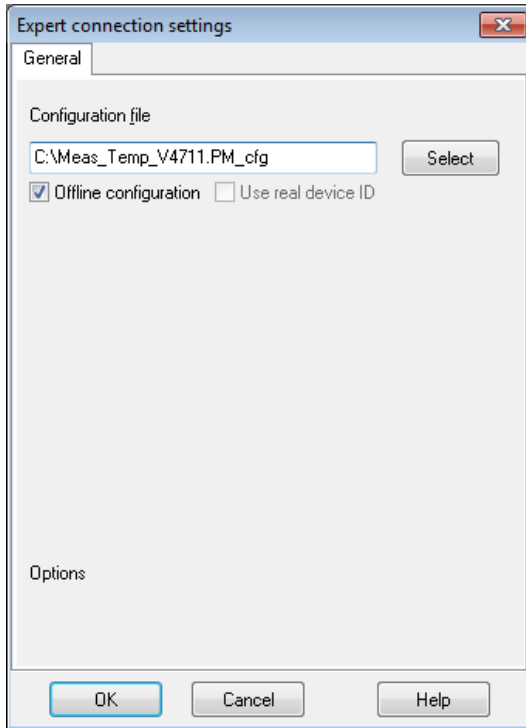

Enable **Offline configuration** and enter the path and filename, or click on **Select**, to search for the file.

The configuration file is loaded and the device contained in it is shown in the channel tree as a physically available device.



**All changes you make to the configuration are saved directly in the configuration file.**



To connect via XML, you must enable port 1035 for TCP (XiMP), and to connect via Web socket you must enable port 1036 for TCP (WiMP).

Refer also to [Main settings: services](#).

## 2.3 Starting the device

Just a few steps are required to start using your new **Expert Vibro** device:

- Unpack the device.
- Connect the three-pin plug to an appropriate power supply and plug it into the 'Power' socket on the device.
  - **Expert** devices: 12 ... 24 VDC

Refer also to [Expert Vibro displays and connections](#)


The plug is non-interchangeable and polarity-protected and can be inserted into the socket in only one direction.

The next steps are:

- [Installing programs](#)
- [PC connection](#)
- [Basic settings](#)

## 2.4 Basic settings

The DataService Configurator dialogue is split, enabling a device to be selected on the left in the *Connections* tab and settings to be applied on the right in the *Channels* tab.

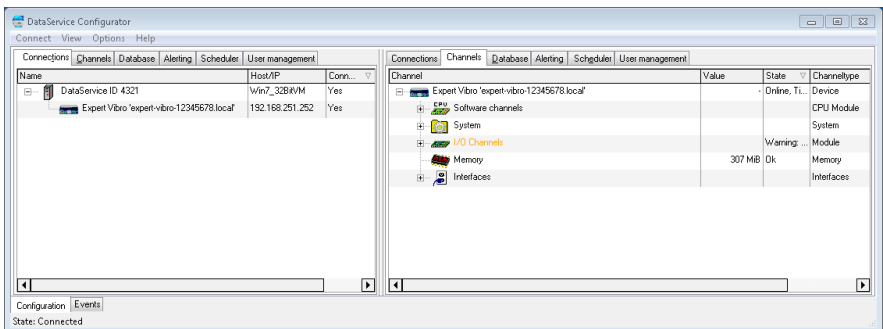

## Displaying measurement data

Once you have established a [connection to the device](#), you can see the current measured values: double-click your device on the right, then on *I/O Channels* to open the entry and display all available channels or channel groups. If required, click on one of the groups and then on input or output, to view the sub-entry or sub-entries. The *Value* column continuously updates with new measurement data.


## Displaying scaled measurement data

To convert data from the sensor into the required measurement unit requires configuration of the channel. This allows the sensor measurement data to be scaled accordingly or corrected. Right click a channel to display the **Properties** dialog. A general explanation of dialogs is available under the [Settings for all dialogs](#) section. Special settings for different channel types (analogue input, analogue output) can be found in subsections of the [Configuring channels \(sensors\)](#) section, or for **LogMessage/ProfiMessage/ProfiMessage D** under [Configuring I/O module channels](#). The dialog also displays connection diagrams. Under [I/O module connection terminal blocks](#), you will find the terminal assignments for the I/O modules of **LogMessage**, **ProfiMessage** or **ProfiMessage D**.

## Other settings

- Define digital I/O  
Scaling can also be made for counter inputs. Set which signal (channel) requires output of a constant level.
- Set device-specific settings  
Options are available for system monitoring, e.g. CPU utilization or the available memory, and interface configurations.
- Create computed channels (dependent channels)  
Your **Delphin** device has many options for further processing data before the data is saved or output. The corresponding settings are described in [configuring software channels](#).

### 3 Expert Vibro Displays and connections

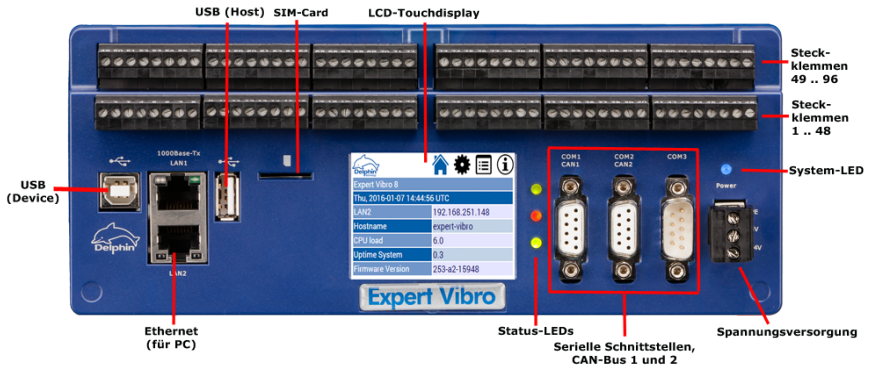

Displays and connections are described in the following Sections:

- [Power supply](#)
- [Display and LEDs](#)
- [COM interfaces and CAN bus](#)

#### 3.1 Power supply



Input voltage: 12 VDC – 24 VDC ±10%

Pmax power input: 10 W

#### Pin assignment

Pin	Label	Description
Top	PE	Protective Earth, refer to <a href="#">Earthing</a>
Middle	0V	Neutral
Bottom	24V	Power supply

## 3.2 Display, LEDs

### Display

The display is touch-sensitive, so you can call up the corresponding menu items by tapping. You can also connect a mouse to the USB port and click on the menus and icons with the mouse pointer.

The interface settings are explained in [Network configuration via the display](#); the symbols and menus are described in [Configuring and operating the display](#).

### LED indicators

#### Power LED

The power LED is lit permanently, when a correct power supply is connected. The LED flashes briefly every 5 seconds for approximately 0.1 s in energy saving mode.

#### LEDs next to the display

The LEDs next to the display indicate sign of life (LED 1) and read/write access to the memory (LED 2) by default. [Configure the LED display](#) in DataService Configurator via **System** → **LED**.

#### LEDs LAN2 (PC interface)

LED	Status	Description
Left	On	Link
	blinking	Data transfer
Right	1 x blinking	10 Mbit
	2 x blinking	100 Mbit
	3 x blinking	1 GB

## 3.3 COM interfaces, CAN bus

### COM1/2 and CAN1/2



Pin assignment 9-pole Sub-D socket

Pin	Signal	Description COM1/2 RS-485 (IEC 61158)	Description CAN1/2 (CiA DS102-1)
Housing	Shield	Shield / protective ground, refer to <a href="#">Earthing</a>	
1	Shield	Shield / protective ground, refer to <a href="#">Earthing</a>	
2	CANL	—	CAN bus low
3	RxD/TxD-P/B	Receive/transmit data-Plus (RS-485)	—
4	RTS	Control signal for repeaters (TTL)	—
5	GND/C	Data reference potential/mass	—
6	VP	Supply voltage/Plus (5 V)	—
7	CANH	—	CAN bus high
8	RxD/TxD-N/A	Receive/transmit data-Minus (RS-485)	—
9	—	Not connected	



No galvanic isolation between CAN1 and COM1 or CAN2 and COM2.  
CANHL/CANH have an integrated terminating resistor of 120 Ω.

COM3




Pin assignment 9-pole Sub-D plug

Pin	Signal	Description COM3 DIN 41 652, Part 1 (ISO 4902)
Housing	Shield	Shield / protective ground, refer to <a href="#">Earthing</a>
1	DCD	Received signal level, Data Carrier Detect (RS-232)
2	RxD	Receive Data (RS-232)


Pin	Signal	Description COM3 DIN 41 652, Part 1 (ISO 4902)
3	TxD	Transmit Data (RS-232)
4	DTR	Data Terminal Ready (RS-232)
5	GND	Signal Ground
6	—	Not connected
7	RTS	Request to Send (RS-232)
8	CTS	Clear to Send (RS-232)
9	—	Not connected

### 3.4 Sensor connection (sensor terminals)

Sensor terminals 1 to 48

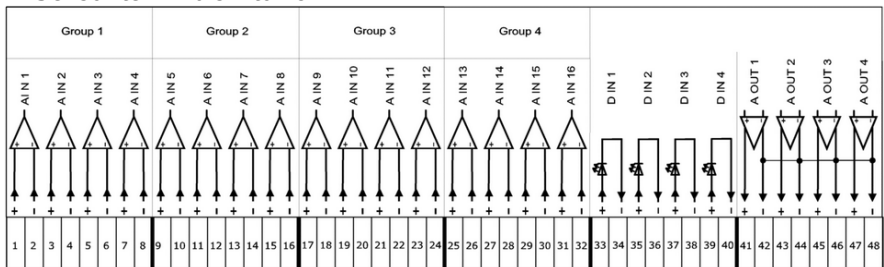

Sensor terminals 49 to 96

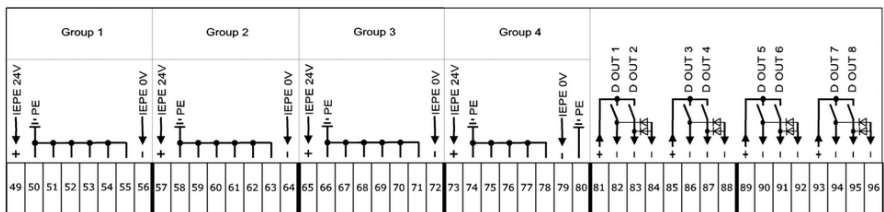



## 4 Configuration and operation

The following paragraphs are covered in this Section:

- The basic settings of the device, such as the network settings or the device ID, are described in the section [Device configuration](#).
- Configuration of the display, as well as an explanation of the display's symbols and menus, are available under [Configuring and operating the display](#).
- Channel configuration of the various I/O modules is explained in detail under [Configuring channels \(sensors\)](#).

Settings and operation, which are the same for all **MetiOS** devices, are available under [Common device settings](#).

- The [Configuration via web browser](#) section explains the (device) settings that you can apply via an internet browser.  
The following functions are available only via the device's web interface: Resetting to factory settings and updating the device's firmware. Some basic settings are also possible, for example to the Ethernet interface or device-clock.
- The [Configuring software channels](#) section describes the various ways in which to perform calculations on measurement data or between channels.
- Read the [Configuring interfaces](#) section on how to use the various interfaces for connecting or exchanging data with external devices.
- Devices are equipped with internal memories to enable measurement data to be saved. The [Device memory](#) Section explains how this storage space can be used, for example for partitioning of different channel groups.
- The [Data transfer to USB memory stick](#) Section explains how to externally back up internally stored data.

See also Getting Started and [Settings for all dialogues](#).


### 4.1 Overview

See also [Getting Started](#)

Configuration of the most important parameters, such as network settings, can be performed using either the Web Interface from the device or the DataService Configurator program. Settings via the Web interface are described in the [Configuration via Web browser](#) Section. A detailed description of the program DataService Configurator is available in the manual on DataService Configurator. A detailed description of the program DataService Configurator is available in the manual on [DataService Configurator](#).

Clicking DataService Configurator starts the DataService background program and establishes a connection to the devices (the default for the first

installation is described in the Getting Started section). The DataService Configurator dialog is split enabling a device to be selected on the left under **Connections** and settings to be made on the right under **Channels**. The device itself is considered a 'channel' and in the example is listed as **'Expert Vibro 'ExpVib-SN4108...'**.

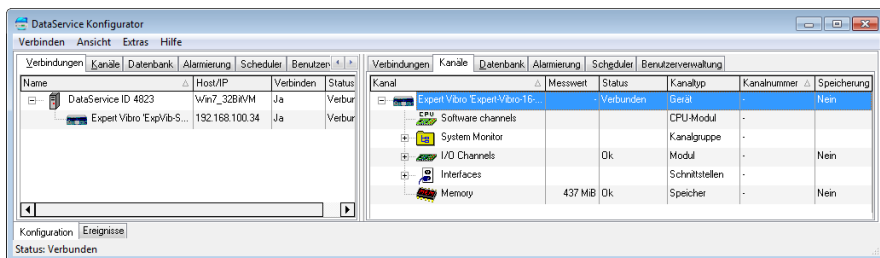

## Channel configuration

Any configuration performed in the DataService Configurator is considered a channel configuration even when not strictly concerning a measurement channel, but rather a device interface or memory group.

Amendments to configurations to take immediate effect with the previous settings being overwritten. The new settings are saved to the **Expert Vibro** device's non-volatile memory and remain there even following a device reset.

Open the configuration dialog for a channel by double-clicking the channel name or right-clicking and selecting **Properties** from the context menu. Objects that do not have this entry in their context menus are not configurable via the DataService Configurator but act as containers, that is, as channel groups for (more) sub-channels such as the Software channels' group.

Channels from a channel group are displayed by clicking the corresponding plus sign ( + ) before the group.

## DataService Configurator options

- Hide or show columns for the different tabs on or off:  
*View* → *Left panel* → *Visible columns...* or *View* → *Right panel* → *Visible columns...*
- Set the DataService Configurator time zone: *View* → *Timezone*.
- Change the DataService Configurator's display language via *Options* → *Language*.
- Suppress confirmation requests:  
*Options* → *Don't prompt for confirmation*.

- Change channel order via **Options** → **Activate channel move / link** (only available in the [User-defined view](#)).

Further information is available in the [DataService Configurator](#) manual.


## 4.2 Configuring the network via the display


The settings that you can make in the display relate to the basic setting required to enable communication via the Ethernet interface. Additional settings are required for device operation, see [Settings](#) for Internet browser configuration or [Network settings](#) for configuration via the DataService Configurator.




**After changing the *IP address* or *subnet mask* the device is then accessible only via the new address. The PC's IP address (and any subnet mask) then also requires amending to establish a connection if required.**



Tap  on the display to call the network settings main view. This allows you to make the settings for the PC interface:

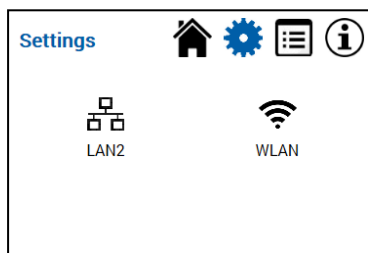


By tapping on the relevant symbol for LAN2 or WLAN, the corresponding settings dialogue will open. These are described below:

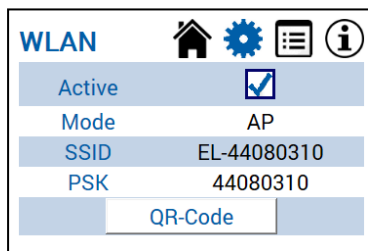

This screen gives you two action options. Under the "Active" item, you can enable or disable the WLAN module. The QR code button opens a further view, with which the "Android" mobile operating system can be set up by QR code.



Start the QR code app on your Android smartphone and align it with the displayed code. The smartphone WLAN connection will be set up according to the Expert device settings.

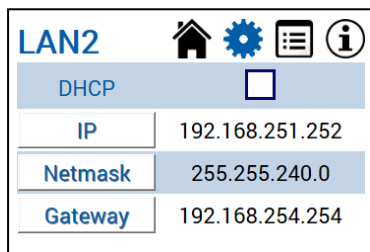


## Settings


If you enable DHCP (tap on the checkbox), the device tries to obtain an IP address from the DHCP server automatically. While DHCP is enabled, no manual settings can be made for IP address, net mask, or gateway. The corresponding fields are greyed out in this case.

To change the IP address, net mask, or the gateway, please tap the corresponding button. This will take you to the following views:

### IP address

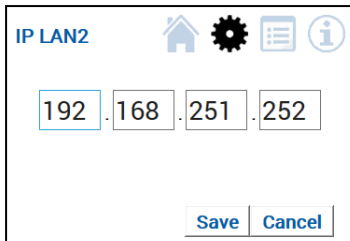


To change the IP address, please tap one of the displayed IP blocks. This takes you to a further view:

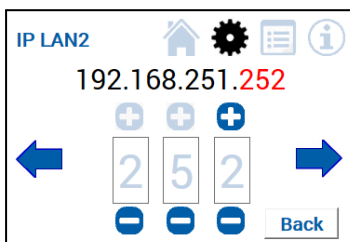

Here, by tapping '+' or '-', you can change individual figures in the red highlighted IP blocks. Using the arrows to the left or right, you can toggle between individual IP blocks.

Important: your settings are made only after clicking "Back" and then "Save". To discard changes made, please tap on "Back" and then "Cancel".

## Net mask

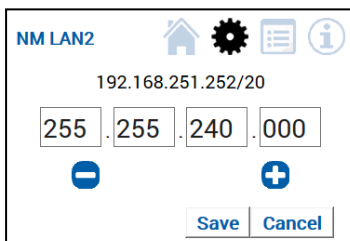

Here, by tapping '+' or '-', you can set the desired net mask. You may set only allowed values for the net mask.

Important: your settings are made only when you click "Save". To discard changes made, please tap "Cancel".

## Gateway


The views and functions for setting the gateway correspond to those for setting the IP address (see above).


Note: A gateway address is required only if connections are to be established to other networks.

## 4.3 Configuring and operating the display

In addition to the network configuration described in the previous Section, various additional information is available via the navigation area at the top right of the device display, which is described in this Section.

### Homescreen


Tap the top  right hand corner to call up the start (home) page:

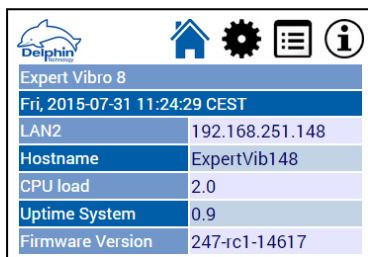


Expert Vibro 8	
Fri, 2015-07-31 11:24:29 CEST	
LAN2	192.168.251.148
Hostname	ExpertVib148
CPU load	2.0
Uptime System	0.9
Firmware Version	247-rc1-14617

Configure the lines shown here in **System** → **Display** in DataService Configurator, see [Display](#). Seven lines can be displayed.

### Channel view


Tapping the  icon takes you to a view containing the current device channel contents:

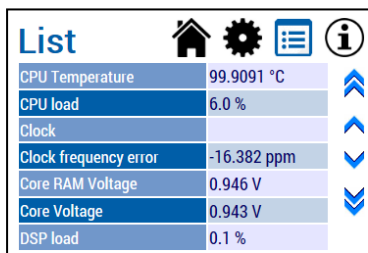

List		
CPU Temperature	99.9091 °C	↑↑
CPU load	6.0 %	
Clock		↑↑
Clock frequency error	-16.382 ppm	↓↓
Core RAM Voltage	0.946 V	
Core Voltage	0.943 V	↓↓
DSP load	0.1 %	

All available channels and their current values are displayed here, sorted in alphabetical order. You can scroll through this list in steps or blocks using the navigation arrows on the right-hand side. Tapping on a channel content displays the channel name and content full-screen on the display. You can return to the list view using "Back".

## Information

Tap . The device hardware and software versions, and serial numbers for example, are then shown.

Info	
Device type	Expert Vibro
Software version	247-rc1-14617
Hardware version	1.30
Serial number	2b05010a
Clock synchronized	false

## 4.4 Configuration via an Internet browser

The Web configuration is performed by entering the IP address (or the DNS name for networks) in the browser's address bar. Any current browser can be used. Cookies are not required for the functions and JavaScript is used only for date and time settings.



### Info

To return to the main page either click the **Back** button on your browser or click **Back** right at the bottom of the respective window.

Settings via the Web interface are made in the following four sections: [Con-figuration](#), [Service](#) and [System](#). To display current status of the NTP or PTP client click on the respective link, see "[NTP/PTP status](#)" on page 33. Most of the settings made through the Web interface can also be made via the DataService Configurator.

Example: Internet browser display for a device with name "**Expert Vibro-SN12345678**" and IP address 192.168.251.252.



Firmware: **MetiOS R254-a2, Build 16760** (ExpertVibro-MetiOS-r254-a2-build16760-150531.tarbz2)  
 Serial N°: **43050110**  
 Current time: Thu, 2016-05-02 11:41:45 UTC  
**NTP status:** ✔ synchronised to UHF radio at stratum 5  
**PTP status:** ⚠ Service not running  
 Server status: ✔ is running.  
 Last boot: Tue, 2016-05-31 14:04:21 UTC, Reason: PowerON  
 Uptime system: 1 days 21 h 37 m 38 s  
 LAN status: Speed: 1000Mb/s, Duplex: Full, Link detected: yes;

---

Configuration	<a href="#">Show configuration table</a>	<input type="button" value="Channel default configuration"/>
	<a href="#">Live channel values</a>	<input type="button" value="Factory default configuration"/>

---

Service	<a href="#">System report</a>	<a href="#">PuTTY</a>
		<a href="#">PROFIBUS GSD file (6bitmaps)</a>
	<a href="#">Browser information</a>	<a href="#">XML template network config file</a>
	<a href="#">Hardware test certificate</a>	<a href="#">USB Networking driver (Windows XP and later)</a>
		<a href="#">USB Networking driver (Windows 7 and later)</a>

---

	<a href="#">Update firmware MetiOS</a>	<a href="#">MetiOS changelog</a>
System	<input type="button" value="Reboot"/>	<input type="button" value="Recalibrate touch screen"/>
	<input type="button" value="Restart server"/>	

[Home](#)  
 Delphin Technology AG | @Lustheide 81, 51427 Bergisch Gladbach, Germany | [☎ +49 \(0\) 2204 97985-0](tel:+49(0)220497985-0) | [✉ info@delphin.de](mailto:info@delphin.de) | <http://www.delphin.de>

## 4.4.1 Settings

You can make network and time zone settings in this area. You can obtain NTP status or PTP status information by clicking **NTP status** or **PTP status** above this section.



## 4.4.1.1 NTP/PTP status

This window displays detailed information about the NTP and PTP status, for example regarding server IP, signal delay and jitter (variations). The information is for users who are familiar with the protocols involved and who wish to identify errors in timestamp transfers or time server responses.



Synchronisation requires up to 5 minutes to adjust to the time server time after the device has been switched on. The **NTP status** or **PTP status** will display invalid values during this period, for example the message 'Synchronised to unspecified at stratum 13' on the NTP.

The following is an example of the NTP status (only the beginning is shown):

### Time sync status

R241 (Build 11428)

Current time: Wed, 2014-07-30 17:22:08 CEST (UTC+0200)

#### PTP status

Service not running

#### NTP status

synchronised to NTP server (192.168.100.2) at stratum 3  
time correct to within 64 ms  
polling server every 1024 s

#### NTP peers

remote	refid	st	t	when	poll	reach	delay	offset	jitter
*192.168.100.2	192.53.103.108	2	u	153	1024	377	0.368	-13.188	7.541

ind	assid	status	conf	reach	auth	condition	last_event	cnt
1	4274	965a	yes	yes	none	sys.peer	sys_peer	5

#### • Status of NTP peer 4274

```

associd=4274 status=965a conf, reach, sel_sys.peer, 5 events, sys_peer,
srcadr=192.168.100.2, srcport=123, dstadr=192.168.100.28, dstport=123,
leap=00, stratum=2, precision=-10, rootdelay=58.517, rootdisp=111.984,
refid=192.53.103.108,
refTime=d7838825.99b49a4 Wed, Jul 30 2014 17:05:09.600,
rec=d7838b88.6c254309 Wed, Jul 30 2014 17:19:36.422, reach=377,
unreach=0, hmode=3, pmode=4, hpoll=10, ppoll=10, headway=0, flash=00 ok,
keyid=0, offset=-13.188, delay=0.368, dispersion=18.382, jitter=7.541,
xleave=0.184,
filtdelay= 1.42 0.37 0.72 0.76 0.38 0.90 1.02 0.26,
filtoffset=-2.06 -13.19 -11.21 -10.80 -4.14 -4.14 -5.60 -6.62,
filtdisp= 0.98 16.90 32.33 40.04 47.95 55.78 63.52 71.62

```

## 4.4.2 Configuration

In this area you can:

- **Show configuration table** displays the current channel settings.
- You can view current values for individual channels (tracks) using **Live channel values**.


- Use **Channel default configuration** to reset all channel settings to factory settings. System channels and network settings are maintained.
- Use **Factory default configuration** to reset everything to factory settings, including the system channels and network settings. This then corresponds to the device's condition with the firmware at the time of delivery.

#### 4.4.2.1 Channels overview (Show configuration table)

This window shows, in tabular form, the configurations of all the channels of the device. Each column contains detailed information such as channel name, type of module, physical unit, measurement range, or whether an invalid channel configuration exists, etc. The object ID in the penultimate column enables you to display the channel configuration as an XML file (potentially important for support purposes).

The data can be displayed only. Changing settings is not possible. To change configurations, use the DataService Configurator program.

The following figure shows a channels overview example (extract):

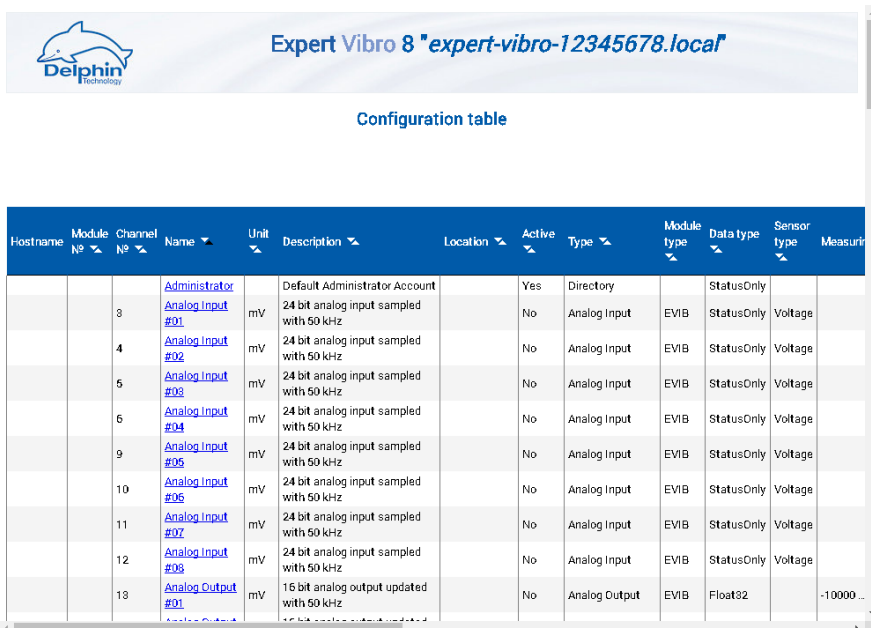

The screenshot shows a software window titled "Expert Vibro 8 'expert-vibro-12345678.local'". Inside the window, there is a "Configuration table" header above a table with the following columns: Hostname, Module No, Channel No, Name, Unit, Description, Location, Active, Type, Module type, Data type, Sensor type, and Measurement range. The table lists 13 channels, including an Administrator account and several analog input and output channels.

Hostname	Module No	Channel No	Name	Unit	Description	Location	Active	Type	Module type	Data type	Sensor type	Measurement range
			Administrator		Default Administrator Account		Yes	Directory		StatusOnly		
	3		Analog Input #01	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	4		Analog Input #02	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	5		Analog Input #03	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	6		Analog Input #04	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	9		Analog Input #05	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	10		Analog Input #06	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	11		Analog Input #07	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	12		Analog Input #08	mV	24 bit analog input sampled with 50 kHz		No	Analog Input	EVIB	StatusOnly	Voltage	
	13		Analog Output #01	mV	16 bit analog output updated with 50 kHz		No	Analog Output	EVIB	Float32		-1.0000 ...

#### 4.4.2.2 View current values (live channel values)

This allows you to display current values of all or a selection of channels (tracks). In the **Filter** area you can select the signals or values to be

displayed. Change the sorting (ascending/descending) by clicking any column header.

The following figure shows an example (extract):


Expert Vibro \*expert-vibro-12345678.local\*

Channel List

Filter	Name	Value	date/time	State	Description
<input checked="" type="checkbox"/>	Core RAM Voltage	0.970459 V	2015-05-02 10:07:55		Voltage of the Core RAM
<input checked="" type="checkbox"/>	Core Voltage	0.967529 V	2015-05-02 10:07:30		Voltage of the CPU Core
<input checked="" type="checkbox"/>	CPU load	4.9049 %	2015-05-02 10:08:37		Average load of the main CPU
<input checked="" type="checkbox"/>	CPU Temperature	80.7147 °C	2015-05-02 10:08:36		Temperature of the CPU
<input checked="" type="checkbox"/>	Display Line 1	Expert Vibro	2015-05-02 09:20:39		Display line 1
<input checked="" type="checkbox"/>	DSP load	0.1 %	2015-05-02 09:59:26		Average load of the digital signal processor
<input checked="" type="checkbox"/>	Memory	307 MiB	2015-05-02 09:20:39		storage groups, shows free space in megabytes
<input checked="" type="checkbox"/>	RAM available	908.246 MiB	2015-05-02 10:06:37		Available working memory
<input checked="" type="checkbox"/>	RAM used	104.391 MiB	2015-05-02 10:06:37		Used working memory
<input checked="" type="checkbox"/>	Bam Voltage	1.33987 V	2015-05-02 10:08:36		Voltage of the DDR SDRAM

[Home](#)  
Delphin Technology AG | #Lusthewde 81, 51427 Bergisch Gladbach, Germany | ☎ +49 (0) 2204 97685-0 | ✉ info@delphin.de | http://www.delphin.de

### 4.4.2.3 Resetting configuration



Resetting the configuration to the factory setting can only be done through the Web interface.



**Resetting to factory setting cannot be undone.**

By clicking **Channel default configuration** all channel settings are reset to factory settings. All the channels you created will be deleted.

By clicking **Factory default configuration**, all channels and all settings are reset to factory settings, including the system channels and network settings. All the channels you created will be deleted. This then corresponds to the device's condition with the firmware at the time of delivery.

The process is displayed in a window:

## Default configuration

R251 (Build 15244)

### Creating default channel configuration...

```
Shutting down FROG: Shutting down PoND:
Creating default configuration... OK
Starting PoND:
Starting FROG:
```

The process ends when **Home** is displayed in the window's footer.



**After resetting to factory settings all channels are then disabled and you will need to enable them again.**

### 4.4.3 Service


In this area you can:

- Generation of a "[System report](#)" on the facing page.  
The file is required only by **Delphin** service and support in the event that the device malfunctions.
- Display information about your browser, the settings used and the (server) settings of the device via [Browser information](#). You can also use this dialogue to test the speed of the data transfer.
- Download [Hardware test certificate](#) that documents the results of the hardware test. The test is carried out after the hardware has been manufactured.
- Downloading the PuTTY terminal program ([PuTTY](#)) button.
- The [PROFIBUS GSD file](#) displays the "[PROFIBUS GSD file](#)" on the facing page for integrating the **Expert Vibro**- device into a PROFIBUS network (clicking) or saves it to a PC (context menu, **Save target as**). You can also download bitmaps from the device using this dialogue.  
Bitmaps are used for the graphical representation of the device in the user's PROFIBUS configuration program.
- Copy an [XML network configuration template](#) to the PC.  
This way, you can set a device's network settings to appropriate values without having to connect to the device. Specify the new settings in the file and transfer the file to a device using a USB memory stick
- Using "[USB network driver](#)" on page 38, download a driver for the USB interface for your PC operating system, which enables communication such as via Ethernet (but not at the same speed).

### 4.4.3.1 System report

Provides a detailed overview of the system for fault diagnosis by **Delphin** Support. Send the file to the Support team. The system report can be generated only through the Web interface.

After clicking **System report**, the device requires approximately 15 seconds to acquire all the information and record it to a ZIP file. Depending on your browser settings, the following dialog for example is then displayed to select the file save location. The file name is made up of the current date and time and the network identifier of the device.

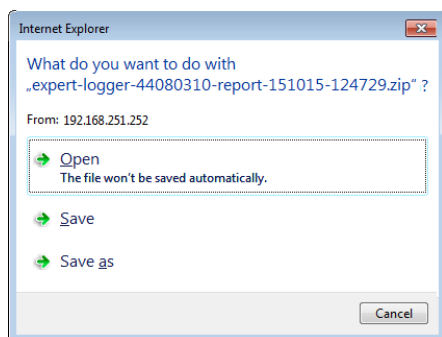

### 4.4.3.2 PROFIBUS GSD file

The PROFIBUS GSD file is required to configure the device in the PROFIBUS configuration software of the PROFIBUS Master.

Click **PROFIBUS GSD file** to display the GSD file in your browser. Right click and select **Save as** from the context menu to save the file and to enable it to be copied to a PC with your PROFIBUS configuration program.

The saved bitmaps optional for correct graphical representation of the device in the PROFIBUS configuration program.



Download the GSD file via the Web interface or copy it from the /firmware directory of the installation CD.

The following is an example of a GSD file (only the beginning is shown):

```

;=====
; GSD file for Delphin Technology MetIOS Devices
; ProfiMessage / LogMessage / Expert
; Copyright (C) Delphin Technology AG 2015
; Author: ischenk S
; $Date: 2015-05-27 10:08:02 +0200 (Mi, 27. Mai 2015) $
; $Revision: 14307 $
; $Id: DELP09b8.gsd 14307 2015-05-27 08:08:02Z ischenk S
;
;=====
#Profibus_DP
;=====
; General DP Key Words
;=====
GSD_Revision      = 5
Vendor_Name       = "Delphin Technology AG"
Model_Name        = "MetIOS Device"
Revision          = "$Rev: 14307 $"
;Revision_number  = 1
Ident_Number=0x09b8
Info_Text         = "ProfiMessage / Expert DPV0/DPV1/Redundancy $Id: DELP09b8.gsd 14307 2015-05-27 08:08:02Z ischenk S"
Protocol_Ident   = 0                ; Profibus-DP
Station_Type     = 0                ; DP-slave
FMS_supp        = 0
Hardware_Release = "1.3.x"
Software_Release = "2.x.x"
Implementation_Type = "VFC3+"
Bitmap_Device="DelpPM_n"
Bitmap_Diag="DelpPM_d"
Bitmap_SF="DelpPM_n"

```

### 4.4.3.3 XML network configuration template

The XML template allows you to set the network configuration for a device, without the device having to be connected to a PC. This is particularly helpful if you have multiple devices to configure, as you can then modify the file for each device and save it to a USB memory stick. When the USB memory stick is connected to a device, this file is read and the device obtains the settings from the file.

#### Method

1. Save the file to your PC (right click on the link).
2. Open the file using an editor.
3. Change entries `DefaultGateway='192.168.0.254'`, `IPV4_Address='192.168.0.1'` and `IPV4_NetMask='255.255.255.0'` to your required values or change `DHCP_active='false'` to `DHCP_active='true'`.
4. Save the amended file to a USB memory stick.
5. Plug the USB memory stick in to the device.
6. Switch on the device.

### 4.4.3.4 USB network driver

When connecting the device to a computer via the USB interface, the required driver is automatically installed.

#### Connecting to the device

Enter the IP address of the device in DataService Configurator. If you are not sure about the address:

1. Open the Network and Sharing Center of your PC via Control Panel.
2. Click *Change adapter settings*.

3. Double-click the entry "Remote NDIS Compatible Device" or "Ethernet over USB for Expert Devices" (the designation depends on the operating system).
4. Click **Details** in the next dialogue.
5. You will find the address under the entry **IPv4-DHCP Server**, for example, **192.168.7.2**.

## Using device search

With a standard "USB Device", the device search of the Configurator can be used to find the device.



### Please note:

If several devices are connected to a computer via USB, the IP addresses of the USB interfaces must be adapted, as otherwise an address conflict occurs. The default IP address of "USB Device" is 192.168.7.2.

Refer also to "USB device" on page 259.

## 4.4.4 System

In this area you can:

- Firmware updating using **Update firmware** **MetiOS** (updating of the software within the device).  
See [Update firmware](#).
- Displaying of the changes to the current firmware compared to the previous version using **MetiOS** **Changelog**.  
Adobe Acrobat Reader is required. The Acrobat Reader can be downloaded (free) from the [Adobe](#) website.  
See [Updating firmware](#).
- Restarting the device using **Reboot**.  
This has the effect of switching the device off and on.  
See [Rebooting the device](#).
- **Restart server** restarts the software only for data acquisition and storage or transmission.  
See [Restart server](#).  
This is faster than a reboot (full restart) of the device.
- Recalibrate touch screen  
Calls a dialogue where you must tap the points displayed in the four corners of the screen. This improves and/or restores the accuracy of tapping text or graphics on the screen.

#### 4.4.4.1 Update firmware




Firmware update can be performed only via the Web interface.

A firmware update is provided with every software update. Please carry out both updates to ensure software and hardware are being used with their latest versions. Errors may otherwise occur in data acquisition or configuration. The device's current firmware version is also displayed in this window.




**The device's power supply must not be interrupted during the firmware update, or damage may occur to the equipment that will require repair.**

Enter the file with the new firmware in the **New firmware file** input field (click **Browse** to locate the file on your PC) and then click **Start firmware update**. The firmware upgrade takes approximately 2 to 3 minutes.


Expert Vibro 8 "expert-vibro-12345678.local"

Update firmware MetiOS and reboot



Do not switch off power or reboot while updating firmware.  
The device may become unusable and has to be repaired at factory!

Current Firmware: **MetiOS R254-a2, Build 16760** (ExpertVibro-MetiOS-r254-a2-build16760-160931.tar.bz2)

New Firmware file:  No file chosen

[Home](#)  
 Delphin Technology AG | # Luthstraße 81, 51427 Dreigiech Gladbach, Germany | ☎ +49 (0) 2204 97665-0 | ☎ +49 (0) 2204 97665-85 | [info@delphin.de](mailto:info@delphin.de) | <http://www.delphin.de>

#### 4.4.4.2 Firmware changelog

Click **Firmware changelog** to display a PDF file containing information on how the current firmware differs from previous versions. Adobe Acrobat



Reader is required. The Acrobat Reader can be downloaded cost-free from the [Adobe](#) website.

Example of a firmware changelog:

<p>Delphin Technology AG Lustheide 81 D - 51427 Bergisch Gladbach Tel: +49 (0) 2204 97685-0 Fax: +49 (0) 2204 97685-85 <a href="http://www.delphin.de/">http://www.delphin.de/</a></p>	<p><b>Changelog MetiOS</b> Firmware <b>Message &amp; Expert Series</b></p>	
--	--	---

- **General notes**
  - Termini used in this document:
    - “**Expert**” means **Expert Logger x00**, **Expert Vibro**, and **Expert Transient**
    - “**Message**” means **ProfilMessage**, **LogMessage x000**
  - ⚠ **Message:** When updating from versions  $\leq$  **R234** to  $\geq$  **R236** an intermediate update to **R235** or the installation of “**Message-UpdaterPatch-r232.tar.bz2**” has to be done
  - **Expert Vibro:** When updating from versions  $\leq$  **R242-beta5** the device has to be set to the default channel configuration (all channel configuration will be lost!):  
Web browser → [Default channel configuration](#)
  - Any device: When downgrading from  $\geq$  **R247** to any earlier version a pre-R247 configuration should be loaded.  
Besides that: A downgrade of the firmware is *not recommended* at any time.
- R251-rc8 (Build 15xxx) – xx. October 2015
  - New:**
    - Support for **Expert Logger 300**
    - Applying factory settings shows new default IP address on web page.
    - Reference junctions of thermocouples can be in different temperature scales as the thermocouples (e.g. Thermocouple in “°F” and reference junction in “R”)
    - **Expert**

### 4.4.4.3 Device restart (reboot)

Restarts the device. The process takes approximately 2 minutes. After this time, click **Back**. The power LED (System LED) on the device indicates when the device is ready.

This has the same effect as switching the device off and on.

### 4.4.4.4 Restart measurement data acquisition (restart server)

Clicking **Restart server** restarts the main program (application), which acquires and processes measurement data. This is faster than a [Reboot](#) (full restart) of the device.



**During the restart, data is neither acquired nor stored. The network connection to the device is interrupted and re-established following the restart.**



A restart can be performed only via the Web interface.

The process is displayed in a window:

```

Restart

R251-15244

Application is restarting now...

Shutting down FROG: Shutting down PoND:
Starting PoND:
Starting FROG:

OK
  
```

The process ends when 'OK' is displayed in the window.

## 4.5 Connecting slave devices

Slave devices can only be connected with **ProfiMessage** devices. The **ProfiMessage** system uses CAN-bus and Delphin CAN Protocol **Delphin** (DCP) to connect to I/O modules. A **ProfiMessage** device can be fitted with two I/O modules. The CAN-connection is established internally.

The DCP CAN bus for I/O extensions uses the "Ext. BUS" port. If a **ProfiMessage** device has an insufficient number or type of input channels, a slave device can then be connected to the **ProfiMessage** device via this port. (Refer to [Device connections](#)).

### Connecting the extension bus

Use twisted pair shielded cable (e.g. braided LiYCY 2x0.14 mm<sup>2</sup> TP). Ensure that the start and end connections (i.e. at the master and at the final slave device) use the supplied 120-ohm resistors. These produce the bus signal level and prevent interference from signal reflection. The Hi (CAN High) designated ports must be connected to other devices via Hi, and Lo (CAN Low) with Lo.

### Illustration in DataService Configurator


The **Channels** tab lists the modules currently connected according to the type of view selected ( [hardware view](#) or [user-defined](#) ) in the group "Extension (CAN) bus" group or as I/O modules from the (master) device.

Extension-Bus	0x26090880 5B621380	
DCP	0x26090880 3F2EBBB3	Ok
E/A Modul 1: ADVT 'Module ADVT'	0x26090880 24D2CD9C	Ok
E/A Modul 2: IOIT 'Module IOIT'	0x26090880 4046825E	Ok
E/A Modul 3: ADIT 'Module ADIT'	0x26090880 13DB6355	Ok
E/A Modul 4: ADGT 'Module AD...	0x26090880 306FEC32	Ok

I/O module configuration is explained in [Configuring module channels](#).

## Configuring the extension bus

The extension bus protocol cannot be changed and is set to **DCP** (DelphinCAN Protocol).

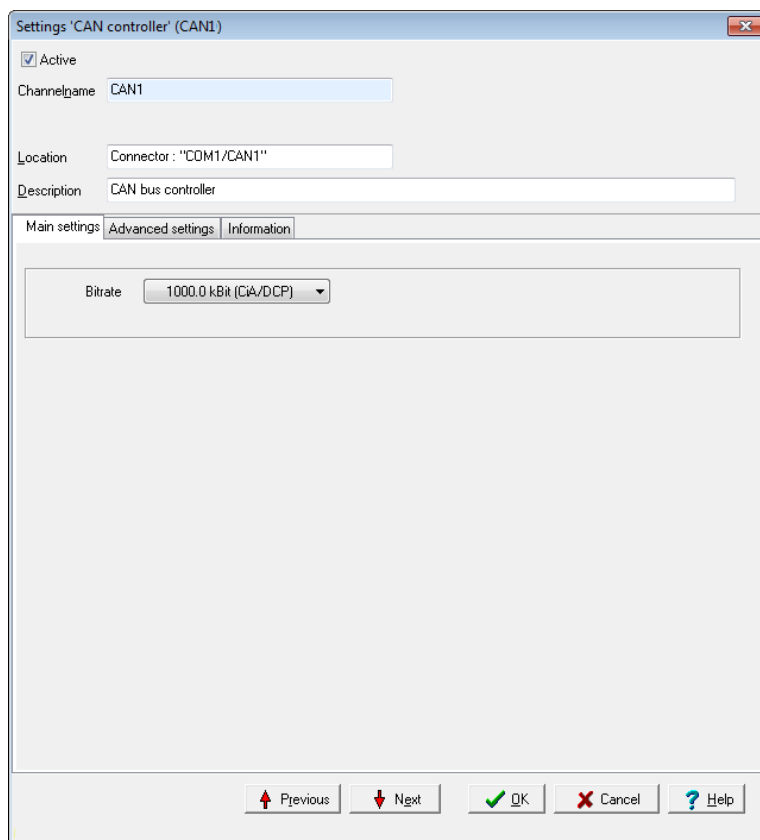

### Baud rate

The baud rate states the number of characters transferred per second via the interface. Selection depends on the properties of the connected devices and the cable length between the devices: For longer lines, a lower baud rate should be selected to achieve error-free communication.


The following rates can serve as a guide:

- from 15 m: 1000 kbaud (standard setting)
- up to 30 m: 500 kbaud
- up to 45 m: 333.3 kbaud
- up to 60 m: 250 kbaud
- up to 150m: 100 kbaud

## 4.6 Configuring the Expert Vibro device via the DataService Configurator

The next level in the *user-defined view* (top image) displays the software channels, the System monitoring, the I/O channels, the interfaces and the memory. DataService Configurator In the *hardware view* (bottom image), after the software channels, the System monitoring, the different interfaces, the I/O channels, the memory and the USB interfaces are displayed. In the *hardware view* (bottom image), after the software channels, the system monitoring, the different interfaces, the I/O channels, the memory, and the USB interfaces are displayed.

### User -defined view

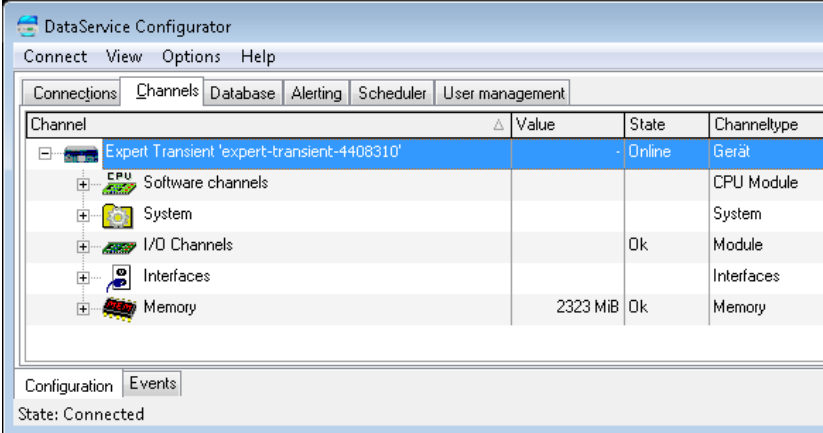


The screenshot shows the DataService Configurator application window. The 'Channels' tab is active, displaying a tree view of system components. A table at the bottom of the window provides a summary of the channels and their status.

Channel	Value	State	Channeltype
Expert Transient 'expert-transient-4408310'		Online	Gerät
CPU Software channels			CPU Module
System			System
I/O Channels		Ok	Module
Interfaces			Interfaces
Memory	2323 MiB	Ok	Memory

At the bottom of the window, the 'Configuration' and 'Events' tabs are visible, and the status is shown as 'State: Connected'.

### Hardware view

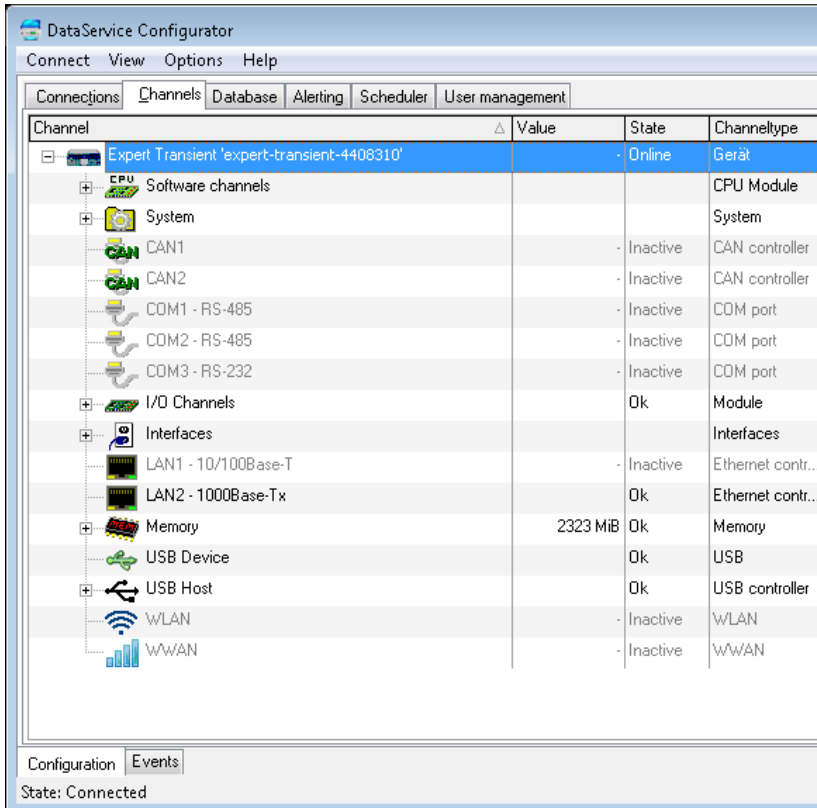

Channel	Value	State	Channeltype
Expert Transient 'expert-transient-4408310'		Online	Gerät
Software channels			CPU Module
System			System
CAN1		Inactive	CAN controller
CAN2		Inactive	CAN controller
COM1 - RS-485		Inactive	COM port
COM2 - RS-485		Inactive	COM port
COM3 - RS-232		Inactive	COM port
I/O Channels		Ok	Module
Interfaces			Interfaces
LAN1 - 10/100Base-T		Inactive	Ethernet contr...
LAN2 - 1000Base-Tx		Ok	Ethernet contr...
Memory	2323 MiB	Ok	Memory
USB Device		Ok	USB
USB Host		Ok	USB controller
WLAN		Inactive	WLAN
WWAN		Inactive	WWAN

Configuration | Events

State: Connected

This Section explains the settings that you can make for the device itself. In the example image, this takes place via **Expert Vibro-SN41080240...** in the *Channels* tab at the right of DataService Configurator.

Use the **Properties** context menu to amend a device name and ID or to enter a description for the device. Use **Main settings** context menu to change network and NTP settings.

Refer to [Configuring main device](#), [Network settings](#), [NTP](#)

For explanations of other settings, see:

- [Configuring software channels](#) Section for system monitoring and calculations,
- [Configuring channels \(sensors\)](#) Section for the I/O channels,
- [Configuring interfaces](#) Section for the CAN, COM and PROFIBUS interfaces,
- [Memory](#) Section for the internal memory.




## Info

For general information on configuration dialogs (including header and footer), see [Settings for all dialogs](#).

## 4.7 Settings for all dialogues

A configuration dialogue for the relevant item (channel) opens after double-clicking one of the channels, an interface or another item in the channel list. Different tabs are displayed depending on the channel type. The listings in the tabs also depend on the channel type. Many of the settings are the same for all dialogues, especially in the upper and lower sections, and are hence explained here in general terms.

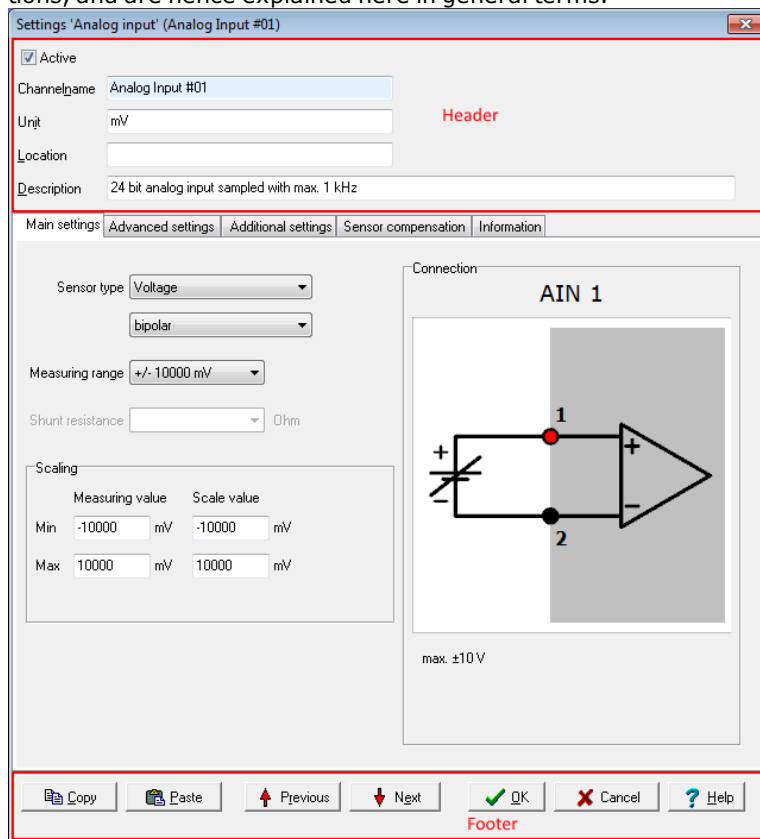

Settings 'Analog input' (Analog Input #01)

Active

Channelname: Analog Input #01

Unit: mV

Location:

Description: 24 bit analog input sampled with max. 1 kHz

Header

Main settings | Advanced settings | Additional settings | Sensor compensation | Information

Sensor type: Voltage

bipolar

Measuring range: +/- 10000 mV

Shunt resistance: 0hm

Scaling

	Measuring value	Scale value
Min	-10000 mV	-10000 mV
Max	10000 mV	10000 mV

Connection

AIN 1

max. ±10 V

Footer

Copy | Paste | Previous | Next | OK | Cancel | Help

## Upper section

Active

Channel name: Analog Input #01

Unit: mV

Location:

Description: 24 bit analog input sampled with max. 1 kHz

**Active:** Enables or disables the channel.

**Channel name:** Enter a meaningful and unique name to identify the channel.

**Unit:** Enter the unit of measurement.



### Info

The unit for memory groups should be left as % (default). Occupied storage space is always shown as a percentage.

**Location:** Information on the position of the sensor or signal source can be entered here.

**Description:** A description or comment can be entered here. After creating a function (software channel), a description of the function appears here (in English).

## Lower section

Last change: 19.10.2015 11:11:19,961

**Copy** copies the settings shown, which you can then adopt in another channel by *inserting*.

**Previous** or **Next**: Changes to the configuration dialogue of the previous or next channel in the channel view. The dialogue's current settings are applied before the dialogue changes (the equivalent of clicking on **OK**).

**OK**: Applies all the settings and closes the dialogue.

**Cancel**: Cancels the configuration and closes the dialogue. The settings are ignored and no changes are made within the device.

**Help**: Opens online help. The relevant topic is displayed where available.

The date and time display of the last setting change for the channel is displayed in the lower left corner (15.6.2015 in the example).


## Tabs in the dialogue's main section

Depending on the type of channel, different tabs are available. Not all the tabs are available for every channel type. The following (general) tabs are explained in this section as they are very similar for different devices.

- [Additional settings](#)
- [Sensor compensation](#)
- [Information](#)

The **Main settings** tab is always specific to the channel. It can hence be found under the relevant device- and channel type. There are also other tabs that relate to specific channels, e.g., **Extended settings** or **Filter** and are, therefore, described under these channels.

### 4.7.1 Additional settings tab

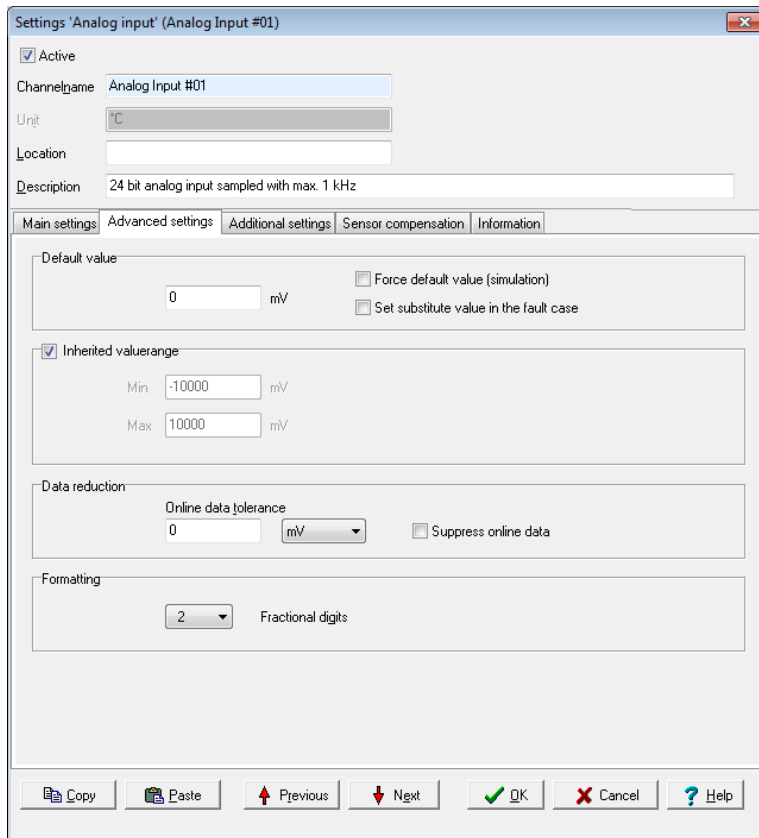

The screenshot shows a software window titled "Settings: Analog input (Analog Input #01)". The window contains several input fields and checkboxes. The "Additional settings" tab is selected, showing options for "Default value", "Inherited valuerange", "Data reduction", and "Formatting".

**Settings: Analog input (Analog Input #01)**

Active

Channelname: Analog Input #01

Unit: °C

Location:

Description: 24 bit analog input sampled with max. 1 kHz

Main settings | Advanced settings | **Additional settings** | Sensor compensation | Information

Default value

0 mV  Force default value (simulation)  
 Set substitute value in the fault case

Inherited valuerange

Min: -10000 mV  
Max: 10000 mV

Data reduction

Online data tolerance: 0 mV  Suppress online data

Formatting

2 Fractional digits

Copy Paste Previous Next OK Cancel Help



**Replacement value:** This is used in the event of an input or output failure (refer also to [Status monitoring](#)). The settings depend on channel type. For example, digital inputs only have the options Off and On.

**Force substitute value (simulation):** Sets the channel's output value to the given substitute value. This setting is useful during installation to simulate certain conditions or activate system responses.

Do not forget to disable the option for normal operation!

**Inherited validity range** (not available for all channel types): Enter the valid range in which measurement values are valid.

Depending on the channel type, the validity range can be optionally inherited. If the validity range can be inherited, the validity will be adopted, depending on the channel type, either from scaling (see [Main settings](#) tab) or the data source of the channel.

The validity range is also used for displaying percentage trend, the percentage data reduction and for displaying certain visual elements.

**Data reduction** (not available for all channel types): A signal is fed through the channel input, processed within the channel and then released at the channel output. The tolerance specifies the extent of change a signal must undergo following processing before being output via the interface. In the example, the processed input value is output only when it differs by more than 0.1 mA from the preceding value. The **Data reduction** function reduces the data rate on the interface and thus assists the PC in the further processing. The internal processing of measurement values is not affected by this.

The tolerance value can be expressed as an absolute measurement unit or as a relative value in relation to the **validity range**. Some channel types do not have a validity range and, therefore, you can only give the tolerance value as an absolute measurement unit of the channel.

**Formatting** (not available for all channel types): Here the resolution for the channel's values can be set.

**Persistence** (not available for all channel types): The currently valid output value (refer to data reduction) is stored to a non-volatile memory. The channel uses this value following a restart or power outage. This function is particularly important for outputs in order to establish a defined state following power outage.

## 4.7.2 Sensor compensation tab

In this tab you can specify corrections for sensors or analogue outputs. Conversion takes place **according** to scaling settings in the *Main settings* tab for the signal delivered by the sensor.

Settings 'Analog input' (Analog Input #01)

Active

Channelname: Analog Input #01

Unit: °C

Location:

Description: 24 bit analog input sampled with max. 1 kHz

Main settings | Advanced settings | Additional settings | Sensor compensation | Information

Active

Mode:  
Offset and Gradient (2 calibrationpoints)

Calibration points

	Correct value (°C)	Measured value (°C)
1.	0	1,5
2.	100	102,09

Import

Export

Copy Paste Previous Next OK Cancel Help

**Active:** Enables sensor compensation.

### **Mode:** There is a choice of modes

- **Offset**  
An offset shifts the curve by a fixed value, for example the given value is added to the measurement value.
- **Offset and slope**  
Allows a shifting of the curve and an increase in its slope.
- **Quadratic**  
Generates a quadratic curve through the given points to linearise the measured values.
- **Linear interpolation**  
Set a table for converting measured values into display values. Linear interpolation takes place between the given points.

- **Spline interpolation**  
An optimal fitting polynomial 3rd degree (cubic spline) is determined using spline interpolation for the given values which is then used to convert the measured values.



## Info

You can use copy and paste to transfer data from an Excel table into the dialog table. Position the cursor in the table's top left field of the first row. Extra rows are created automatically when this is permitted by the selected mode.

Click on a row and use the **Del** key to delete unwanted rows. Insert extra rows in a linear interpolation using the **Return** key.

A created table can be exported and then re-imported later: **Export** and **Import**.

### 4.7.3 Information tab

Settings 'Analog input' (Analog Input #01) ✖

Active  
 Channelname:   
 Unit:   
 Location:   
 Description:

Main settings | Advanced settings | Additional settings | Sensor compensation | Information

ChannelID:

Dependent channels
 


1	DiffTemp (0x2C08030A7138AA8E)
2	Storage Group (0x2C08030A80F4C298)

The tab shows you the channels dependent on a channel or an event.

#### 4.7.4 Basic channel selection

Many dialogues require a channel to be selected as a source or a target. A basic or [advanced channel selection](#) is thus available.

The basic channel selection is accessed directly from the configuration dialogue. All configured channels are listed by clicking the arrow on the drop-down list:

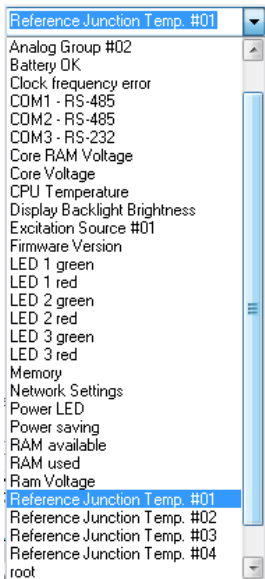


Click the required channel.

If the channel name is known, it can be input from the keyboard. The list is filtered down while letters are keyed in, which makes selection easier.


#### 4.7.5 Advanced channel selection

This method of display and selection is more convenient for a large number of configured channels because the advanced filtering function enables only specific channels to be searched and displayed.



Open the dialogue box by clicking on  (the symbol is shown next to the entry field). The channels are displayed by name, description and channel ID.

Enter a filter criterion in the *Advanced search* field. The relevant selection then appears in the upper section of the dialogue. Selected the required channel and click **OK**.

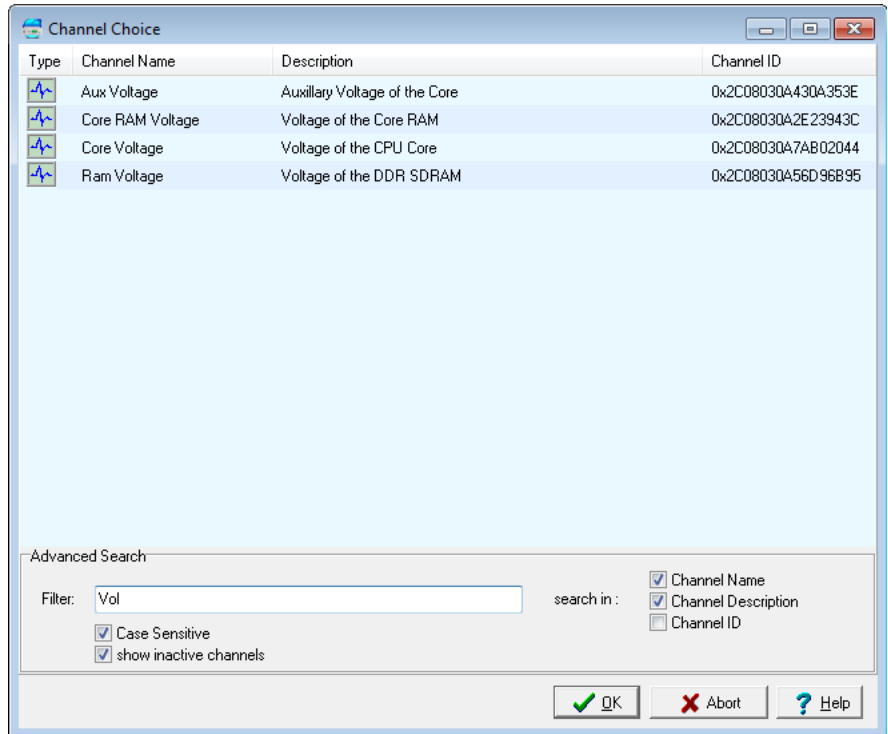

#### 4.7.6 Trigger options

Many dialogues have input fields with options for different trigger functions according to edge or level states. The following options and combinations are available:

Edge and level	Level	Edge (full)	Edge (basic)	Every
<div style="border: 1px solid black; padding: 2px;">                     Rising edge ▾                      Rising edge                      Falling edge                      Edge (both)                      High level                      Low level                 </div>	<div style="border: 1px solid black; padding: 2px;">                     High level ▾                      High level                      Low level                 </div>	<div style="border: 1px solid black; padding: 2px;">                     Rising edge ▾                      Rising edge                      Falling edge                      Edge (both)                 </div>	<div style="border: 1px solid black; padding: 2px;">                     Rising edge ▾                      Rising edge                      Edge (both)                 </div>	<div style="border: 1px solid black; padding: 2px;">                     Every high ▾                      Rising edge                      Falling edge                      Edge (both)                      High level                      Low level                      Every high                      Every low                      Every value                 </div>

### Explanation of options

Setting	Description
Rising edge	The event is triggered when changing from "Low" to "High"
Falling edge	The event is triggered when changing from "High" to "Low"
Edge (both)	The event is triggered at every change
High level	The event is triggered when (and for as long as) the level is "High"
Low level	The event is triggered when (and for as long as) the level is "Low"
Every high	The event is triggered for each value larger than 0. The function is generally only recommended with digital signals.
Every low	The event is triggered for each value that is 0. The function is only recommended with digital signals.
Every value	The event is triggered as soon as there is a (new) value.

#### 4.7.7 Inherit status

This option sets whether the source's status as well as its value is to be used for the function. This can be used, for example, to prevent invalid input values in the calculation. Channel status values are available in [status monitoring](#).

An example of inheriting: The case of an analogue input exceeding a range is displayed in the software channel as a wire break.


## 4.8 Device Properties context menu

The device's context menu allows you access to various settings, which are valid for the device as a whole and therefore also for all channels:

- Set (device) [properties](#), for example, the device ID or location.
- Save and load [configurations](#) (you may use the configuration also in offline mode).
- Creating the network configuration

### 4.8.1 Configuring device properties

Open the configuration dialogue either by double clicking the device or by opening the dialogue via [Properties](#) from the context menu.

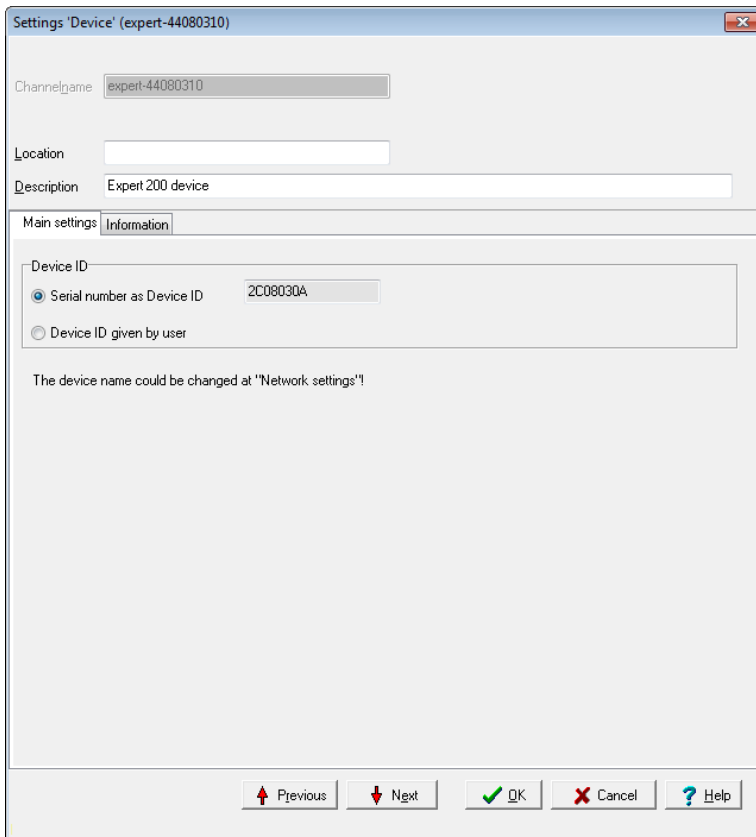

Settings: 'Device' (expert-44080310)

Channelname: expert-44080310

Location:

Description: Expert 200 device

Main settings: Information

Device ID

Serial number as Device ID: 2C08030A

Device ID given by user

The device name could be changed at "Network settings"!

Previous Next OK Cancel Help

This dialogue enables users to:

- Enter information about the device's **Location** and its function (**Description**). For example, enter the location of the device or of the object from which data is being acquired.
- Changing **device ID**.

## Device ID

The DataService uses device ID to uniquely identify a device and its channels. The factory setting for the device ID is its serial number.

The device ID is displayed as the main part of the **object ID** under the column with the same name in DataService. The column can be displayed via **View** → **Right panel** → **Visible channel sheet columns**.

The device ID requires amending when copying the configuration from one device to another and then running both devices together on the same DataService. Both devices would then have identical device IDs and the DataService would not be able to distinguish between them.

## Method

1. Open the **Device properties** dialogue.
2. Enable **User-defined device ID**.
3. Enter a new ID (e.g. the device's "old" serial number).

The device ID is in hexadecimal format. Valid inputs include numbers from 0 to 9 and letters from 'a-f' or 'A-F' (no distinction is made between upper case and lower case letters). If a sufficient number of characters is entered, preceding zeroes are removed. A valid input changes the input font from red to black.

After amending the device ID, the connection to the device is briefly interrupted before being restored again.

Refer also to [Settings for all dialogues](#)

## 4.8.2 Saving and loading device configurations

### Save configuration

Open the dialog via the device's context menu.

Enter the destination file in the file dialog. Thereafter you can enter a description of the configuration to be saved (comment). This will be displayed when you load the file.

### Load configuration

Open the dialog via the device's context menu.

Select the configuration file to be loaded. You may only load configurations you have generated using the **Save configuration** menu. Configuration files




which you have previously saved via the device's Web interface cannot be loaded via this menu. The description saved with the file will be shown and you will be shown the various options.



### Info

Not all options are available for every device.

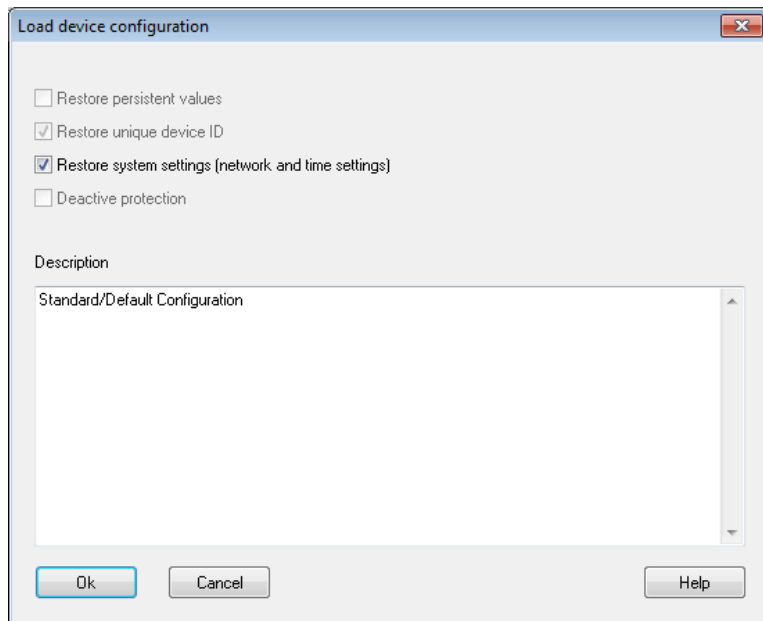

### Loading channels

All configuration file channels are loaded to the device. Any existing device channel configurations will be overwritten.

### Restoring persistent measurement values

The tracks marked as persistent are set to the value stored in the file. Refer to "[Additional settings tab](#)" on [page 48](#).

### Loading/restoring a unique device ID

The factory setting for the device ID is generally its serial number. This ensures that the device's channel ID is globally unique. Select this option to use an existing configuration in for example a replacement device,

without needing to adjust the channel assignment in other applications or trends. The option is selected automatically if the stored device ID corresponds to the current device ID. This option is not available if the configuration file device ID is already in use by one of the devices connected to the DataService Configurator.

Devices with the same device ID cannot be used together in the same DataService Configurator environment.

### Loading global tables

All global setpoint and linearisation tables contained in the configuration file will be loaded to the device. Any existing device tables will be overwritten.

### Loading system settings

All system settings (network settings, active user management, etc.) in the configuration file are loaded to the device.



**If user management is enabled, you must know the passwords (from the configuration file) at next login, otherwise you will no longer be able to connect to the device.**

### Keep current device IP address/mask/gateway

If this option is enabled, the standard network settings are not loaded. Otherwise it could happen that a network configuration is loaded to your device, that will render your device unreachable from your IP range, or the device could receive an IP address which is already allocated to another device, causing a network conflict.

### Disabling access protection during loading

Any access protection is disabled temporarily during the loading process, so that the setting in the file can be imported.

## 4.8.3 Creating the network configuration

This menu is used to create a network configuration. A network configuration allows you to change the network settings of a device without connecting to a PC. This is especially helpful if you want to configure multiple devices. You can modify the file for each device and save it to a USB memory stick. When the USB memory stick is connected to a device, this file is read and the device obtains the settings from the file.

### Method

1. Open the "Create network configuration" menu in DataService Configurator.
  - Open the channel overview in DataService Configurator.
  - Click a device with the right mouse button.
  - Select the menu item **Create network configuration** (only available for devices with **MetiOS**: devices of the **Expert** series as well as **ProfiMessage**).
2. Modify the corresponding input fields:
  - **Serial number**: Enter the serial number of the device on which you want to change the network settings.
  - Select the desired settings for DHCP, IP address, net mask, gateway and MTU.
3. Now select the storage location of the configuration with **Save as**.
4. Confirm the dialogue by pressing "OK".
5. Save the file to the main directory of a USB memory stick formatted with FAT16 or FAT32.
6. Plug the USB memory stick in to the device.
7. After a few seconds, the network configuration should have changed.



### Info

You can download an XML template for network configuration on the website of a device. To do this, click the "XML template network config file" link on the device website or visit the "<Device IP>/doc/Network-SN00000000.xml" link.

Also visit the [XML Template for Network Configuration](#) Help Centre.

## 4.9 System channels

This Section explains the settings for the System group. The settings for drives available only for expert devices can be found in "[Drives](#)" on page 67.

### 4.9.1 Time and clock settings

In this group, some channels are already set by default, which are relevant to the time and date settings:

- Battery OK (a [System Monitor](#) software channel setting)
- Clock frequency error, Stratum (synchronisation chain) or Sync (synchronisation available) are [Clock](#) software channel settings
- Time (zone) and clock (synchronisation) settings (the channel is also available as a copy in [Network settings](#))

### Synchronisation via NTP

The NPT time (Network Time Protocol) is a number that contains the number of seconds that have passed since midnight (00:00 h) on 1 January 1970, with a resolution greater than one microsecond. The NPT time refers to GMT (Greenwich Mean Time).

Further information is available from <http://www.meinberg.de> and <http://www.pool.ntp.org>.

Enter the IP address of one or more available NTP time servers to enable correct time settings for the device. The NTP time server can be any other network device such as a PC or other device. You can also specify several NTP servers and the device will choose the best time source automatically. The integrated Windows time server SNTP (Simple Network Time Protocol) is however not recommended due to it having insufficient information on synchronisation status. The device accepts NTP server times but only when this is synchronised to an Internet time server or to DCF77 or GPS and is able to provide information on the quality of synchronisation.

A suitable NTP server is located in the NTP subfolder on the installation CD.



NTP synchronisation requires up to five minutes to adjust to the NTP time server after the device has been switched on. The **NTP status** will be invalid during this period and will display the message 'Synchronised to unspecified at stratum 13'.

### Using GPS clock

Depending on the device, there are different ways for GPS-based synchronisation. You can activate GPS synchronisation in addition to NTP synchronisation and the device will choose the best time source automatically.

To connect a GPS source to COM3, such as Holux GR-213, select the **GPS antenna COM3** setting. The corresponding channel (**Device** → **Interfaces** → **COM3 RS-232**) must be switched off (disable **Active**) to enable reception.

Some devices have an integrated GPS receiver and only one antenna is required to receive the signal. Connect the antenna supplied to the GPS connection of the device and activate here **GPS antenna WWAN**.

Once the GPS receiver receives a valid satellite signal, after a short time NTP status will display 'Synchronised to UHF radio at stratum 1'.

### Use **Data Service/Local Clock**.

You can also enable direct synchronisation with a connected DataService without using a NTP server. Thus, the current time of the device's connected PC is used as a reference and the device begins to set itself to this time. This process may take more than an hour. Select the **DataService** setting. Only use this setting when no NTP server is available on your network. The time will be as accurate as that of the PC connected to the device.


### **Also synchronise large time differences**

This setting enables NTP server time setting, even where there is a large deviation between the current device time and the NTP time. This option is

helpful where the device was not registered on the network for a period of time and, for example, has the wrong date. Overall NTP allows a deviation of less than 1 ms to be reached.

## Incorrect time synchronisation

Example of absent or incorrect time synchronisation DataService Configurator:

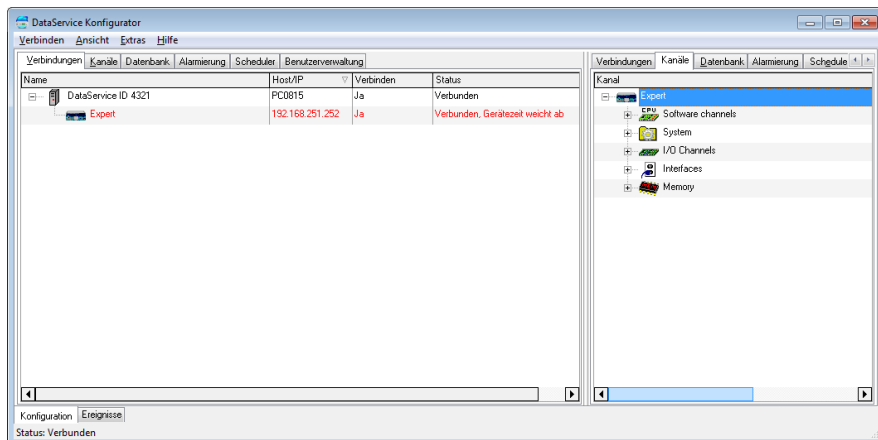

## Setting the time zone

In the *Time and Clock Settings* dialog, enter the device time zone. Otherwise, the unadjusted time (GMT) will be used.

For the UK, enter *GMT*. Alternatively, you can enter one of the entries for the UK, for example, *UK/London*. If you operate the device in a different time zone, you can also set the required time difference from GMT (Greenwich Mean Time) for that country, or a country within the same time zone, in this field.

Settings 'Time settings' (Time and Clock settings)

Active

Channelname: Time and Clock settings

Description: Time zone and clock synchronisation

Main settings | **Advanced settings** | Information

NTP

Client settings:

NTP Server 1: timeserver.company.com

NTP Server 2: ptbtime1.ptb.de

NTP Server 3:

GPS antenna COM3

GPS antenna WWAN

No real NTP sources with an limited accuracy, use these only if no other NTP source is available.

Data Service

Local clock

Synchronize large timing variations

Time zone:

Germany / Berlin

PTP

Interface: LAN2 Mode: Master / Slave

Copy Paste Previous Next OK Cancel Help



### Info

There is no automatic setting of daylight saving time (e.g., CET to CEST).

## Synchronisation via PTP

In addition, as an alternative to NTP (or GPS), you can use PTP (Precision Time Protocol). PTP time deviations are often less than with NTP, however you require either a PTP server on your network or an additional **Delphin** device. You can designate one device as **Master** and the other as **Slave**. If the master device additionally receives the exact time via NTP, all devices will use the most accurate (as possible) NTP time, but are synchronised (usually better) with each other via PTP.



**Only one device may be designated as Master.**

The **Delphin** device uses a software algorithm for PTP synchronisation.

## 4.9.2 Directory (User management)

With the User management, you can specify which users have access to your device. The users Administrator, Guest and root are preset and cannot be deleted. In additions, their modification options are limited.



### Important

You have to activate User management after configuration. See "[System Settings](#)" on page 89.

### Guest

The **Guest** user is used for anonymous connection. In order to enable anonymous connections, enable this user and here and also allow anonymous login in [System Settings](#). Set the **User Rights** to the required level.

### Administrator

The Administrator has the rights to update all device settings. The default password is SUPERVISOR.

### root

Has the same rights as the Administrator, but in addition has permission to log in to the operating system console. The default password is 'root'.



### Important

For security reasons, change the device's Administrator and root passwords once User management is enabled.

### Create new entry

You can create a new entry in the context menu **Create** → **User** in Directory.


First, specify the **User class**: **User** adds a new user, **Group** is helpful when several users are to log on with the same name, **Login data** creates an entry that you can use to log the device into a mail server, for example.

Then, specify the login name (*username*), the *user right* and the *password*. You must enter the password twice to prevent typing errors from occurring. Only once both entries are identical will the red background colour be removed. If you enable *Store password unencrypted*, the password is stored and transmitted unencrypted.

Enter the user's full name in *Real name*.

If you limit the *connection to localhost*, this user will be able to work only locally, that is, not via one of the interfaces. For example, use could be limited to display (not yet implemented at this time).

If required, you can also store up to three telephone numbers and three e-mail addresses per user. Click *Add* for additional input fields. Close the dialog with *OK*.

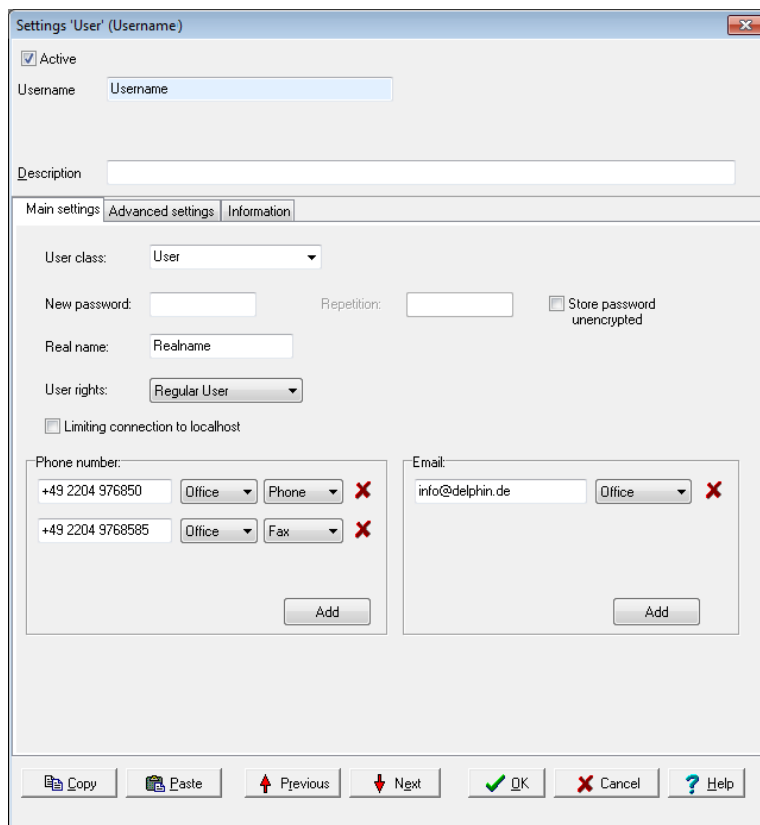

Settings: User (Username)

Active

Username:

Description:

Main settings | Advanced settings | Information

User class:

New password:  Repetition:   Store password unencrypted

Real name:

User rights:

Limiting connection to localhost

Phone number:

+49 2204 976850

+49 2204 976850

Add

Email:

info@delphin.de

Add

Copy Paste Previous Next OK Cancel Help

## Activate user



Only active users (**Active** at top of dialog enabled) can log in to the device.

## Delete user

Selected the user to be deleted and click on **Delete channel**. The three pre-set Administrator, Guest and root users cannot be deleted.

## Change user

Select the user to be changed. The current user details are shown in the dialog.

## User rights

Select one of the five user levels: **Monitor**, **Evaluator**, **Operator**, **Configurator** or an additional **Administrator**.

### Monitor

Members can, for example, display current measurement data in DataService Configurator.

### Evaluator

Members can analyse measurement data and evaluate reports.

### Operator

Members can operate elements and, for example, switch device outputs.

### Configurator

Members can create and configure **ProfiSignal** applications.

### Administrator

Members can manage users, set up password protection and make other administrative settings.

### Root

Has the same rights as the Administrator, but in addition has permission to log in to the operating system console.



## Enter a phone number


It is recommended to enter telephone numbers in international format according to E.123. This format indicates the country code with a '+' . Furthermore, the number can be separated by blanks to improve readability.

Example: +49 2204 976850

### 4.9.3 Display

See also [LED](#) for the display backlight brightness.

You can configure the display home view under **System** → **Display** and the **Properties** context menu for each line.

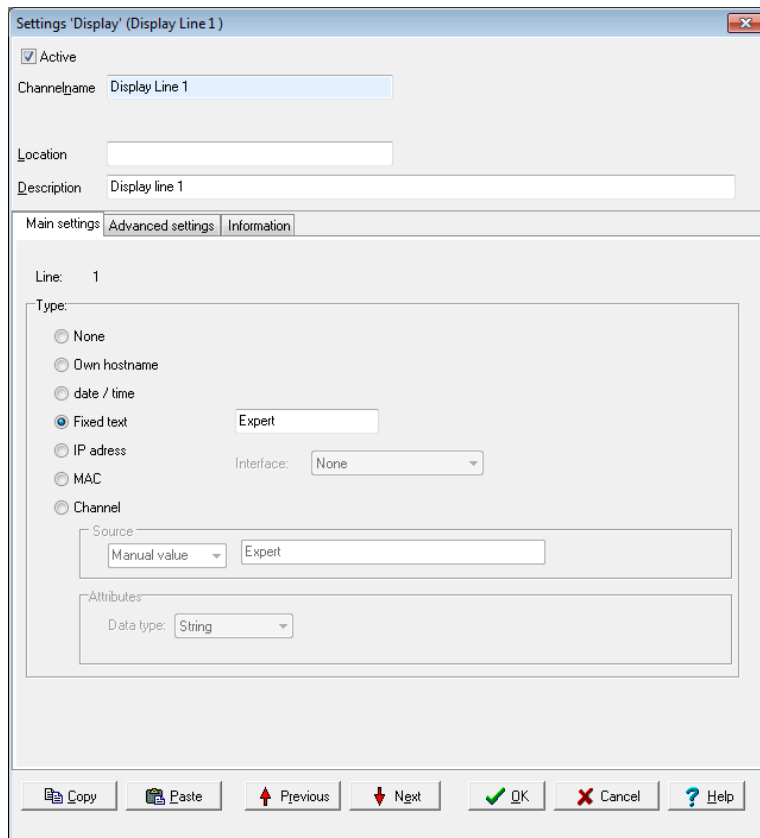

#### ***Own host name***

Displays the device network host name.

#### ***IP address, MAC***

Select the interface for which you wish to display information. The line then displays either the IP address or MAC address (Media Access Control address) used for the interface. The MAC address identifier is defined via the (hardware) adapter and is required if the network administrator wants to assign a specific IP address to a device, as opposed to via DHCP.

### **Channel**

Select an available channel whose value is to be output using **Channel** in **Source**, or enter a constant value (**Manual value**). Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application. You can use **Properties** to define whether the output value is to be handled as a **String** (text) or **Float** (numeric value).

## 4.9.4 Drives

Specify here which drives should be available for data saving.  
Refer to "[Device memory](#)" on page 271.

### **USBdrive**

Once you have connected a memory, for example, a USB memory stick or a USB drive with the USB interface, the memory will be displayed as a drive and can be selected here.


Refer also to [USB device](#).



**The USB storage must be configured with the FAT32 filesystem; other file systems are not recognised.**

You can either select *Only allow following devices* and enter the device (you may add multiple drives). If the memory is formatted with multiple partitions, you can also enter the *Partition number*. Alternatively, you can select *Next available device*, and then one of the other memories will be used (if available), as soon as the current one runs out of space.

## Network drive

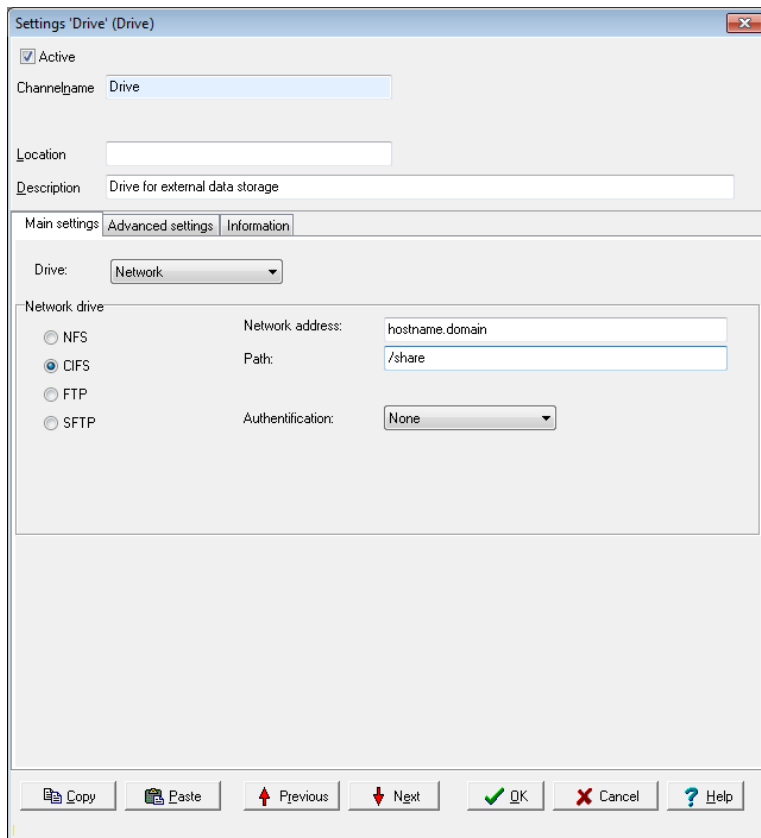

Choose the file system or protocol for addressing the network drive.

**NFS** (Network File System) enables file access via a network. Choosing this means that the files are not transmitted via for example FTP, but instead you can locate and access files saved on another PC, as if they were located on the local drive.

**CIFS** (Common Internet File System) is based on NetBIOS over TCP/IP and SMB and offers other services such as Windows RPC and NT Domain in addition to the file functions.


**FTP** (File Transfer Protocol) is a widely used network protocol used to transfer files and manage directories (create, delete, etc.).

**SFTP** (Secure File Transfer Protocol) allows a more variable encryption of data transfer than FTP.

For all options you need to specify the *network address* and *path* for access. For NFS, also the protocol version to be used (v2 or v3). If authentication is required for other methods, you must enter the *user*. The user must be created via "[Directory \(User management\)](#)" on page 63.

## 4.9.5 LED

The LED group allows you to specify the display backlight brightness and the assignment of the LEDs, for example, when and which LED illuminates red or green.

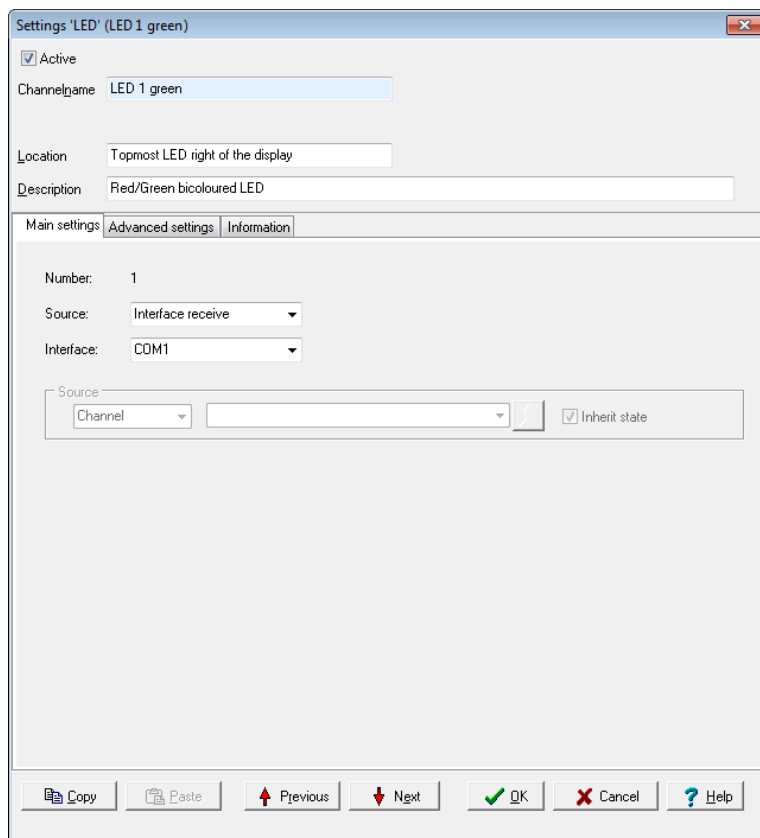

Settings 'LED' (LED 1 green)

Active

Channelname: LED 1 green

Location: Topmost LED right of the display

Description: Red/Green bicoloured LED

Main settings | Advanced settings | Information

Number: 1

Source: Interface receive

Interface: COM1

Source

Channel [ ] [ ]  Inherit state

Copy Paste Previous Next OK Cancel Help

Select the desired *source* and specify for each source, whether the for example an interface or channel should send the information.

Select an available channel whose value is to be output using *Channel* in *Source*, or enter a constant value (*Manual value*). Selecting *Application*

enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application.



### Info

You can also change the Power LED assignment. However, make sure that the indication that the unit is on, can still be seen.

## 4.9.6 System monitoring

The system monitoring group collates individual settings, which you can generate via the [System monitoring](#) software channel. This displays system information such as CPU load or memory usage.

### Available system information

Selection	Description	Unit
Total CPU usage	Display of total used processing power.	%
Application CPU usage	Display of processing power used by the main program (data acquisition and calculation).	%
System CPU usage	Display of processing power used by (operating) system.	%
Available memory	Displays how much free working memory is available.	MiB
Used memory	Displays how much working memory is in use.	MiB
System operating time	Display of time that the operating system has been working, as in the time since the device was last switched on.	Days
Application operating time	Display of time that the main program has been working, as in the time since <a href="#">Restart main application</a> or switching on or <a href="#">Reboot</a> of the device.	Days
Data storage used	Amount of memory already used for the data.	MiB
Free data storage	Amount of memory available for the data.	MiB
Firmware version	Device firmware version number.	—
CPU temperature	Temperature of the CPU.	°C

Selection	Description	Unit
Core voltage	CPU core voltage, diagnostic value.	V
Core RAM voltage	Internal value for diagnostics only.	V
Aux voltage	Internal value for diagnostics only.	V
Battery OK	Display whether the backup battery for the real-time clock and the SRAM is working.	—

MiB = 1024 x 1024 byte (Mebibyte, actual storage capacity); MB = 1000 x 1000 byte (Megabyte). A hard disk with 500 MB (according to the manufacturer) can therefore effectively only save 476 MiB (500,000,000/(1024 x 1024)).

#### 4.9.7 Network settings




##### Info

The "Network settings" group is by default available both in the "System" and "Interfaces" groups.

Display the dialog via the **Properties** context menu.



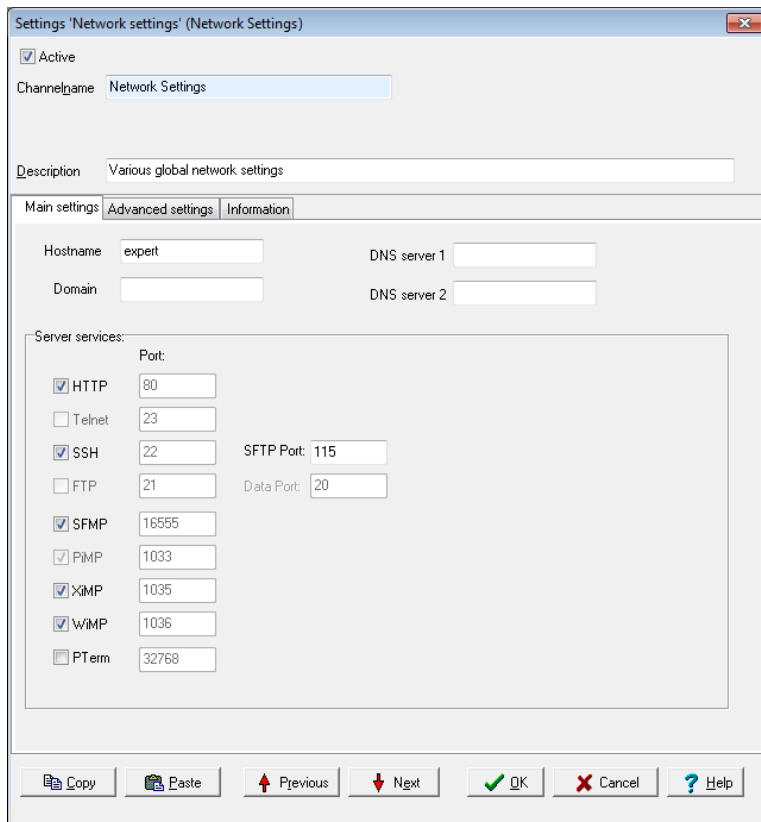

The **Hostname** (network name for the device), **domain** and **DNS server** field inputs are used to convert network names into the corresponding IP address. Leave the DNS server field empty when a DNS server is unavailable on the network.

Do not use invalid characters for network host and domain names (no underscores or special characters and only ASCII characters, as in, no German umlauts, etc., but hyphens are allowed).

## Server services

Here you can see which ports are used for the various server services. The ports themselves cannot be changed. You can however deactivate services which are not required.

**HTTP** is required for the Web interface (for example firmware update), but can however be switched off when not required.

**SSH**, **Telnet** and **FTP** are required only if you wish to access a device via these services.

**SFMP** (Search For Message Protocol) is used to find devices (menu **Connections** → **search for Delphin devices in the LAN**).

**PiMP** (PoND interchange Message Protocol) is permanently required by the DataService and cannot therefore be deactivated.

**XiMP** (XML interchange Message Protocol) transfers data in the same way as the DataService, except in XML format.

**WiMP** (Web interchange Message Protocol) is required; for example, for channel representation ([Live channel values](#)) in your Internet browser.

**PTerm** is used only in debug mode for Telnet transfers and is therefore not active in the default setting.

## Ports

List of all [ports](#) used by **Delphin**.



### Info

Please note that changing the permitted protocols can affect the functioning of the device and may completely block access to the device in combination with firewalls, managed switches etc.!

### 4.9.7.1 Mail settings

No settings possible here!

The mail servers can be created under this channel.

## Mail server

Specify a mail server for sending mails.




### Info

If your mail server requires user authentication, create the necessary login data via "[Directory \(User management\)](#)" on [page 63](#) before calling the mail server dialogue.

Connections Channels Database Alerting Scheduler User management						
Channel	Value	State	Channelltype	C	Δ	Sto
Expert Logger 'expert-logger-12345678.local'		Online	Device	-		No
Software channels			CPU Module	-		
System			System	-		
Clock			System informa...	-		
Directory			Directory	-		
Display			System settings	-		
Drives			Drives	-		
LED			System settings	-		
System Monitor			System informa...	-		
Network Settings		Ok	Network settings	-		No
Mail Settings		Ok	Mail settings	-		No
Delphin mail serv		Ok	Mail server	-		No
Gmail - SSL - tes		Ok	Mail server	-		No
Gmail - TLS - tes		Ok	Mail server	-		No
GMX - L_benutz			Mail server	-		No

### Main settings tab

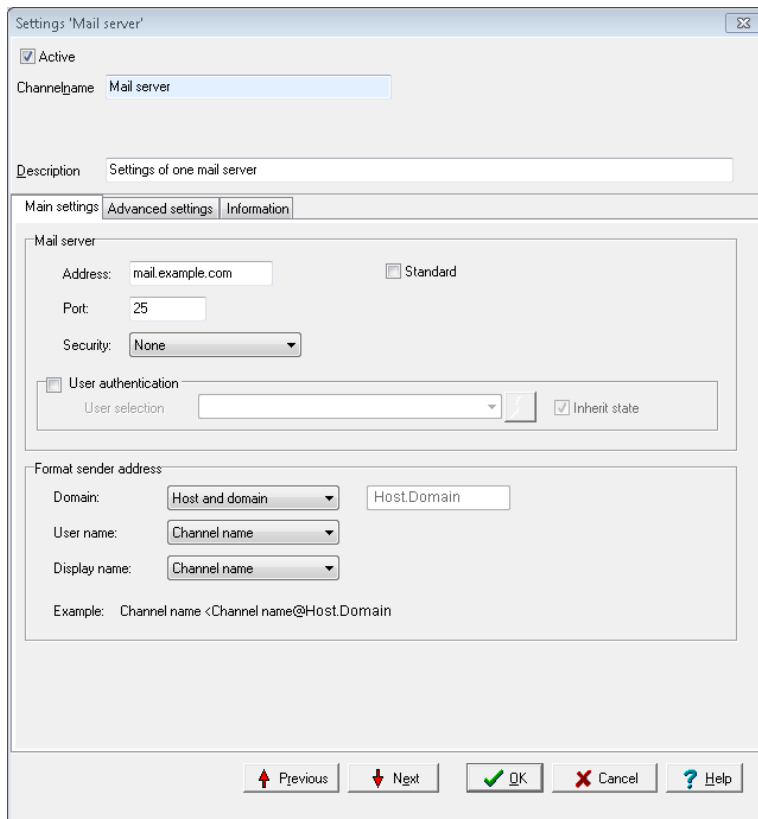

Settings 'Mail server'

Active

Channelname: Mail server

Description: Settings of one mail server

Main settings: **Advanced settings** | Information

Mail server

Address: mail.example.com  Standard

Port: 25

Security: None

User authentication  
User selection: [dropdown]  Inherit state

Format sender address

Domain: Host and domain [dropdown] Host.Domain

User name: Channel name [dropdown]

Display name: Channel name [dropdown]

Example: Channel name <Channel name@Host.Domain>

Previous Next OK Cancel Help

**Mail server:** This section is used to specify the connection settings of the mail server.

**Address:** Enter the address of the mail server to be used.

**Port:** Enter the port of your SMTP server.

**Security:** Select the encryption protocol of the mail server. The encryption protocol for your mail server is available from your IT or e-mail provider. Please note: Public mail servers generally no longer allow unencrypted protocols.

**User authentication:** If the mail server requires authentication via login data, enable the check mark for user authentication. Now select the user. Please note that you have created the user in the **Directory** section of the devices before opening the mail server dialogue.

**Standard:** Select this check mark if the mail server is to be used as the default mail server. In the appropriate configuration dialogues, you can specify a mail server manually as well as the use of a default mail server.

### Format sender address

This section is used to specify the format of the sender address to be used with the mail server. The sender address of a mail consists of two parts:

- 1) The actual sender address
- 2) The sender name displayed



### Info

Many mail servers do not allow for a sender mail address to be entered that is different from the login data.

The sender address is created from the two fields Domain and Username.

**Domain:** Enter a user-defined domain or select the domain set under.

**Username:** Enter a user-defined username or select one of the predefined options.

**Display name:** Enter a user-defined display name or select one of the predefined options.



### Info

The "Channel name" setting is resolved by the respective channel used at run time. Example: A mail server was assigned the value "Channel name" for the fields "Username" and "Display name". Its domain is "example.com". An event channel called "Time stopper" uses the previously configured mail server for sending mails. If an event occurs, an email will be sent with the sender "Time stopper <timestopper@example.com>".

## Example for setting up mail servers

This guide serves to successfully implement event-driven mail sending.

### First, the following questions have to be clarified:


- What is the address data of the mail server?
- Address?
- Port
- Encryption? The following can be configured: none, TLS or SSL
- Authentication necessary on the mail server?
- What are the recipient addresses?

## Creating the mail server in the channel structure


Before the mail server is created, check whether login data is required. If the mail server to be used requires authentication by means of login data, this must be created first. Please follow the descriptions in the **Create login data** section and then continue with **Create mail server**.

If no authentication is required, please skip the **Create login data** section and continue with the **Create mail server** section.

## Creating login data

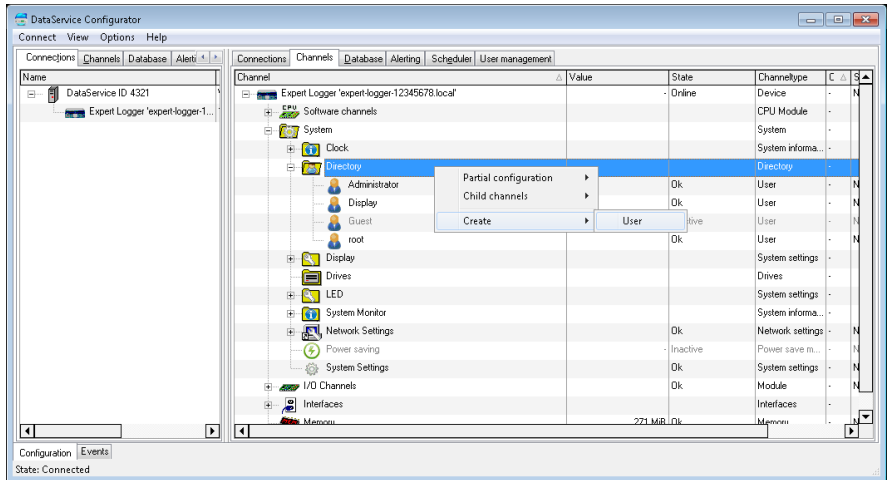

In the channel tree, open the **System** folder. Right-clicking **Directory** allows you to create a new user.

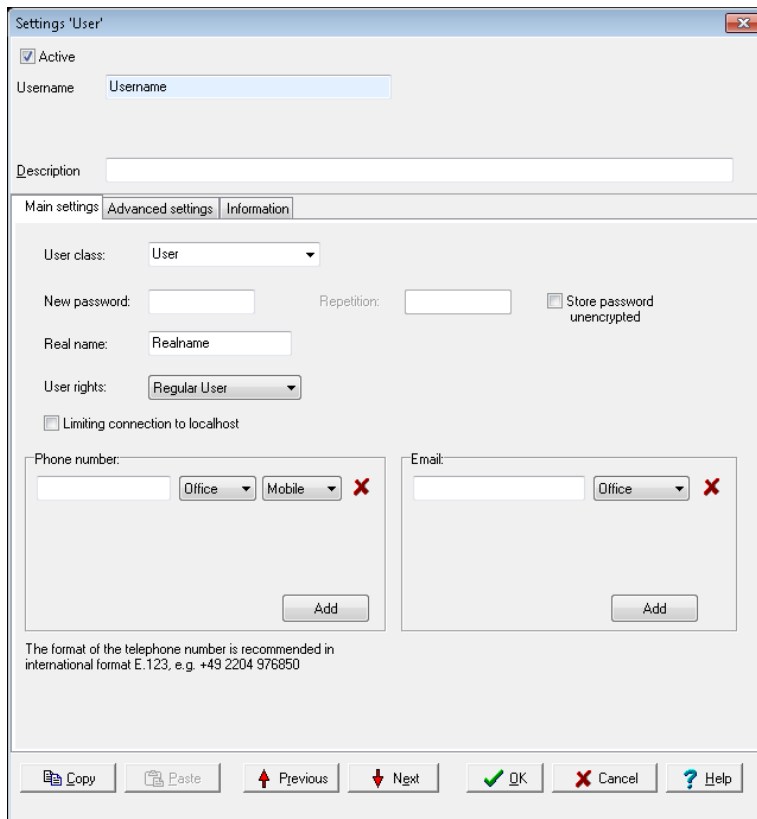

The following settings must be entered in the Basic Settings tab:


Enter the authentication login name under *Username*.

For user class, please select *Login data*.

In the fields *New Password* and *Repeat*, enter the password required for authentication.


Now confirm the dialogue by clicking *OK*.

## Creating the mail server

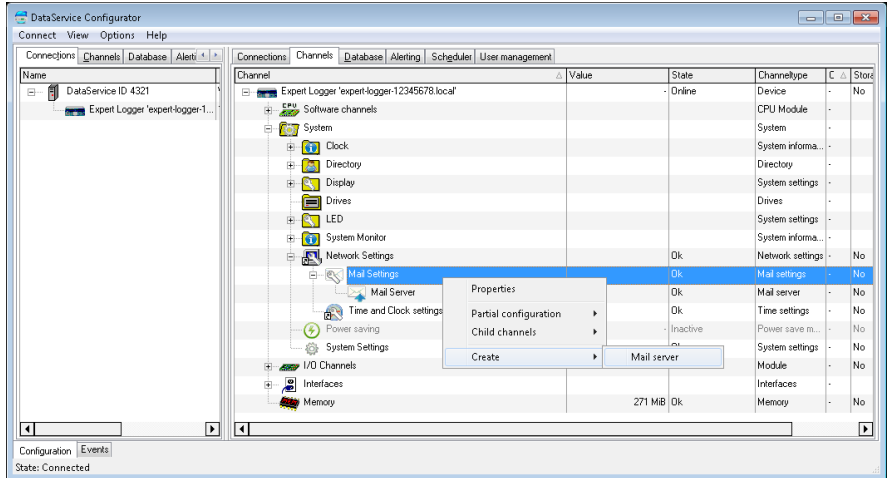

In the channel tree, open the *System* folder, then *Network Settings* and, under it, *Mail Settings*. By right-clicking *Mail Settings*, you can create a new mail server.



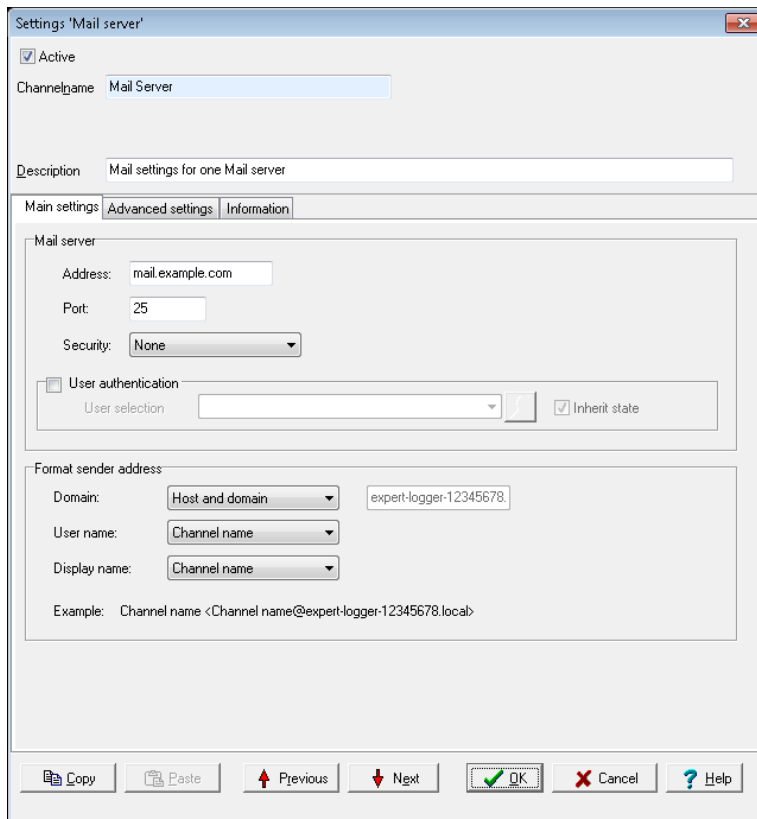

Assign a suitable channel name to the mail server. Furthermore, the following settings must be entered in the Basic Settings tab:

- Enter the mail server address in the **Address** field.
- Enter the port of the mail server in the **Port** field.
- Select the encryption that is specified by the mail server. (None, TLS or SSL)
- If user authentication is required, please check the **User authentication** box and select the user with the stored login data from the list.



## Info

The fields in the range *Format sender address* can be used to format the mail sender.

A mail address consists of two (or three) parts.


The mail address itself consists of the local part as well as the global part. These parts are connected by the '@' sign. For example, mail-address@example.com

You can manually determine the mail address by changing the fields *domain* (for the global part) and *username* (for the local part).


Furthermore, the field *Displayed name* offers the option to store a *real name*. This can be displayed in mail programs instead of the complete mail address.

Please note: Some mail servers prohibit a mail address that differs from the login name.


## Setting the default mail server

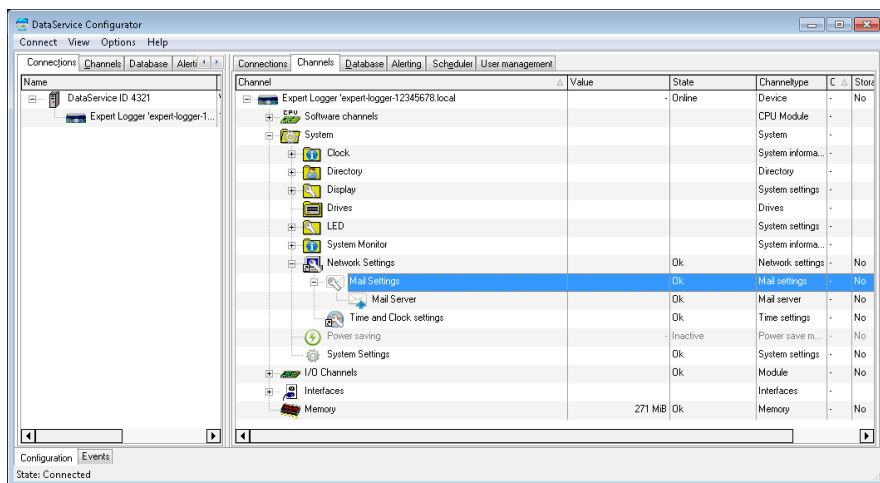


In the channel tree, open the *System* folder, then *Network Settings* and, under it, *Mail Settings*. Double-clicking *Mail Settings* opens the dialogue of the *Mail Settings*. Here, you can set a default mail server.

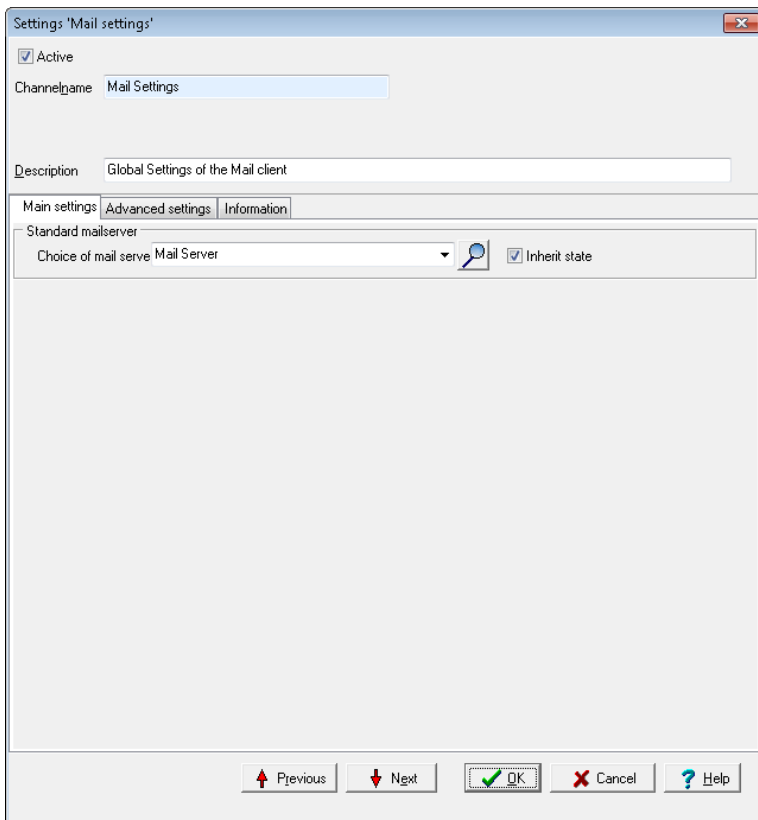

## Creating recipients

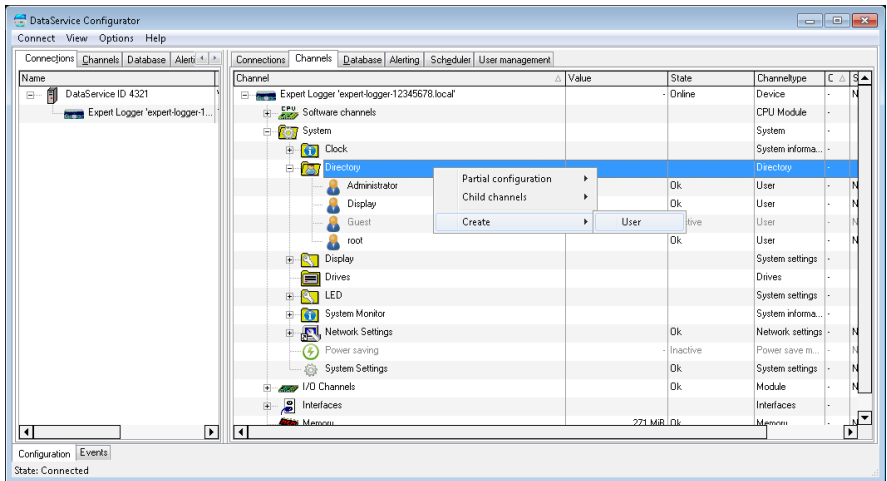

In the channel tree, open the **System** folder. Right-clicking **Directory** allows you to create a new user.

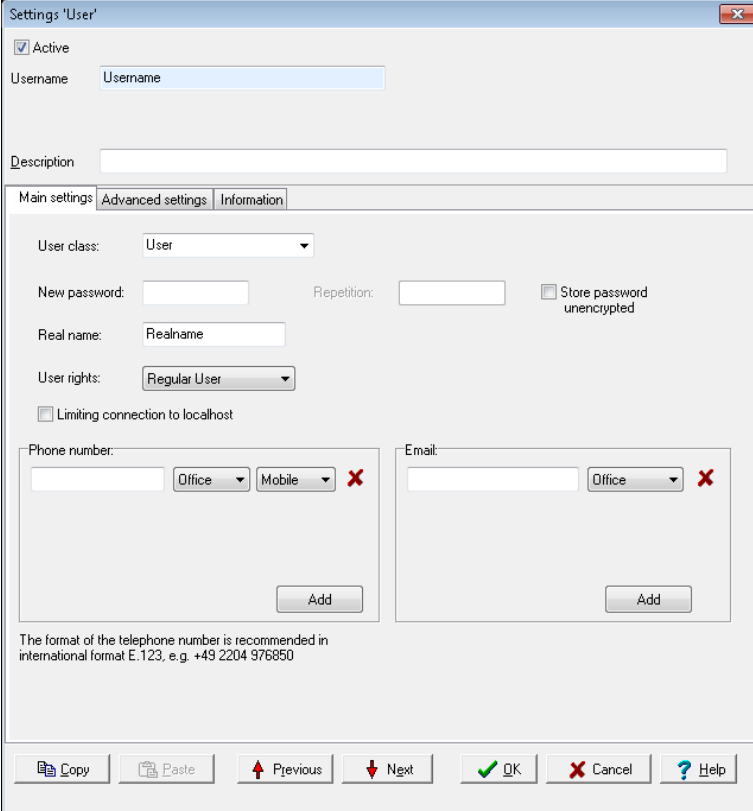

Settings: 'User'

Active

Username:

Description:

Main settings | Advanced settings | Information

User class:

New password:  Repetition:   Store password unencrypted

Real name:

User rights:

Limiting connection to localhost

Phone number:

The format of the telephone number is recommended in international format E.123, e.g. +49 2204 976850

The following settings must be entered in the Basic Settings tab:

Enter the desired username under **Username**.


For user class, please select **User**.

In the **E-mail** section, enter the appropriate mail address of the user.


Now confirm the dialogue by clicking **OK**.

Repeat this step until you have created all the desired recipients.

## Creating the event channel

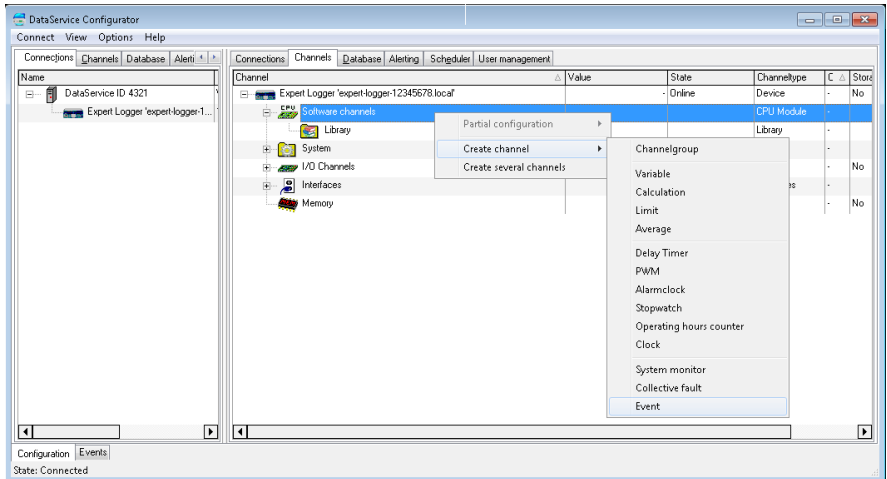

In the channel tree, navigate to the location where you want to create the event channel. In the above example, an event channel is created below *Software channels*.

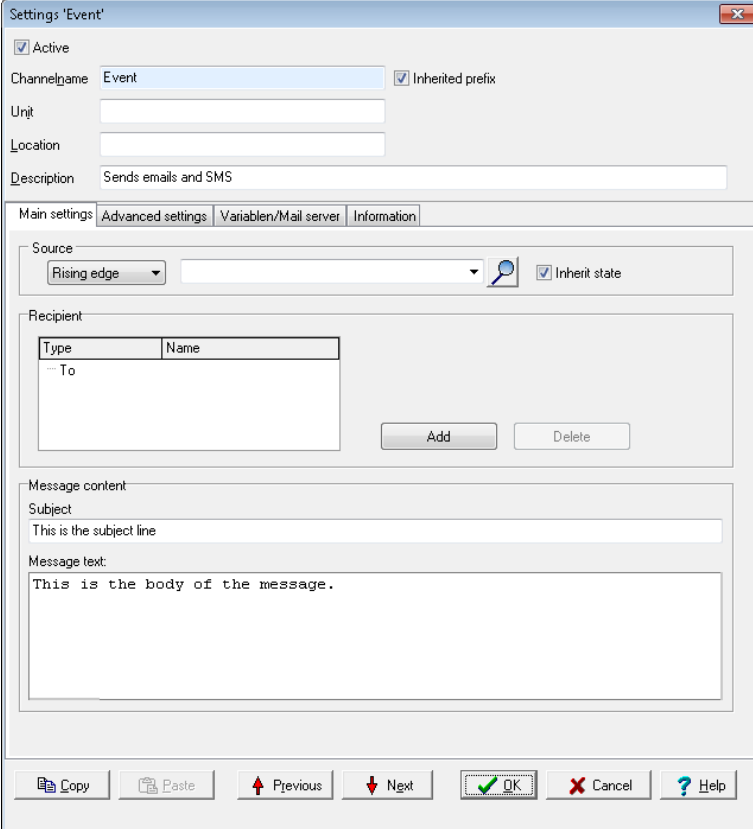

Settings: 'Event'

Active

Channelname: Event  Inherited prefix

Unit:

Location:

Description: Sends emails and SMS

Main settings | Advanced settings | Variablen/Mail server | Information

Source: Rising edge   Inherit state

Recipient:

Type	Name
To	

Add Delete

Message content

Subject: This is the subject line

Message text: This is the body of the message.

Copy Paste Previous Next OK Cancel Help

The following settings must be entered in the *Basic Settings* tab:

- Under *Source*, select the trigger of the event.
- You can add the desired mail recipients in the *Recipients* section. The *Type* is used to determine whether the receiver should be a main receiver (To), a secondary receiver (CC) or the receiver of a blind copy (BCC).
- In the *Message content* section, you can specify the subject and message content.

In the *Variables/Mail server* tab, the following settings are mandatory:

- Select whether this event channel should use the default mail server or a manually defined mail server.

Now confirm the dialogue by clicking **OK**.


You have now configured a mail dispatch. As soon as the *source* of the event channel triggers an event, a mail is sent to the configured addressees.

### 4.9.7.2 Time and clock settings

The dialogue is identical to the dialogue for **System** → **Clock** → **Time and Clock Settings**, refer to "[Time and clock settings](#)" on page 59. The dialogue is found here again, for example, because the NTP servers can be reached via the Ethernet interface and the setting, therefore, could also be searched under Interfaces.

### 4.9.8 Power saving

The Power Saving **Properties** dialog allows you to wake the device only at certain times or in response to certain events, and to enable the power saving mode at other times.

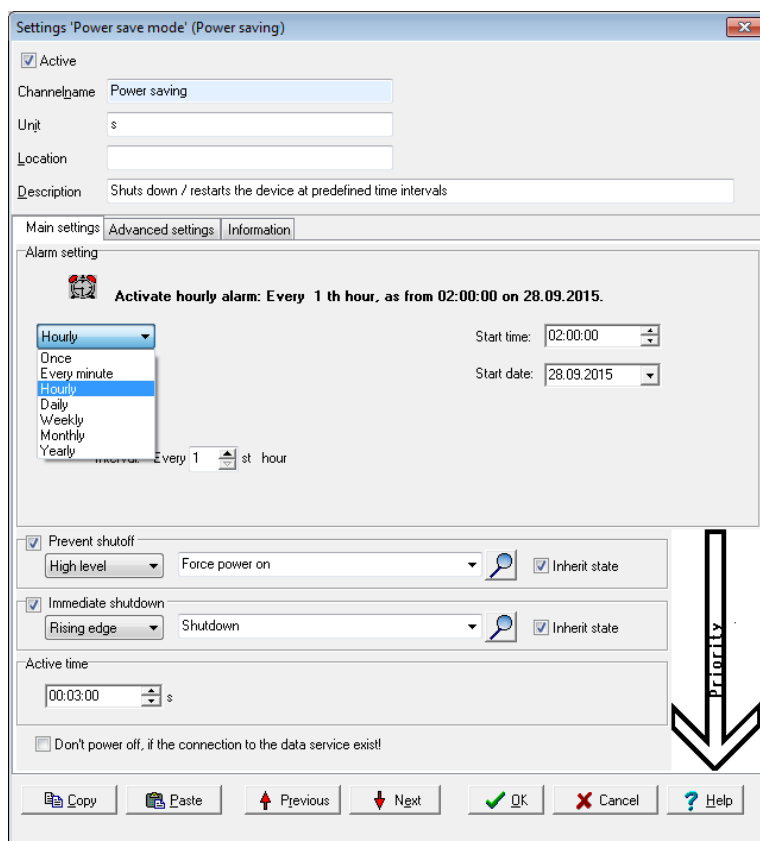

Settings: Power save mode (Power saving)

Active

Channelname: Power saving


Unit: s

Location:

Description: Shuts down / restarts the device at predefined time intervals

Main settings | Advanced settings | Information

Alarm setting

 **Activate hourly alarm: Every 1 th hour, as from 02:00:00 on 28.09.2015.**

Hourly (selected)  
Once  
Every minute  
Daily  
Weekly  
Monthly  
Yearly

Start time: 02:00:00

Start date: 28.09.2015

Every 1 st hour

Prevent shutoff

High level Force power on  Inherit state

Immediate shutdown

Rising edge Shutdown  Inherit state

Active time: 00:03:00 s

Don't power off, if the connection to the data service exist!

Copy Paste Previous Next OK Cancel Help

Priority



You can create further conditions to prevent shutdown or to trigger immediate shutdown, see also [Trigger variants edge and level](#).


**Active time** sets a minimum period for which the device operates.

To prevent shutdown from interrupting an existing DataService connection following a signal or once the Active time duration has elapsed, you should enable the corresponding option at the bottom of the dialog.

## 4.9.9 System Settings

This dialog allows you to enable the device's User management. Open the dialog from the context menu.

Refer also to "[Directory \(User management\)](#)" on page 63.

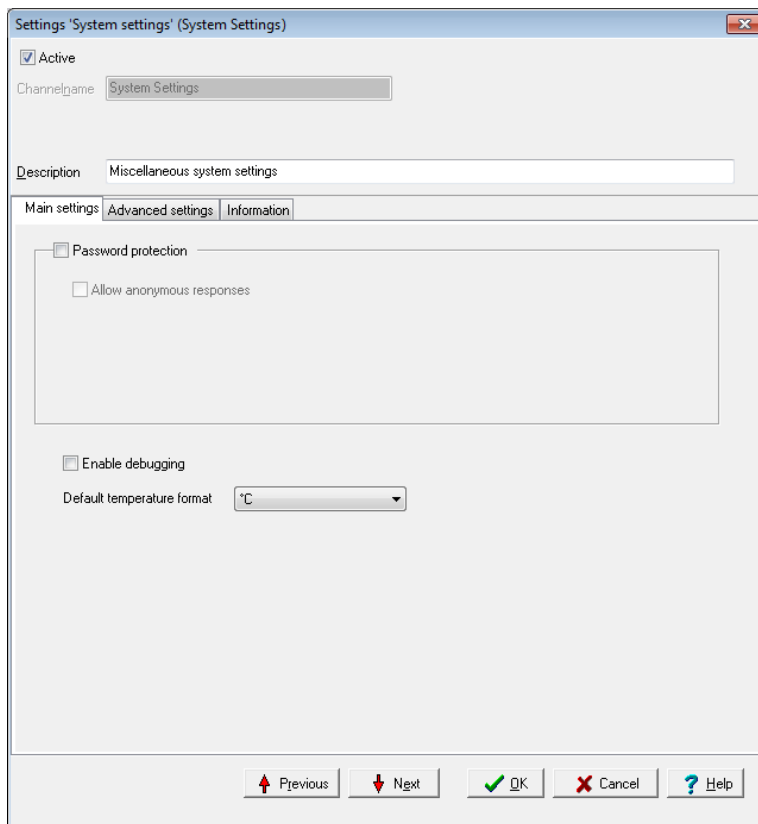

Settings: System settings (System Settings)

Active

Channelname: System Settings

Description: Miscellaneous system settings

Main settings | Advanced settings | Information

Password protection

Allow anonymous responses

Enable debugging

Default temperature format: °C

Previous Next OK Cancel Help

## Anonymous login

This option allows device login with the “Guest” username. So that anonymous connection is possible, you must also enable the “Guest” user account and specify the rights for this account. Anonymous login via the DataService then always takes place, if either no user data for connection to a device are provided, or the user data provided are invalid.



**Once User management is activated, a connection to the device can be established just by entering a valid user name and password. Ensure that you have the required login information before activating User management. Otherwise you will no longer be able to connect to your device.**

### Factory set login data

User: `Administrator`

Password: `SUPERVISOR`



**For security reasons, change the Administrator and root passwords in the device’s [User management](#).**

### Enable debugging

Enable this option only when requested to by **Delphin** Support. This enables important information to be detected on the device, in the event of a fault.

### Standard unit for temperature

Specifies the default unit to be applied to temperature measurements. But you can use different units for each channel. This specifies only the unit; units are not converted.

## 4.10 Configuring channels (sensors)

Configuration of [software channels](#), [interfaces](#) (for external devices) and [device memory](#) is described in separate sections.

See also [Settings for all dialogs](#), [Overview](#), [Galvanic isolation](#)

The **Expert Vibro** device has the following I/O channels:

- [Trigger group](#)
- [Rotation speed](#)
- [Track](#)

- [Spectrum](#)
- [Min/Max/PP](#)
- [Average/RMS](#)
- [Vector sum](#)
- [Local min/max values](#)
- [Sample rate](#)
- [Analogue output](#)
- [Digital input](#)
- [Digital output](#)


The additional inputs and outputs are shown after the Trigger group. The Trigger groups show you which analogue inputs can be synchronised via which rotation sensor.

Trigger group

### 4.10.1 Trigger Group



**The settings for the respective trigger group have a decisive influence on how the collection and processing of data in the subordinate channels and tracks is carried out.**

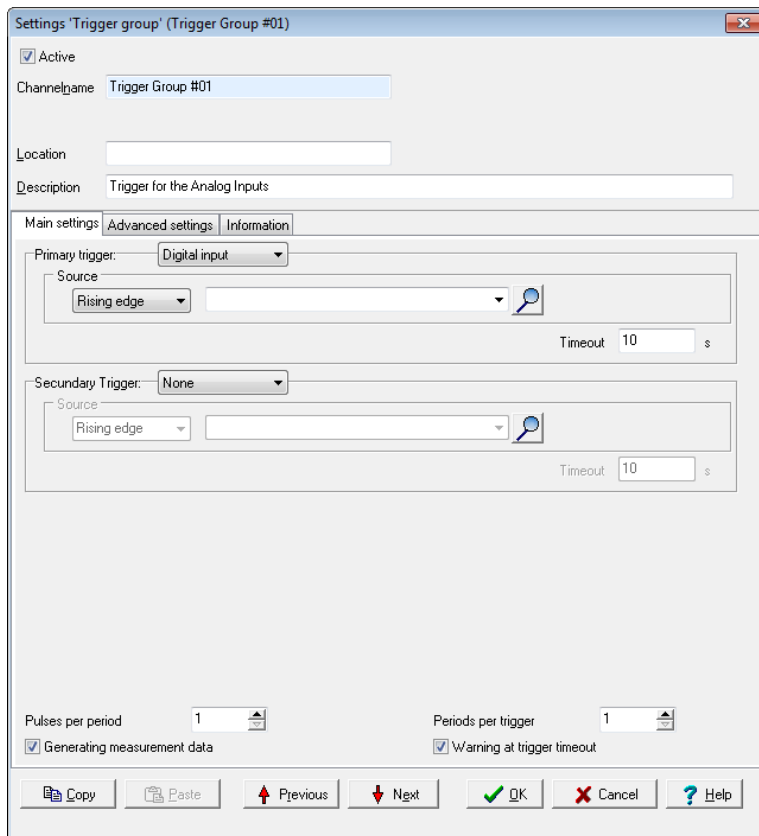

There are four options for trigger sources:

1. Software  
Triggering occurs during an edge change in the software channel.
2. Time  
Triggering occurs upon expiry of set time. The option is useful if you do not have any other trigger at your disposal.
3. Digital input
4. Analogue input

Specify whether the evaluation trigger should take place after a given *time* (periodically) or dependent on a channel, that is, synchronised with an analogue, digital or software channel. Track calculations are then carried over the time specified or over the period between the trigger pulses of the specified source(s).


Refer also to "[Trigger options](#)" on page 53.

If you have selected an analogue or digital trigger, you can now also select secondary triggers and/or a further trigger via the time parameter. These triggers will then become active when the time specified for the original trigger under Timeout has expired without triggering.

If you select **Analogue input** in Channel, additional options become available to you:

**Threshold** is the decisive value in monitoring. You can specify a **Channel** or a fixed value (**Manual value**).

**Hysteresis**: Hysteresis prevents the trigger being repeatedly released for small fluctuations around the threshold value in the monitored signal. Depending on switch direction, the hysteresis lies below the threshold (for overruns) or above the threshold (for underruns). See images. The hysteresis is especially beneficial for small (noise) signals.

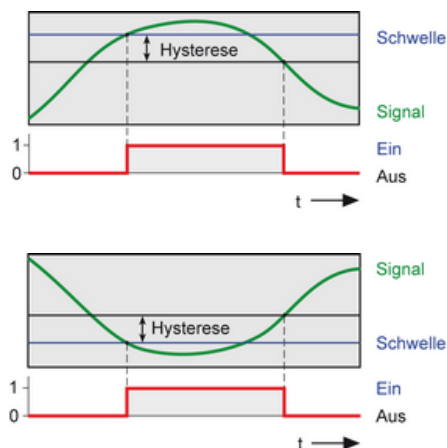

**Debouncing**: Enable this option in addition to the hysteresis if your signal contains brief pulses with high amplitudes. In this case, you should select a relatively large hysteresis in order to prevent trigger release. Enter the maximum pulse duration allowed before the pulses are hidden (suppressed).

Specify under **Number of pulses per period** the number of pulses to be generated during one rotation. For example, if you use a gear with 60 teeth, enter 60 if each tooth generates a pulse.


Since triggering can work with no more than one trigger frequency of 100 Hz (100 triggers per second), you can also specify under **Number of periods per trigger** that several rotations will be required to complete a period.

**Generating measurement data:** When this option is enabled, all resulting measurement data is transferred, although, for example, in the DataService Configurator *channels* tab, only one measured value will be shown. If you require characteristic values only, then for example no "raw values" are written to the database. The display of individual measured values in DataService Configurator also works when this option is disabled. You only need to enable the option therefore, if you want to see a graphical representation of the route or overall result.

**Warning at trigger timeout:** If the option is enabled, a warning status is set when the timeout of the trigger has been reached and no further trigger has been defined. For example, if you have specified a primary and a secondary trigger, the warning will be set when the timeout of the secondary trigger has been reached.

Refer also to ["Status monitoring" on page 197](#), ["Status filter" on page 194](#).

## 4.10.2 Configuring the rotation speed

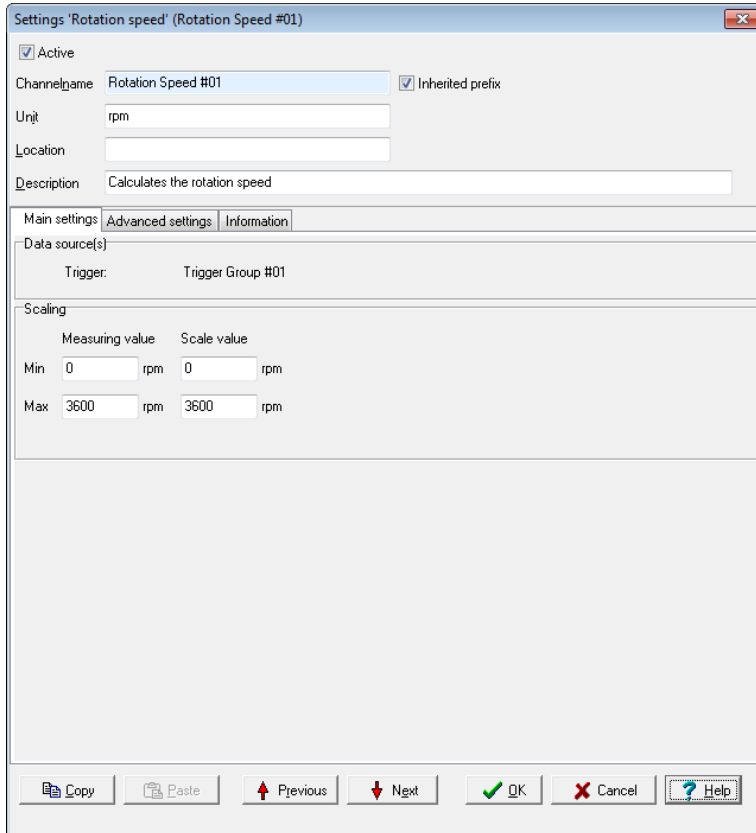

Settings: Rotation speed (Rotation Speed #01)

Active

Channel name: Rotation Speed #01  Inherited prefix

Unit: rpm

Location:

Description: Calculates the rotation speed

Main settings | **Advanced settings** | Information

Data source(s)

Trigger: Trigger Group #01

Scaling

	Measuring value	Scale value
Min	0 rpm	0 rpm
Max	3600 rpm	3600 rpm

Copy Paste Previous Next OK Cancel Help

In **Scaling**, specify whether conversion into another unit should take place. The channel is needed for all rotation-dependent calculations.

### 4.10.3 Analogue inputs (**Expert Vibro/Expert Transient**)



**Preconfigure the [Trigger group](#) settings for the analogue inputs, on which the group analogue inputs are dependent.**

**The triggering settings determine how the analogue channel signals and their dependent calculations are handled, for example, whether they are measured over a time period or a set number of rotations.**

**If you wish to use rotation-dependent functions, also configure the [rotation channel](#).**

Refer also to [Settings for all dialogues](#), [Galvanic isolation](#).

#### Method for analogue inputs

1. Specify the sensor type and sensor measurement range settings in the [Properties](#) context menu of the respective inputs.
2. Set how the sensor signal is to be used: Each input sends a signal that is designated a track by default. You can however define additional tracks ([Track](#) context menu). You can then assign various properties such as for example scaling, sample rate and filter to each track. You can evaluate the same sensor signal in various ways simultaneously.
3. Specify whether, and if so, which characteristic values are to be determined for a track or whether for example a spectrum is to be calculated for a track (optional settings).
4. If you calculate characteristic values or spectrum, you can create additional dependent channels for it which enable further evaluation.



#### Info

You can evaluate each input over several tracks, in order to use as many different filters as required to enable identification of several characteristic values (spectrum, minimum/maximum values) or different storage variants. You can save a channel configuration with its various tracks ([Sub channels](#) → [Add to library](#)) or copy it and transfer it to other channels.

#### 4.10.3.1 Configuring analogue inputs

The **Expert Vibro** device has only the voltage sensor type.





Preconfigure the **Trigger group** settings for the analogue inputs, on which the group analogue inputs are dependent.

The triggering settings determine how the analogue channel signals and their dependent calculations are handled, for example, whether they are measured over a time period or a set number of rotations.

If you wish to use rotation-dependent functions, also configure the **rotation channel**.

## Voltage sensor type

Settings 'Analog input' (Analog Input 1) ✖

Active

Channelname:

Unit:

Location:

Description:


Main settings | Advanced settings | Information

Wire break examination

Minimum:  mV

Maximum:  mV

AIN 1

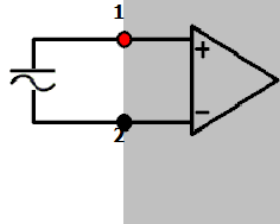


max. ±25 V

IEPE / ICP® supply

AC coupling

📄 Copy | 📄 Paste | ⬆️ Previous | ⬇️ Next | ✅ OK | ❌ Cancel | 🔍 Help

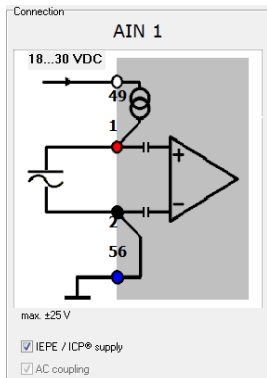

### **IEPE/ICP<sup>®</sup> feed**

For ICP<sup>®</sup> and IEPE sensors, enable the **IEPE/ICP<sup>®</sup> feed**. Note the additional connections to be carried out (power supply), which are entered under **Connection**. This will supply the sensor with (constant) current and the signal is decoupled.

See also sensor connections, [IEPE and ICP sensors](#)

### **AC coupling**

Enable **AC coupling**, if you wish to exclude DC components. In this case only the AC component of your signal is recorded. (For ICP<sup>®</sup> and IEPE sensors this setting is always enabled.) The DC component can also be suppressed by a track.

## 4.10.4 Track

Create one or more tracks via the context menu of an analogue input. A track is the central processing unit for incoming analogue signals. The configuration of a track allows the arbitrary filtering and scaling of the time signal. In the broad sense, a track is used to reduce the measured values of the A/D converter (50 kHz) to a reasonable number for the evaluation. At the same time, the bandwidth and resolution of the following spectrum are configured. Due to the generated data sections, the track represents the database for the underlying time values.



### **Info**

To configure a track you can use the **Component configuration** context menu to save the configuration to file, and load it later or copy it and transfer it to another track using **Replace**.

#### 4.10.4.1 Relationship between triggers, time data and spectra



##### Attention!

It should be noted that the processing of the time data is dependent on trigger events. The influence of the track configuration on the calculation of the spectra is also to be considered.

The calculation of a spectrum is ideally started with each triggering event. However, a spectrum can only be calculated if at least as much time data as specified in the *number of FFT points* was generated. If this is not the case, the generated time data is collected until the next triggering event and is subsequently concatenated with the new time data. This is done until enough data is available to calculate a spectrum.

##### Example 1: More time values for FFT calculation necessary than collected per trigger

- A trigger event occurs every 100 ms.
- The sampling frequency is configured with 5000 Hz.
- The number of FFT points is 4096.


500 time values are now generated per trigger event. In order to be able to calculate a spectrum with 4096 points, the time data of nine trigger events must now be collected. Accordingly, a spectrum is calculated only every 900 ms. (And not every 100 ms with each trigger event) Conversely, it can happen that long time segments cannot take into account a considerable number of time data when calculating a spectrum.

##### Example 2: More time values per trigger collected than required for FFT

- A trigger event occurs every second (1000 ms)
- The sampling frequency is configured at 50,000 Hz
- The number of FFT points is 4096.

50,000 time values are now generated per trigger event. Only the first 4096 time values are used to calculate the spectrum. The remaining data will not be considered for the spectrum.

## 4.10.4.2 Main settings tab

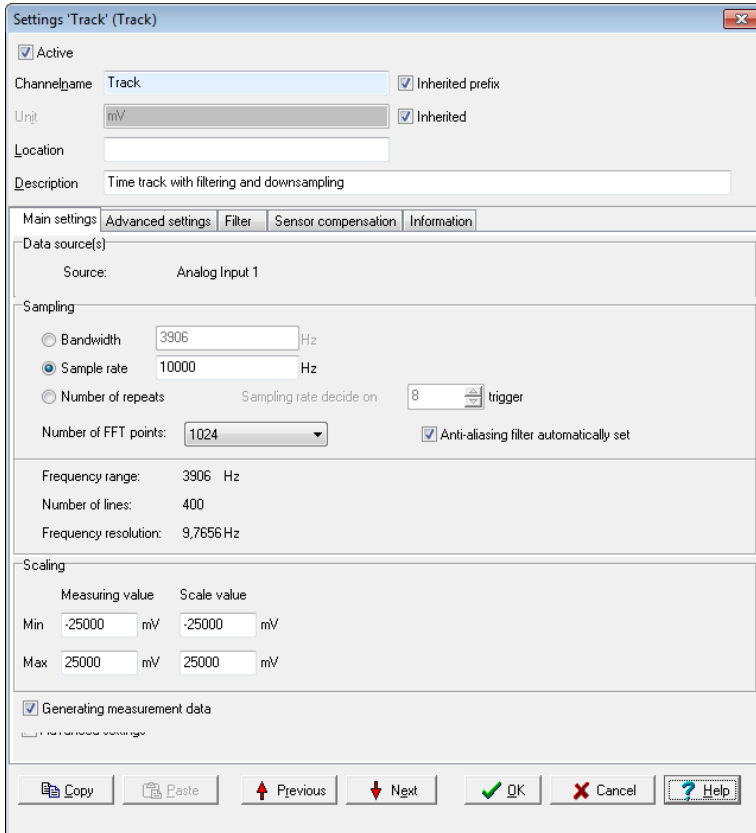

## Data source(s)

**Source:** The source data from the following analogue input is processed.

**Trigger:** The trigger events of the following trigger group are processed.

## Sample rate

### Fixed

Specify here either which bandwidth you require in the useful signal (the sampling frequency is then automatically calculated) or the sampling frequency to be used. The relationship of the bandwidth to the sampling frequency is defined as follows:  $\text{Bandwidth} = \text{sampling frequency} / 2.56$

In this mode, the time data of an analogue input between the current and previous trigger event is processed with each triggering event.

### *Dynamic over x triggers*

In this case, the sampling frequency is calculated dynamically, as a function of the number of incoming trigger events as well as the number of FFT points.



**Attention: In this mode, data is only generated if the trigger frequency is within the valid range (see Trigger frequency section). The data blocks generated then contain precisely the number of specified FFT points.**

With each xth trigger, a time signal is generated over the detected time section with the aid of the sampling frequency. The number of measuring points is equal to the number of parameterised FFT points.

The calculation of the sampling frequency is performed as follows:

$dT$  = time difference between the first and last trigger event

$N$  = number of FFT points

Sampling frequency =  $N/dT$

The sampling frequency can never be less than 25.6 Hz and never higher than 50,000 Hz.

### *Number of FFT points*

The 'number of FFT points' represents the sampled time values required to calculate the spectrum.

**Fixed sampling frequency:** A larger number of FFT points increases the frequency resolution in the spectrum.

**Dynamic sampling frequency:** A larger number of FFT points increases the frequency range of the spectrum.

### *Spectral synchronous time characteristics*

This option is only available if a fixed sampling frequency is selected. If the option is active, a time characteristic is not necessarily computed with each trigger event. The calculation takes place only when there is sufficient data for the calculation of a spectrum.

Accordingly, the time characteristic is calculated over the same time period as a spectrum.

### *Frequency range*

The frequency range indicates how wide the line spectrum is. It corresponds to the bandwidth of the time signal.

### *Number of lines*

The 'number of lines' indicates the value of the existing lines in the spectrum. This value is calculated as follows:

'Number of lines' = 'Number of FFT points' / 2.56

### *Frequency resolution*

The frequency resolution represents the distance between two adjacent lines in the spectrum. The distance is calculated as follows:

Frequency resolution = sampling frequency / number of FFT points'

#### **Trigger frequency**

The trigger frequency indicates the valid frequency range of the trigger signal. Within this range, the track can process data.

The minimum and maximum processing time results in a limitation. The minimum time is 10 ms and is generated by running times within the software of the devices. The maximum time of 10 s is generated by the internal raw data memory.

### **Scaling**

When scaling, it must be noted that this is applied to the data only after the signal processing.

Enter two points from the sensor's characteristic curve, if possible, the lower and upper vertexes. For a linear characteristic, measurement values are then converted into the unit of measurement (scaling) from the sensor.

### **Generating measurement data**

When this option is enabled, all resulting measurement data are transferred, although, for example, in the DataService Configurator in the Channels tab, only one measured value will be shown. If you require characteristic values only, then for example no "raw values" are written to the database. The display of individual measured values in DataService Configurator also works when this option is disabled. You only need to enable the option therefore, if you want to see a graphical representation of the route or overall result.

#### **4.10.4.3 Filter tab**


The different filters can be activated or deactivated by clicking the symbols. In the case of the integrator, a double integration can also be defined by multiple clicks. It is not possible to use the integrator and the differentiator at the same time. Alternatively, you can select a function using

**Preselect.**

Grundeinstellungen | Weitere Einstellungen | **Filter** | Informationen

Vorauswahl: Benutzerdefiniert

Invertierung    
 Anti-Brumm    
 Hochpass    
 Bandsperre    
 Gleichrichter    
 Tiefpass/AA-Filter    
 Integrator    
 Differenziator



	Anti-Brumm	Hochpass	Bandsperre	Tiefpass	
Grenz-/Mittenfrequenz	50	5	300	1953	Hz
Bandbreite	-	-	5	-	Hz
Ordnung	-	10	10	10	
Dämpfung	20	-	-	-	dB
Charakteristik	-	Butterworth	Chebyshev	Butterworth	
Welligkeit	-	3	0,5	3	dB
Drehzahlanpassung	-	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	


Übertragungsfunktion

## Transfer function

Use the *Transfer function* button to display a window that shows you the amplitude and phase characteristics of the selected filter structure. This function is not available when the filter settings are dependent on the speed.


## Inversion

Inverts the incoming time signal.

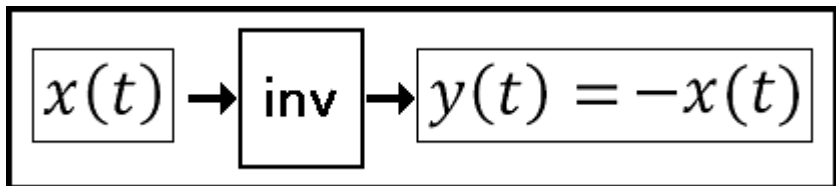

## Anti-humming


A very narrow-band filter, designed to reduce the network hum in the signal. The filter can be configured for different network frequencies.

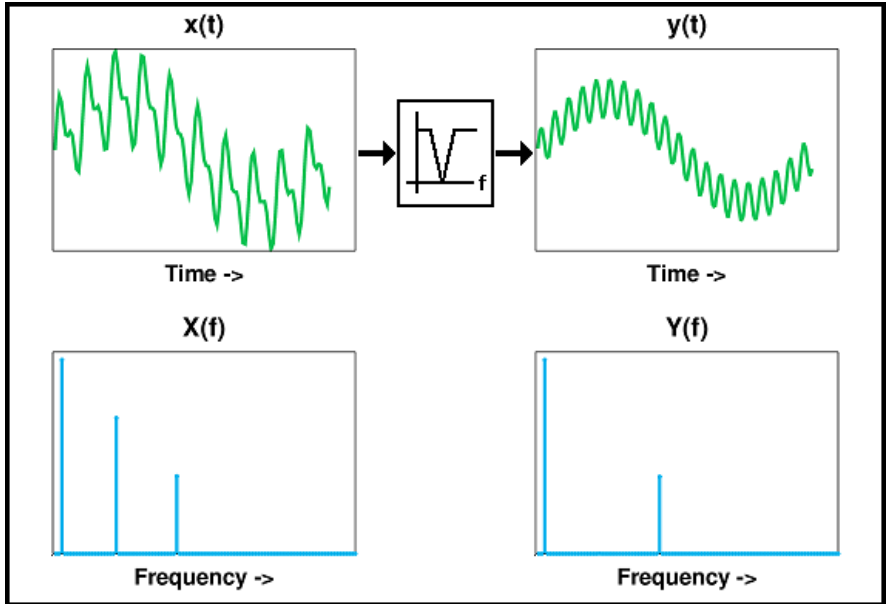

## High pass


Filters the frequencies below a set cut-off frequency.



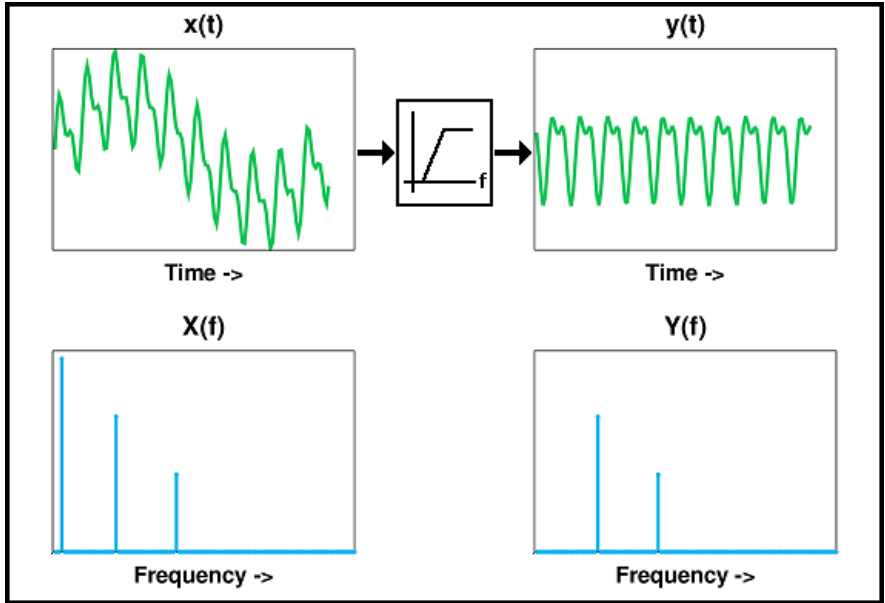


### Bandstop

Filters the frequencies of a set band.

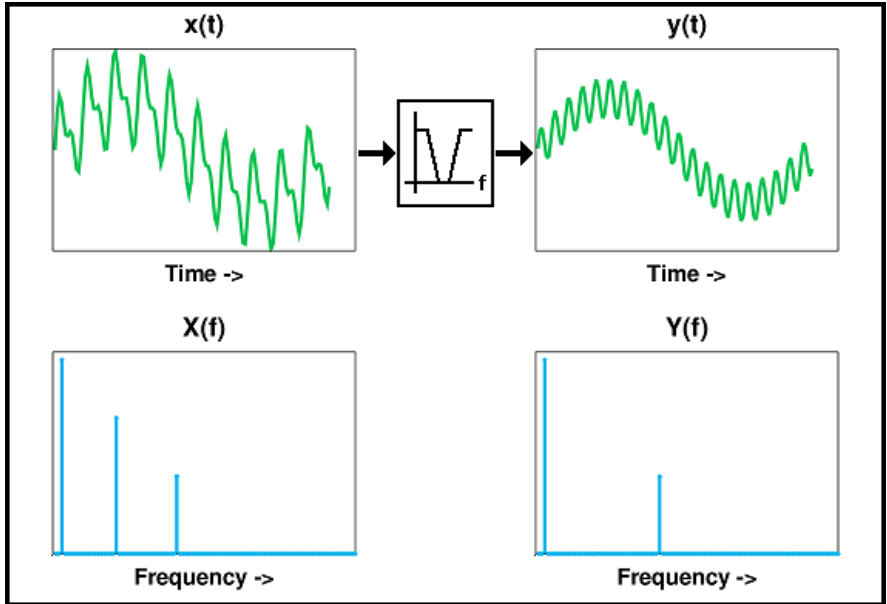


### Rectifier

All negative components in the signal are inverted.

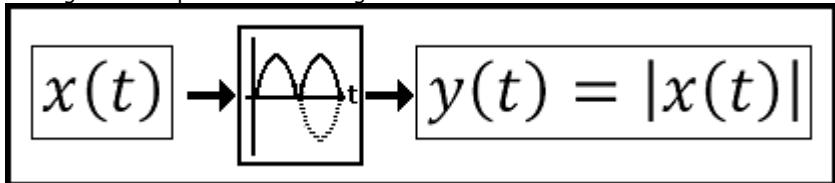


### Low pass

Filters the frequencies above a set cut-off frequency.

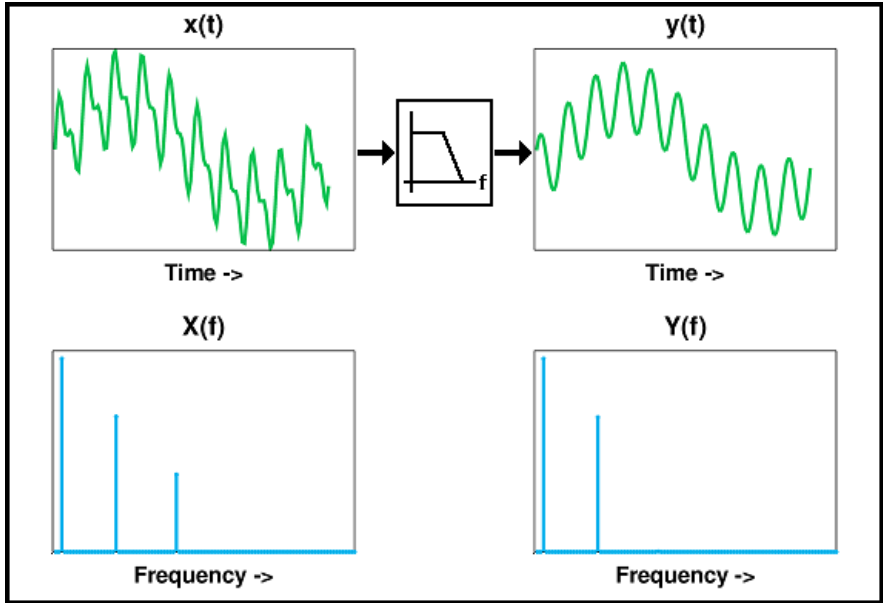


### Integrator

The incoming signal is integrated and scaled. The simple integrator scales the signal by a factor of 1,000. The double integrator with a factor of 1,000,000. When using the integrator, a high pass must always be used to filter out the steady component. The high pass is activated automatically.

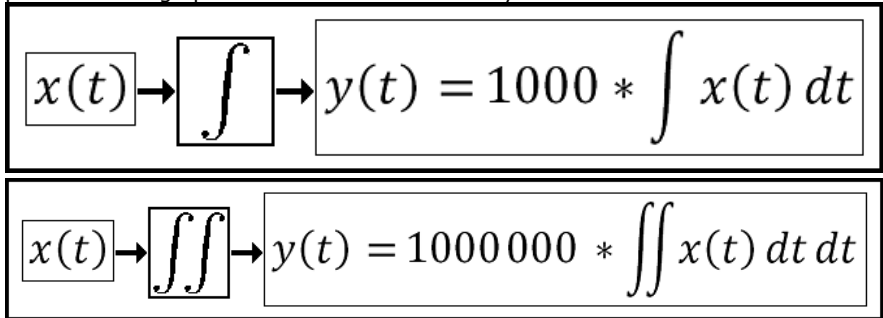

### Differentiator

The incoming signal is differentiated and scaled by the factor 0.001. When using the differentiator, a low pass must always be used. This low pass is activated automatically.

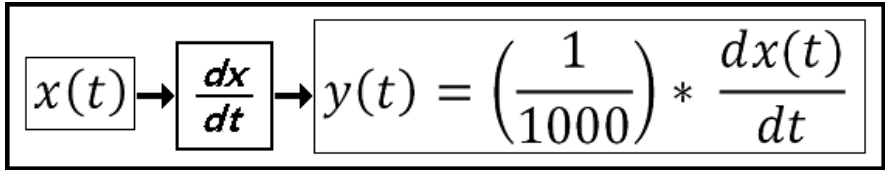

## Cut-off/centre frequency

There are several ways to set the *cut-off/centre frequency*.

- **Predefined:** There is a pre-selection of different cut-off frequencies
- **Fixed:** The cut-off frequency can be specified directly
- **% of the sampling frequency:** The cut-off frequency is automatically adjusted as a percentage of the sampling frequency. With a dynamic sampling frequency, the cut-off frequency changes with the speed.
- **Harmonic:** When using this option, the cut-off frequency is automatically adjusted to the harmonic frequency. The harmonic frequency corresponds to the speed determined by the trigger group.
- **AA filter:** The cut-off frequency is automatically adjusted to the sampling frequency. It always corresponds to  $\sim 40\%$  of the sampling frequency. With a dynamic sampling frequency, the cut-off frequency changes with the speed.

The cut-off frequency is usually the frequency at which the filter has an attenuation of 3 dB.

The exception here is a filter with a Chebyshev characteristic. The cut-off frequency now corresponds to the frequency at which the filter last reached an attenuation that corresponds to the passband ripple.

The centre frequency is configured here for a bandstop. The cut-off frequencies of a bandstop are calculated with the bandwidth parameter as follows:

Lower cut-off frequency = centre frequency - (bandwidth/2)

Upper cut-off frequency = centre frequency + (bandwidth/2)

## Bandwidth

This option is available only for the bandstop filter. The bandwidth determines the distance between the cut-off frequencies of this filter. (see cut-off/centre frequency)

## Order

Specifies the order of the filter. A higher order results in a higher slope.

## Attenuation

This option is available only for the anti-hum filter. The value corresponds to the attenuation of the selected centre frequency.

## Characteristics

Specifies the characteristic of the filter. The following characteristics are available:


- Butterworth
- Chebyshev
- Bessel
- Critical attenuation


## Ripple


Specifies the ripple of the Chebyshev filter in the passband. In addition, this parameter affects the cut-off frequency (see point 'Cut-off/centre frequency').

## Checking the conversion function


Using **Conversion function** call up the window displaying the amplitude and phase responses. The function is not available if you specify sample frequency over rotation in the **Main settings** tab, because the filters have to be calculated dynamically in this case.

 shows/hides the grid.


 switches the frequency axis between linear and logarithmic representations.

 shows/hides a red cursor (underscore) under amplitude, frequency and phase information. Drag the cursor with the mouse to the desired position in order to read the values.

 allows you to move the curves displayed in the window.

 hides the red cursor.

**Reset** resets the display to the standard settings.

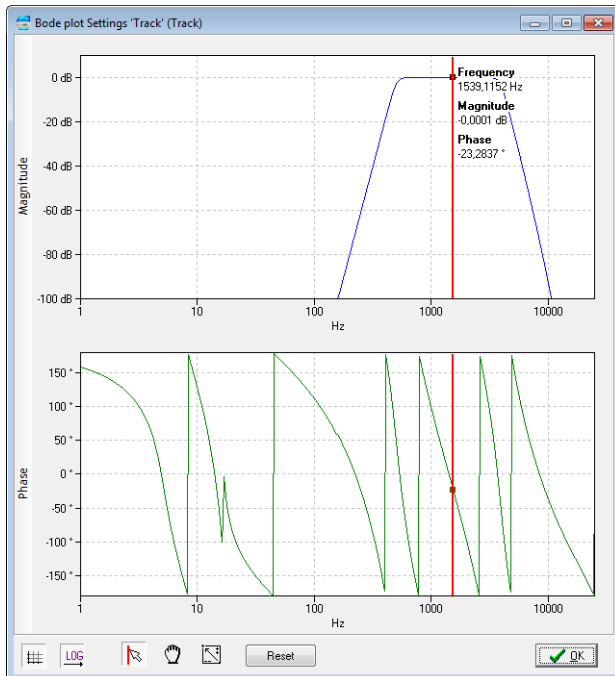


The example shows the amplitude and phase response of the above settings, the cursor is at the bandstop filter frequency.


### Validity range of integrated signals

Depending on the frequency of the high-pass filter used, the output amplitudes of the integration are limited. The following diagrams show the maximum amplitudes of a sinus signal relative to the frequency of different high-passes. The diagrams include both the linear x-axis (frequency axis) and the logarithmic x-axis to achieve better readability.


### Input limits of the integrator (linear representation)

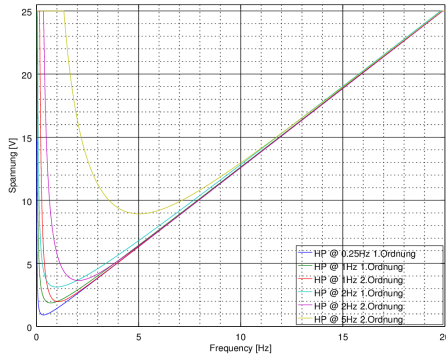


### Input limits of the integrator (logarithmic representation)

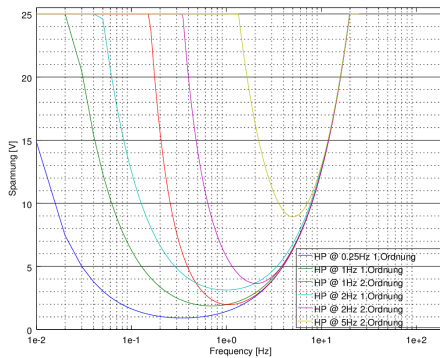

### Input limits of the double integrator (linear representation)

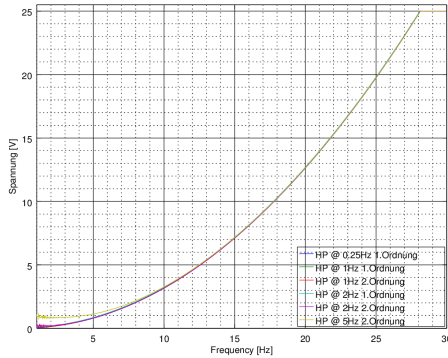

### Input limits of the double integrator (logarithmic representation)

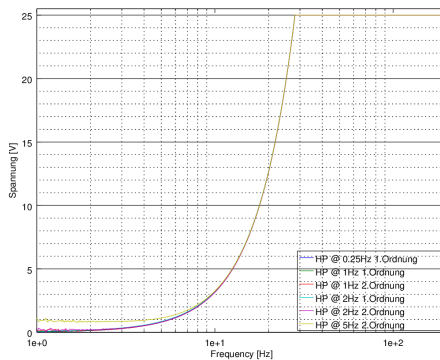


#### 4.10.4.4 FFT/spectrum

If you generate a spectrum (via a fast Fourier transform, for example an FFT) for a track, in the **Basic settings** tab specify how calculation should be carried out.

Relative to this function, you can determine further information, such as maximum amplitude, phase or the frequency with maximum amplitude. The characteristic values can be calculated across the entire spectrum as well as on a partial range.



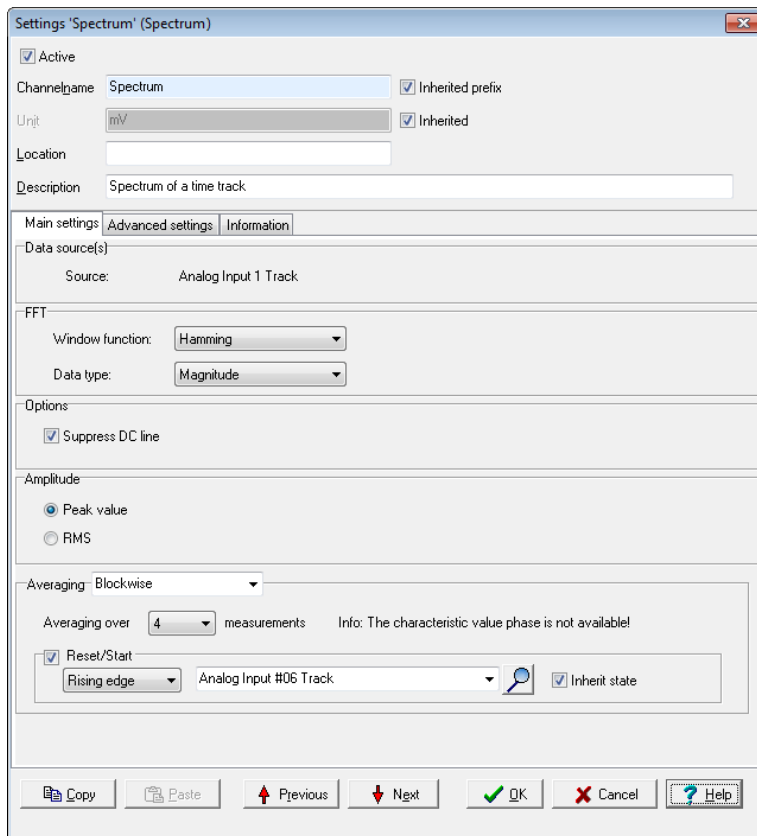

Settings 'Spectrum' (Spectrum)

Active

Channelname: Spectrum  Inherited prefix

Unit: mV  Inherited

Location:

Description: Spectrum of a time track

Main settings | **Advanced settings** | Information

Data source(s)

Source: Analog Input 1 Track

FFT

Window function: Hamming

Data type: Magnitude

Options

Suppress DC line

Amplitude

Peak value

RMS

Averaging: Blockwise

Averaging over: 4 measurements Info: The characteristic value phase is not available!

Reset/Start

Rising edge Analog Input #06 Track  Inherit state

Copy Paste Previous Next OK Cancel Help

**Window function:** Sets which window function should be used. For signals that over the course of a single FFT do not begin and end at zero, Hamming or von Hann (also called Hanning) are well suited.

**Data type** specifies the calculation to be carried out: Amplitude or phase.

**Suppress DC component:** Remove the DC component (amplitude at 0Hz.).

**Amplitude:** Upon selection of the *effective value*, the peak value is scaled by approx. 0.7; otherwise, the peak values of the spectral components will be used. The setting affects only channels that also calculate amplitudes.

## Averaging


Optionally, you can set that averaging (*Averaging over x measurements*) is to be performed on several FFTs. The number of measurements

corresponds to the number of FFTs on which the averaging is performed. In the case of **PeakHold**, only the top peak values and/or effective value per spectral component will be stored.

If you enable **Reset/Start**, you can terminate the averaging by way of a signal and have it restarted. **Inherit status** does not have any function here.

Refer also to "**Trigger options**" on page 53.

## Phase

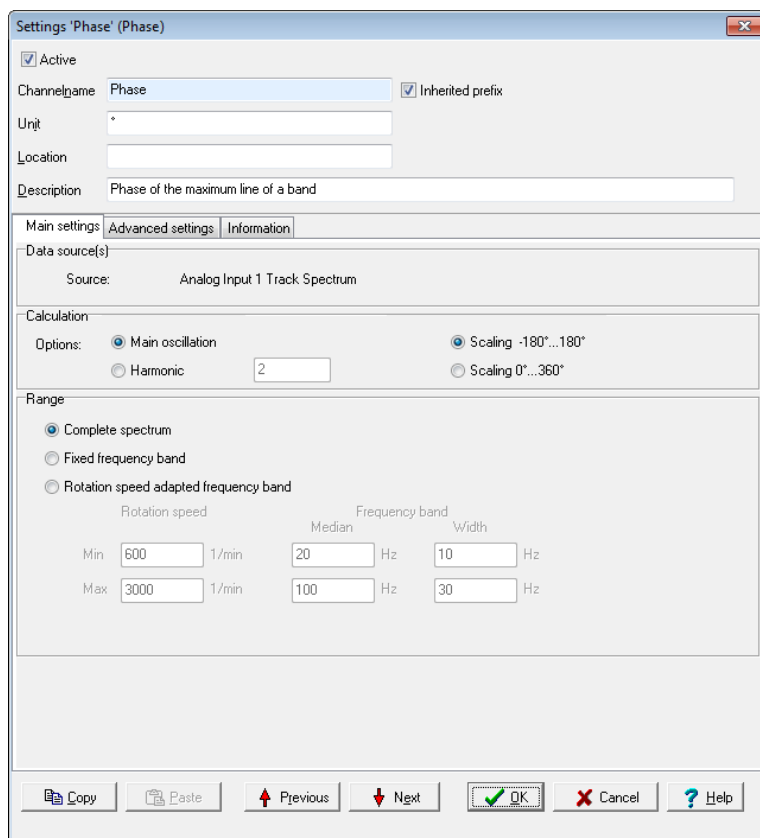


	Rotation speed	Median	Width
Min	600 1/min	20 Hz	10 Hz
Max	3000 1/min	100 Hz	30 Hz


Specify on the **Main settings tab** whether the phase for the main vibration or a specific **harmonic** of the system is to be determined. If you do not want the calculation to include the full spectrum, you can select partial ranges in **Range**. Specify whether the **full spectrum**, a **fixed frequency**

**band** or a **frequency band adapted to rotation speed** is to be monitored for this purpose.

**Main vibration**: The largest amplitude in the frequency spectrum is found and the phase of such amplitude output.

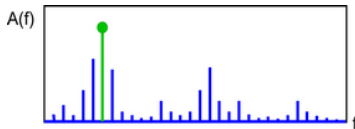

**Harmonic**: This determines the phase for the specified harmonic, such as for the 2nd harmonic, that is, the first harmonic. The following illustration shows the first, second and third harmonic (the first harmonic is the fundamental oscillation).

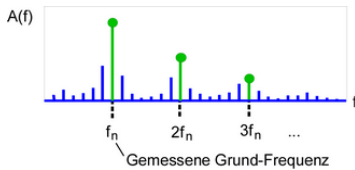


**Fixed frequency band/Frequency band adapted to rotation**: The calculation specified above is carried out only for a specific frequency band (frequency range). The corresponding amplitude in a specified frequency band is found and the phase of such amplitude output. The frequency band is determined via the rotation **middle** and **width** or **min/max**.




The **Harmonic band** and **Frequency band adapted to rotation** functions require a configured [rotation channel](#).

## Frequency

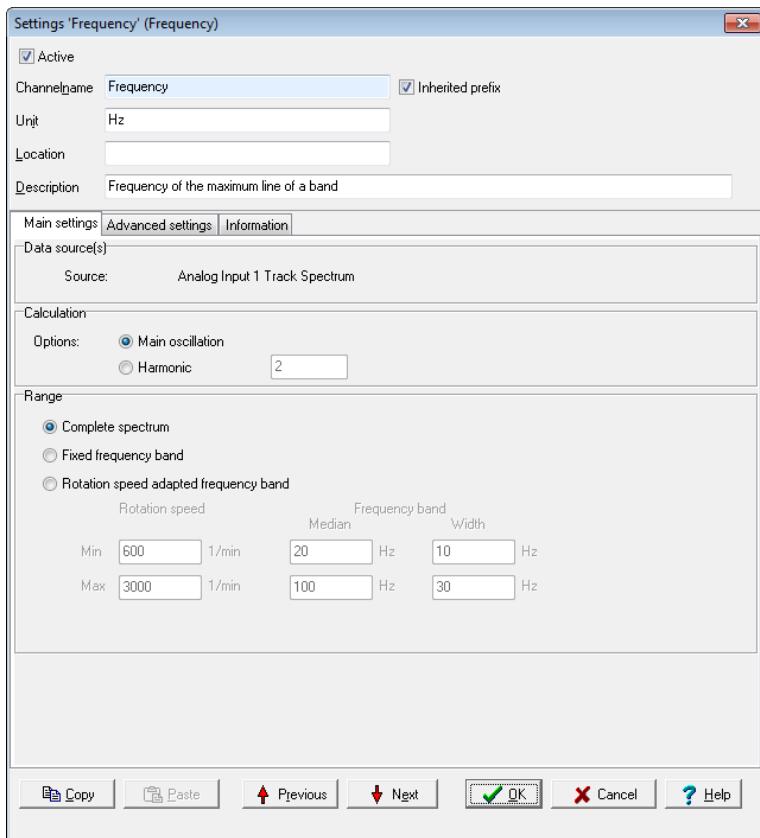


Specify on the **Main settings tab** whether the main vibration or a specific **harmonic** of the system is to be determined. If you do not want the calculation to include the full spectrum, you can select partial ranges in **Range**. Specify whether the **full spectrum**, a **fixed frequency band** or a **frequency band adapted to rotation speed** is to be monitored for this purpose.


**Main vibration**: The largest amplitude in the specified range is found, and it is the frequency of this amplitude that is output.

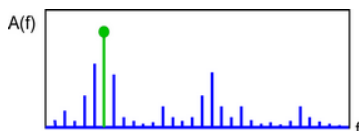

**Harmonic:** This determines the frequency for the specified harmonic, such as for the 2nd harmonic, that is, the first harmonic. The following illustration shows the first, second and third harmonic (the first harmonic is the fundamental oscillation).

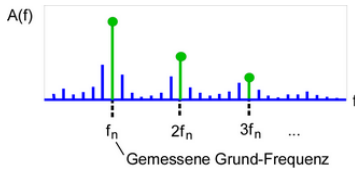

**Fixed frequency band/Frequency band adapted to rotation:** The calculation specified above is carried out only for a specific frequency band (frequency range). The corresponding amplitude in a specified frequency band is found and its frequency output. The frequency band is determined via the rotation **middle** and **width** or **min/max**.

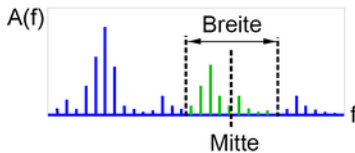

The **Harmonic band** and **Frequency band adapted to rotation** functions require a configured [rotation channel](#).

## Amplitude

Settings 'Amplitude' (Amplitude)

Active

Channelname:   Inherited prefix

Unit:   Inherited

Location:

Description:

Main settings | **Advanced settings** | Information

Data source(s)

Source:

Calculation

Type:  Main oscillation  
 Harmonic   
 RMS  Alternate formula  
 Sum  
 Remainder

Range


Complete spectrum  
 Fixed frequency band  
 Rotation speed adapted frequency band

Rotation speed		Frequency band	
Min	Max	Median	Width
<input type="text" value="600"/> 1/min	<input type="text" value="3000"/> 1/min	<input type="text" value="20"/> Hz	<input type="text" value="10"/> Hz
<input type="text" value="3000"/> 1/min	<input type="text" value="3000"/> 1/min	<input type="text" value="100"/> Hz	<input type="text" value="30"/> Hz


On the **Main settings** tab, set by which characteristic value the amplitude is to be determined: **main vibration**, **harmonic**, **RMS**, **total value** or **residual value**.

If you do not want the calculation to include the full spectrum, you can select partial ranges in **Range**. Specify whether the **full spectrum**, a **fixed frequency band** or a **frequency band adapted to rotation speed** is to be monitored for this purpose.

**Main vibration**: The largest amplitude in the specified range is found, and it is this amplitude that is output.

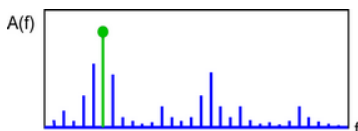

**Harmonic:** This determines the amplitude for the specified harmonic, such as for the 2nd harmonic, that is, the first harmonic. The following illustration shows the first, second and third harmonic (the first harmonic is the fundamental oscillation).

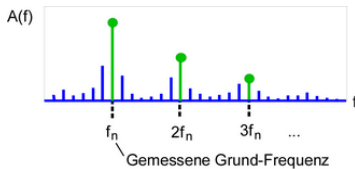

**RMS:** The amplitudes of the individual lines are squared, totalled and divided by the number of lines. The square root of this is used as the result. The number of lines depends on the number of FFT points on the basis of which the spectrum is calculated.


$$\text{RMS} = \text{SQRT}(\sum_{\text{all lines}} (\text{line amplitude}^2)/n)$$

The **alternative formula** is identical to the Total value function. The option has been preserved for reasons of compatibility.

**Total value:** Unlike RMS, the total value is not divided by the number of lines, but only by 2.

**Residual value:** This function is calculated in the same way as RMS, but not all lines are used. The first harmonic (fundamental oscillation), the second and third harmonic as well as the specified number of lines (1, 3 or 5), to the right and left of this harmonic, respectively, will be excluded. If so desired, you can also exclude any further harmonic with secondary lines.

**Fixed frequency band/Frequency band adapted to rotation:** The calculation specified above is carried out only for a specific frequency band (frequency range). The frequency band is determined via the rotation **middle** and **width** or **min/max**.

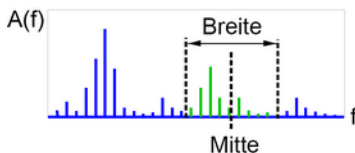


The **Harmonic band** and **Frequency band adapted to rotation** functions require a configured [rotation channel](#).

## Rolling bearing

This channel provides amplitude sums for various harmful frequencies of a rolling bearing.

### Main settings tab

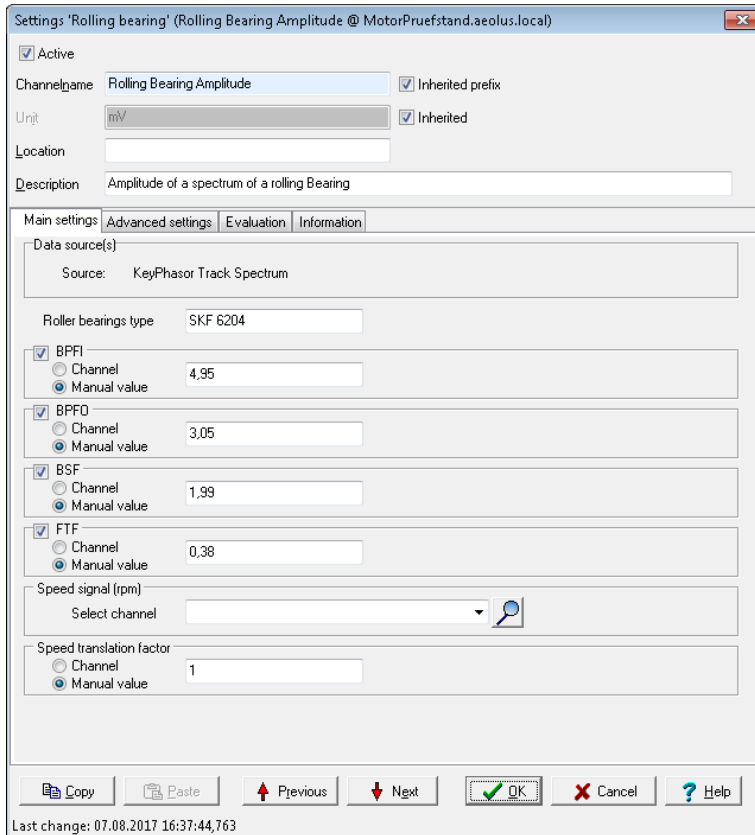

Settings: 'Rolling bearing' (Rolling Bearing Amplitude @ MotorPruefstand.aeolus.local)

Active

Channelname: Rolling Bearing Amplitude  Inherited prefix

Unit: mV  Inherited

Location:

Description: Amplitude of a spectrum of a rolling Bearing

Main settings | **Advanced settings** | Evaluation | Information

Data source(s)

Source: KeyPhasor Track Spectrum

Roller bearings type: SKF 6204

BPF1

Channel  Manual value 4,95

BPF0

Channel  Manual value 3,05


BSF

Channel  Manual value 1,99

FTF

Channel  Manual value 0,38

Speed signal (rpm)

Select channel:  

Speed translation factor

Channel  Manual value 1

Copy Paste Previous Next OK Cancel Help

Last change: 07.08.2017 16:37:44,763

The values for (**BPF1**, **BPF0**, **BSF** and **FTF**) can be taken from the specification of the bearing used.

**BPF1** (rolling element pass frequency inner race): the frequency at which the rolling elements pass the inner ring.

**BPF0** (rolling element pass frequency outer race): the frequency at which the rolling elements pass the outer ring.

**BSF** (bearing spin frequency rolling elements): the frequency at which the ball-/rolling elements roll relative to a tread.

**FTF** (fundamental train frequency): The rotational speed of the cage or the bearing element modulation frequency



**Speed signal (rpm):** The speed can correspond directly to the bearing speed, but it can also be subject to a gear ratio. (N)

**Speed ratio factor:** Multiplication factor to get the actual speed of the bearing from the speed signal. For example, 3.15 when the bearing is running at 3.15 speed as indicated by the speed signal (and is scaled in rpm). ( $\ddot{u}N$ )

**The frequencies to be monitored are calculated as follows:**

- $f_{BPFI} = N/60 * \ddot{u}N * BPFI$
- $f_{BPFO} = N/60 * \ddot{u}N * BPFO$
- $f_{BSF} = N/60 * \ddot{u}N * BSF * 2$
- $f_{FTF} = N/60 * \ddot{u}N * FTF$

## Evaluation tab

The evaluation provides the sum of all amplitudes for all selected spectral lines. Either only the sum of the fundamental oscillation(s), the harmonic (s) up to the selected orders (1, 2, 3, 4 multiples of the fundamental frequency) or the sidebands (respectively left + right SB).

Settings: 'Rolling bearing' (Rolling Bearing Amplitude @ MotorPruefstand.aeolus.local)

Active

Channelname: Rolling Bearing Amplitude  Inherited prefix

Unit: mV  Inherited

Location:

Description: Amplitude of a spectrum of a rolling Bearing

Main settings | **Advanced settings** | Evaluation | Information

Evaluation

Fundamental frequency

Harmonious

Sidebands

Spectral lines radius

Output value

Amplitude sum

Amplitude ratio

Last change: 07.08.2017 16:37:44,763


As a result type (*output value*), the ratio between the harmonics/sideband ratio and the fundamental oscillation ("amplitude ratio") is selectable in addition to the amplitude sum.

The *amplitude ratio* is calculated as  $\text{SQRT}(\text{SUM}(A_x^2))/A_1$  (sum of the squares of the amplitudes from the selected harmonic/sidebands divided by the amplitude of the fundamental oscillation). If amplitude ratio is selected, either the *harmonic* or *sideband* (or both) must be selected, as a minimum. The fundamental oscillation is automatically selected.

## Gear stage

This channel provides amplitude sums for various harmful frequencies of a gear box.

## Main settings tab

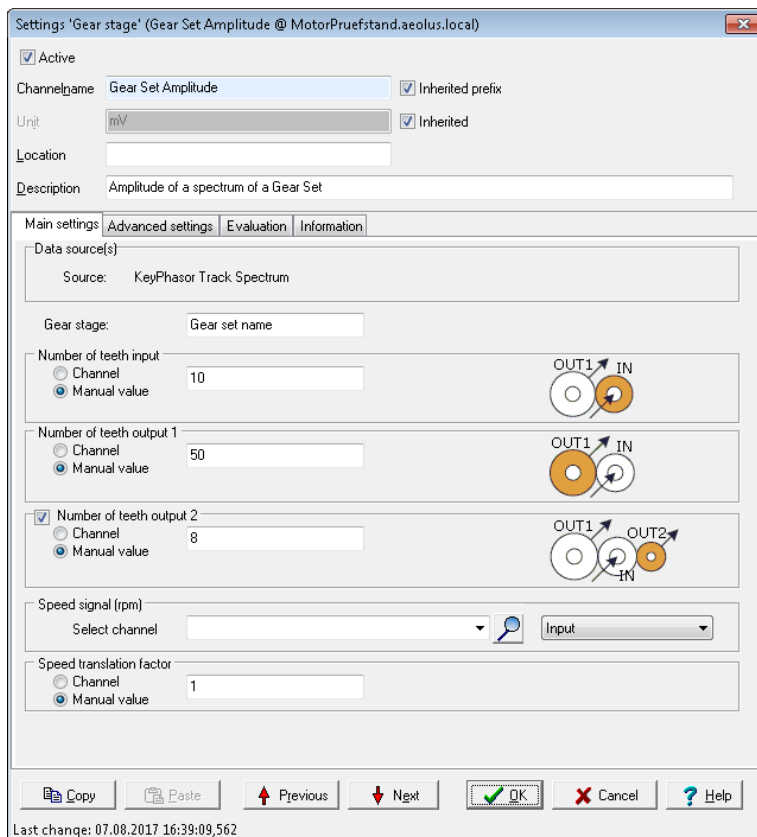

**Number of teeth input** ( $zE$ ), **Number of teeth output 1** ( $zA1$ ), **Number of teeth output 2** ( $zA2$ )

**Speed signal (rpm)**: The speed of the gear wheel (in rpm) can correspond directly to the speed signal ( $N$ ), but can also be transmitted with a gear ratio (speed transmission ratio).

(Drive | Output 1 | Output 2) Indicates which gear wheel the speed signal ( $N$ ) and the speed transmission ratio ( $\ddot{u}N$ ) refer to. The rotational frequencies of the respective other gear wheels are calculated from the gear ratios.


**Speed ratio factor**: Multiplication factor to get the actual speed of the selected gear wheel from the speed signal. For example, 3.15 if the corresponding gear wheel rotates faster by a factor of 3.15 than the speed signal. ( $\ddot{u}N$ )

**The rotational frequencies of the respective wheels are calculated as follows:**

- Speed signal at drive:  $fE = N/60 * \ddot{u}N$ ;  $fA1 = fE * zE/zA1$ ;  $fA2 = fE * zE/zA2$  (calculation of  $fA2$  only if "number of output stages = 2")
  - Speed signal at output\_1:  $fA1 = N/60 * \ddot{u}N$ ;  $fE = fA1 * zA1/zE$ ;  $fA2 = fE * zE/zA2 = fA1 * zA1/zA2$  (calculation of  $fA2$  only if "number of output stages = 2")
  - Speed signal at output\_2:  $fA2 = N/60 * \ddot{u}N$ ;  $fE = fA2 * zA2/zE$ ;  $fA1 = fE * zE/zA1 = fA2 * zA2/zA1$  (calculation only if "number of output stages = 2")
- If the value 1 is selected as the number of output stages, only the data from the fields for output 1 is evaluated; the calculation of the speeds (and further signals) for output 2 is not carried out.

## Evaluation tab

The evaluation provides the sum of all amplitudes for all selected spectral lines. Either only those of the fundamental oscillation, the harmonic(s) up to the selected orders (2, 3, 4 multiples of the fundamental frequency) or the sidebands (respectively left + right SB).

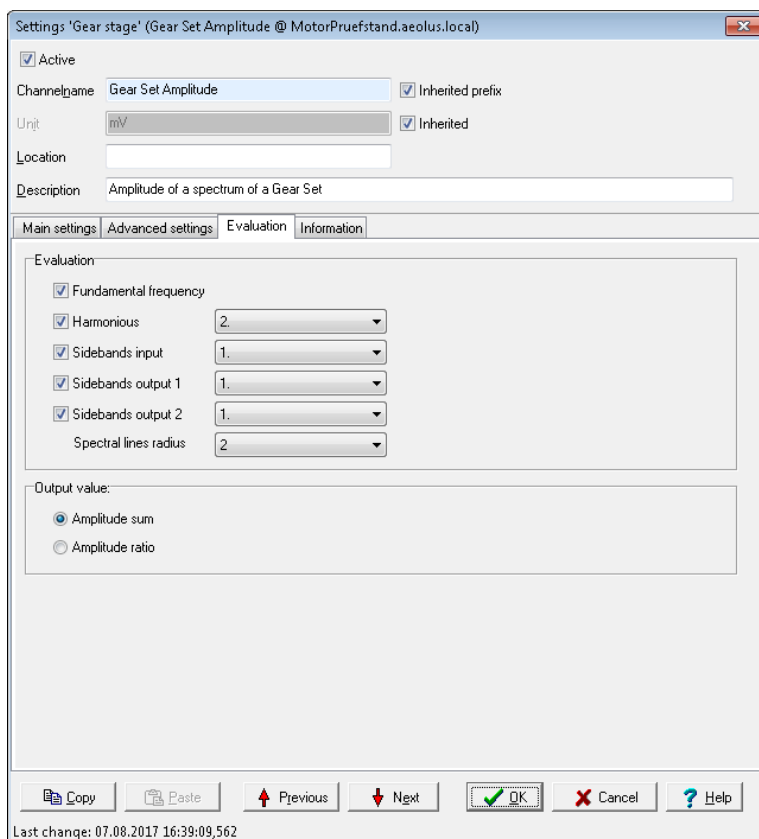

Settings: 'Gear stage' (Gear Set Amplitude @ MotorPruefstand.aeolus.local)

Active

Channelname: Gear Set Amplitude  Inherited prefix

Unit: mV  Inherited

Location:

Description: Amplitude of a spectrum of a Gear Set

Main settings | **Evaluation** | Information

Evaluation

Fundamental frequency

Harmonic: 2

Sidebands input: 1

Sidebands output 1: 1

Sidebands output 2: 1

Spectral lines radius: 2

Output value:

Amplitude sum

Amplitude ratio

Copy Paste Previous Next OK Cancel Help

Last change: 07.08.2017 16:39:09,562

As a result type (*output value*), the ratio between the harmonics/sideband ratio and the fundamental oscillation (*amplitude ratio*) is selectable in addition to the amplitude sum.

The *amplitude ratio* is calculated as  $\text{SQRT}(\text{SUM}(A_x^2))/A_1$  (sum of the squares of the amplitudes from the selected harmonic/sidebands divided by the amplitude of the fundamental oscillation). If amplitude ratio is selected, either the *harmonic* or *sideband* (or both) must be selected. as a minimum. The fundamental oscillation is automatically selected.

The fundamental oscillation (tooth mesh frequency  $f_Z$ ) is given by:  $f_Z = f_E * z_E$   
 SB-STF input: Sideband spacing (frequency) Single tooth damage on the input wheel  $\text{STF}_E = f_E * n_A$

SB-STF output\_1: Sideband spacing (frequency) Single tooth damage on the output wheel 1  $\text{STF}_{A1} = f_{A1}$

SB-STF output\_2: Sideband spacing (frequency) Single tooth damage on the output wheel 2  $\text{STF}_{A2} = f_{A2}$

1st sideband for gear wheel\_input ( $\text{SB1}_{zE}$ ) is at:  $\text{SB1}_{zE} = f_Z \pm \text{STF}_E$

2nd sideband for gear wheel\_input ( $\text{SB2}_{zE}$ ) is at:  $\text{SB2}_{zE} = f_Z \pm \text{STF}_E * 2$

...

1st sideband for gear wheel\_output\_1 ( $\text{SB1}_{zA1}$ ) is at:  $\text{SB1}_{zA1} = f_Z \pm \text{STF}_{A1}$

2nd sideband for gear wheel\_output\_1 ( $\text{SB2}_{zA1}$ ) is at:  $\text{SB2}_{zA1} = f_Z \pm \text{STF}_{A1} * 2$


\* 2

...

## Planetary stage

This channel provides amplitude sums for various harmful frequencies of a planetary gear.

## Main settings tab

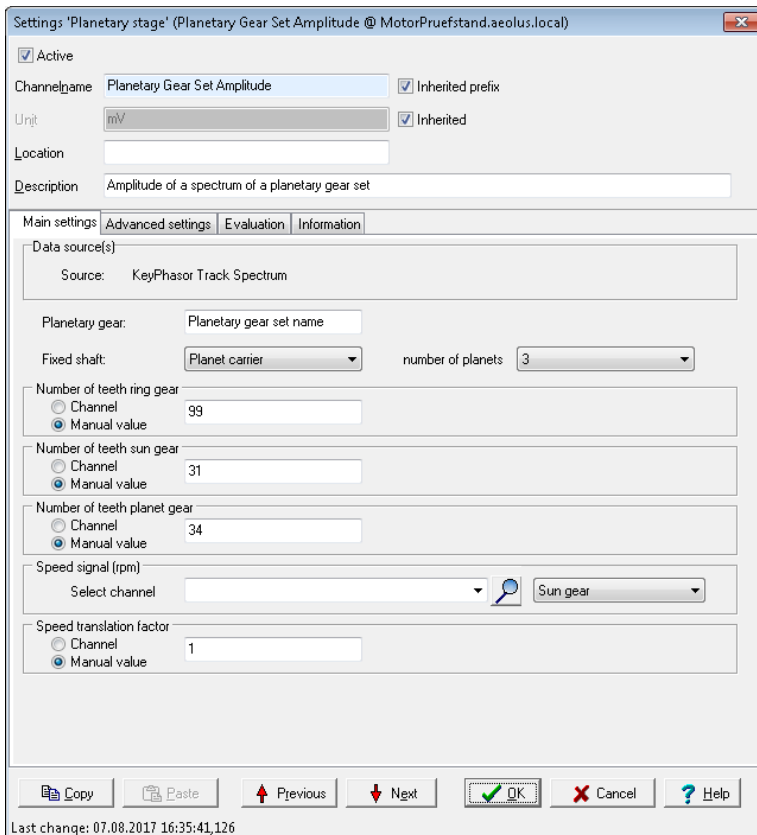

**Fixed shaft:** Marks which of the three shafts is fixed.

**Number of teeth of the ring gear (h), sun gear (s), planetary gear (p):** Installation condition must be checked ( $h=2 \cdot p+s$ )

**Speed signal (rpm):** The speed of the corresponding shaft (in rpm) can correspond directly to the speed signal (N), but can also be transmitted with a gear ratio (speed transmission ratio).

(Ring gear | sun gear | bridge) Specifies the shaft to which the speed signal applies; the rotational frequency of the respective other shafts is calculated from the number of teeth indicated and the "fixed shaft".

**Speed ratio factor:** Multiplication factor in order to obtain the actual speed of the defined shaft from the speed signal. Z.b. 3,15 wenn z.b. das Hohlrاد mit 3,15 facher Drehzahl wie durch Drehzahlsignal angegeben läuft. Das Drehzahlsignal ist (wie vorher) in rpm skaliert und vor der Weiterverarbeitung auf Hz umzurechnen (1/60). (üN)


## Evaluation tab

The evaluation provides the sum of all amplitudes for all selected spectral lines. Either only those of the fundamental frequency (tooth mesh frequency  $f_z$ ), the harmonic ( $n * f_z$ ) of the meshing frequency to the selected orders (2, 3, 4, 5, 6 multiples of the fundamental frequency) or the sidebands (respectively left + right SB to tooth mesh frequency  $f_z$ ).



### Note:

The total tooth mesh frequency  $f_{zp}$  can be far above the detectable frequency depending on the speed and the number of planetary gears. All frequency components that are outside the detected spectrum must be evaluated with a value of zero.

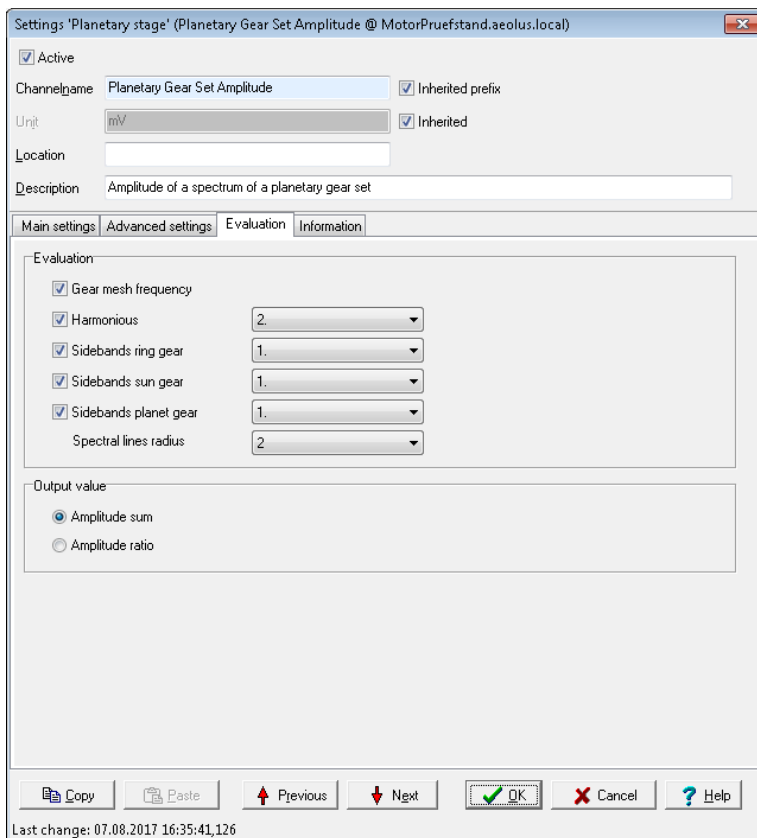

Settings: 'Planetary stage' (Planetary Gear Set Amplitude @ MotorPruefstand.aeolus.local)

Active

Channelname: Planetary Gear Set Amplitude  Inherited prefix

Unit: mV  Inherited

Location:

Description: Amplitude of a spectrum of a planetary gear set

Main settings | **Evaluation** | Information

Evaluation

- Gear mesh frequency
- Harmonious: 2
- Sidebands ring gear: 1
- Sidebands sun gear: 1
- Sidebands planet gear: 1
- Spectral lines radius: 2

Output value

- Amplitude sum
- Amplitude ratio

Copy Paste Previous Next OK Cancel Help

Last change: 07.08.2017 16:35:41,126

The fundamental vibration (*tooth mesh frequency*  $f_z$ ) is given by the equations for planetary gear sets (see table: Harmful frequencies of planetary gears):

As a result type (*output value*), the ratio between the harmonics/sideband ratio and the tooth mesh frequency (*amplitude ratio*) is selectable in addition to the *amplitude sum*.

The amplitude ratio is calculated as  $\text{SQRT}(\text{SUM}(A_x^2))/A_1$  (sum of the squares of the amplitudes from the selected harmonic/sidebands divided by the amplitude of the tooth mesh frequency). If amplitude ratio is selected, either *harmonic* or *sideband* (or both) must be selected. as a minimum. The tooth mesh frequency is automatically selected.

$f_z$  = tooth mesh frequency for a single planetary gear

$f_{zp} = f_z * k_p \Rightarrow$  tooth mesh frequency for all planetary gears together

*Sidebands*: The rollover frequency of a single tooth damage (on the respective wheel) must be taken as the sideband distance to the tooth mesh frequency. Calculation formulas are in the table [Harmful frequencies of planetary gears](#).

*STF ring gear (fh)*: SingleToothFrequency on the ring gear (single tooth overrun frequency on the ring gear)

*STF sun gear (fs)*: SingleToothFrequency on the sun gear (single tooth roll frequency on the sun gear)

*STF planetary gear (fp)*: SingleToothFrequency on the planetary gear (single gear rollover frequency on a single planetary gear)

## Harmful frequencies of planetary gears (general)


Designations			Number of teeth		Bridge fixed	Ring gear fixed	Sun gear fixed
Number of teeth sun gear	s		31		31	31	31
Number of teeth planetary gear	p		34		34	34	34
Number of teeth ring gear	h		99		-99	-99	-99
Number of planetary gears	kp		5		5	5	5
Status/total transmission (N_Dyno / N_UUT)	i0		-3.1935		-3.1935	-3.1935	-3.1935
Rotational frequencies		Bridge fixed	Ring gear fixed	Sun gear fixed			
Sun gear speed (Hz)	Ns	Nh * h/s	Ns	0	-3.2	1.0	0.0
Bridge rotation frequency (Hz)	Nst	0	Ns * s / (s + h)	Nst	0.0	0.2	1.0
Ring gear rotation frequency	Nh	Nh	0	Nst * (s +	1.0	0.0	1.3




quency (Hz)				h)/h			
Planetary gear rotation frequency (Hz)	$N_p$	$N_h * h/p$	$N_s * s/(h-s)$	$N_{st} * (h+s)/(h-s)$	2.9	0.5	1.9
<b>Damage frequencies</b>							
Basic tooth engagement frequency (Hz)	$f_z$	$N_h * h$	$N_s * h * s/(s+h)$	$N_{st} * s$	99.00	23.61	31.00
Total tooth engagement frequency (Hz)	$f_{zp}$	$N_h * h * k_p$	$N_s * h * s/(s+h) * k_p$	$N_{st} * s * k_p$	495.00	118.04	155.00
Overrunning frequency single tooth damage on the sun gear (Hz)	$f_s$	$N_h * h / s * k_p$	$S * h/(s+h) * k_p$	$N_{st} * k_p$	15.97	3.81	5.00
Overrunning frequency single tooth damage on planetary gear (Hz)	$f_p$	$2 * N_h * h/p$	$2 * N_s * s * h/(p * (s+h))$	$2 * N_{st} * s/p$	5.82	1.39	1.82
Overrunning frequency single tooth damage on the ring gear (Hz)	$f_h$	$N_h * k_p$	$N_s * s/(s+h) * k_p$	$N_{st} * s/h * k_p$	5.00	1.19	1.57

#### 4.10.4.5 Min/Max/Peak-to-peak (PP)

This function allows you to determine the minimum (lower value on the graph), the maximum (upper value in the graph) or the peak-to-peak value (difference between minimum and maximum) for a signal. The time period over which the characteristic values are determined, is obtained from the [Trigger group](#) settings.

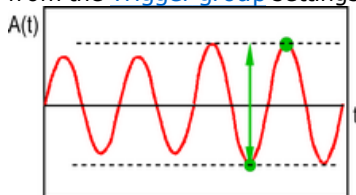

Set the desired function in the **Main settings** tab.

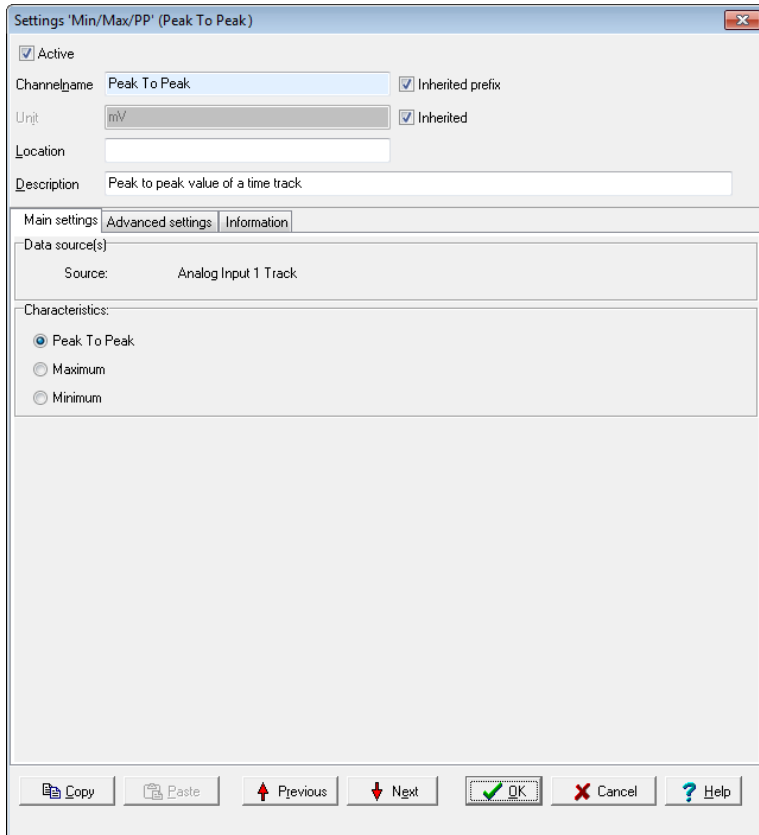

#### 4.10.4.6 Average/RMS

This function allows you to determine the average value or the effective value (RMS). The arithmetical average is also referred to as a signal's steady or DC component. This characteristic value is also available if you have enabled the 'AC coupling' option for the analogue input (see [Configuring analogue inputs](#)). You can however also enable the *RMS without DC component* option here. The time period over which the characteristic values are determined, is obtained from the [Trigger group](#) settings.

The mean is calculated using the following formula:

$$y = \frac{1}{n} * \sum_{i=0}^{n-1} x_i$$

$x_i$  = amplitude at sampling point i

n = number of sampling values  
y = arithmetic average


The effective value is calculated using the following formula:

$$y = \sqrt{\frac{1}{n} * \sum_{i=0}^{n-1} x_i^2}$$

$x_i$  = amplitude at sampling point i  
n = number of sampling values  
y = true root mean square



The accuracy for TRMS calculations on sine signals depends on the number of signal periods acquired. The general rule is: Errors are <3% for more than two periods; and <1% for more than four periods. You enter the period in the [Trigger group](#) settings.

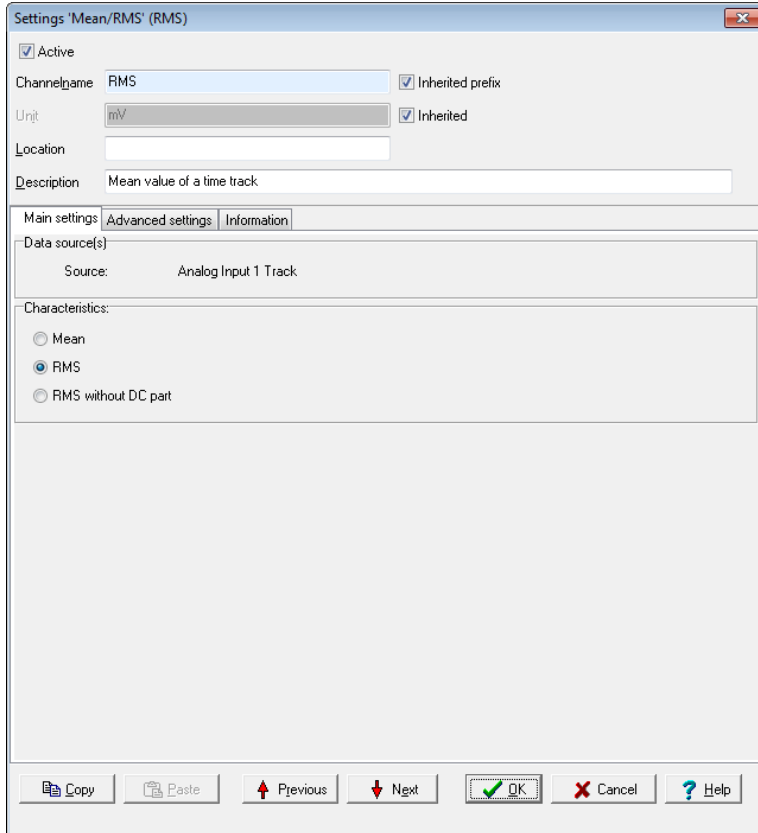

#### 4.10.4.7 Vector sum


The function performs vectoral addition of all amplitude values from the time signals' of two channels and then determines the *maximum*. The time period over which the characteristic values are determined is obtained from the [Trigger group](#) settings.

$$z_i = \sqrt{x_i^2 + y_i^2}$$


$x_i$  = amplitude at sampling point  $i$ , first channel

$y_i$  = amplitude at sampling point  $i$ , second channel

$z_i$  = vector sum at sampling point  $i$

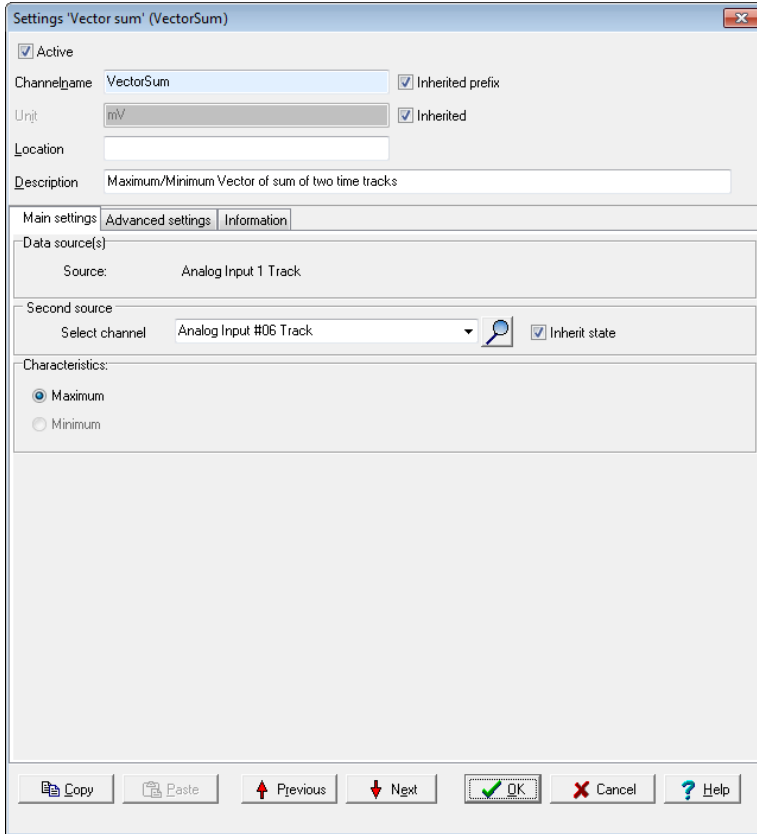

#### 4.10.4.8 Local min/max values

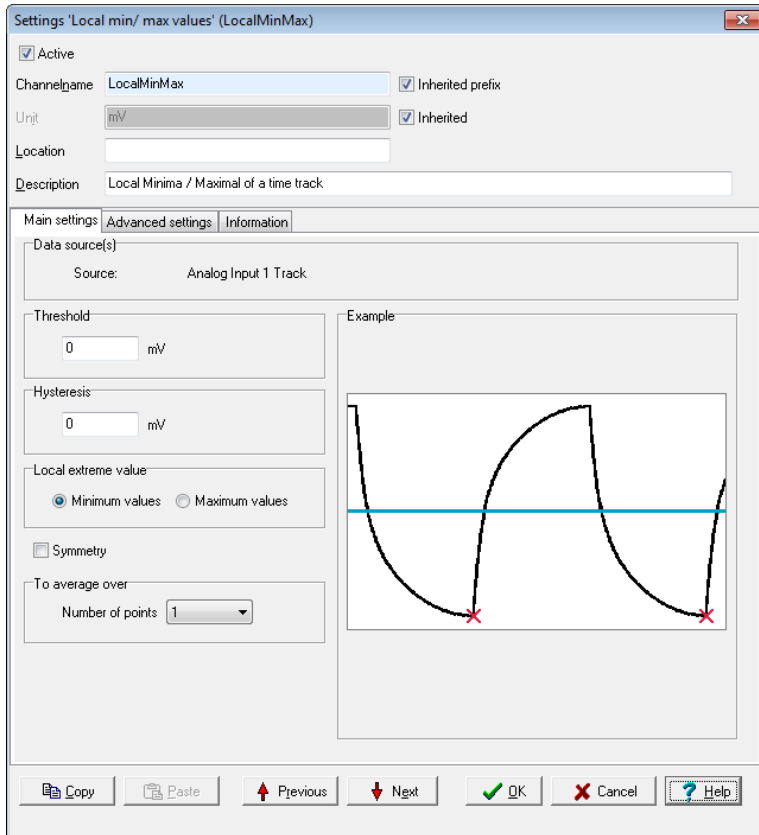

This function allows you to determine the minimum or maximum values of a signal relative to a threshold value. The time period over which the characteristic values are determined, is obtained from the ["Trigger Group" on page 91](#) settings.

**Threshold** is the decisive value in determining minimum or maximum values.


**Hysteresis** prevents undesired values from being determined for small fluctuations around the threshold value in the monitored signal. Depending on the configuration, the hysteresis lies below the threshold (for maximum values) or above the threshold (for minimum values). See images.

**Local extreme values:** Specify whether minimum or maximum values are to be determined.


When using *symmetry*, it is not the minimum or maximum value that is determined, but the value right between the threshold overrun and under-run (for maximum values) or between threshold underrun and overrun (for minimum values).

**Calculate average from:** The minimum or maximum values determined are averaged arithmetically once again by their adjacent values.


Minimum without symmetry:

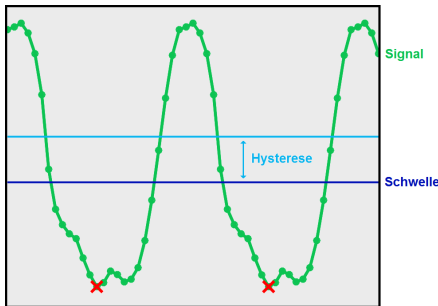


Minimum with symmetry:

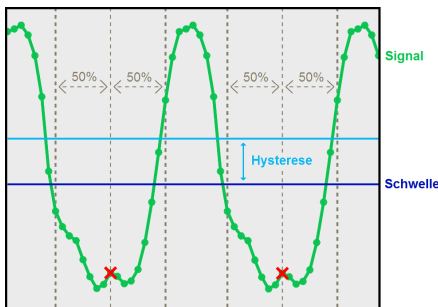

Maximum without symmetry:

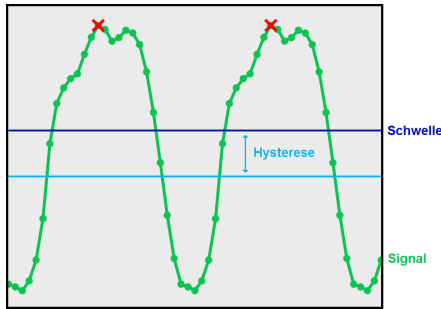

Maximum with symmetry:

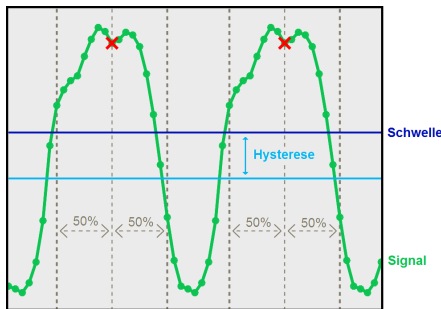

#### 4.10.4.9 Sample rate

The function outputs the sample rate currently used in the channel. This allows you to see the frequency for the settings *bandwidth* or *rotation adaptive* that results for *sampling*.

#### 4.10.5 Raw data track

The raw data track contains all measurement values following the A/D conversion without any further filtering.



**The high A/D conversion rates used here generate a huge number of measurement values in a short amount of time.**

#### 4.10.6 Configuring digital inputs

Refer also to [Settings for all dialogues](#), [Galvanic isolation](#)




Your device has ports that can be used only as digital inputs and ports that can be used both as inputs and as outputs. As long as you choose **digital input** as **mode** for these ports, these are identical to the pure inputs.

## Method for digital inputs

1. Specify the logical level for the input (normal or inverted).
2. Indicate which replacement value is to be used if the input fails. Refer to "[Additional settings tab](#)" on page 48.
3. Sets how the input should be used: for counting or for frequency measurement.

## Main settings tab

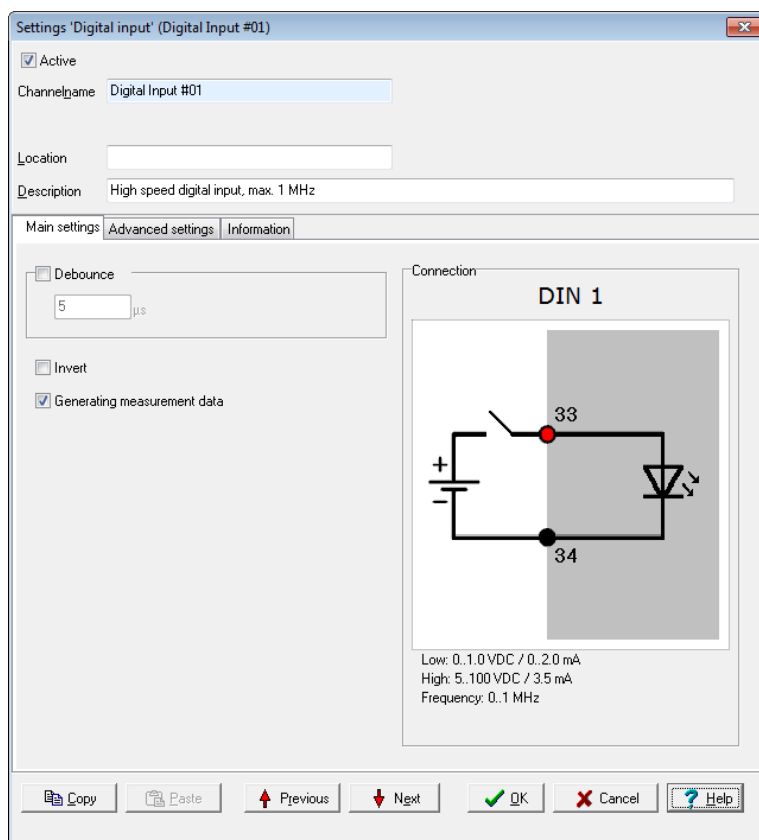


**Debouncing:** To hide short interference pulses, here you can specify a time period that you want to elapse before a signal is evaluated.

**Inverted:** This option inverts a 'high' level at the input to a 'low' level at the output (measurement signal in device) and vice versa.

**Generating measurement data:** When this option is enabled, all resulting measurement data is transferred, although, for example, in the DataService Configurator **channels** tab, only one measured value will be shown. The display of individual measured values in DataService Configurator also works when this option is disabled. You only need to enable the option therefore if you want to see a graphical representation of the *route* or the overall result.

#### 4.10.6.1 Counter (hardware)

This channel counts the edges of a digital signal.  
Refer also to "[Counter](#)" on page 206 (software).

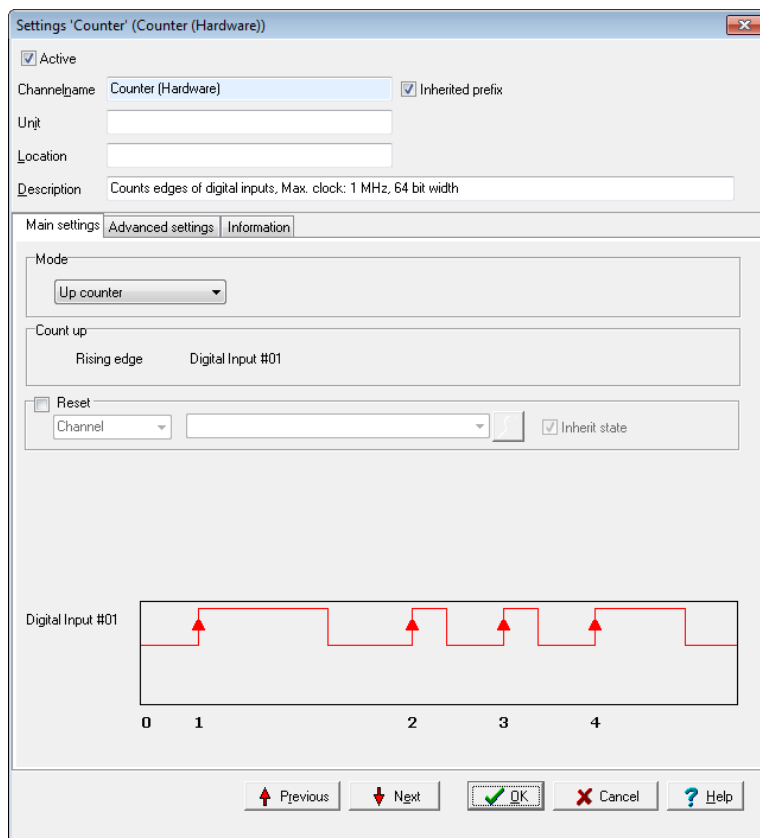

Settings 'Counter' (Counter (Hardware))

Active

Channelname: Counter (Hardware)  Inherited prefix

Unit:

Location:

Description: Counts edges of digital inputs, Max. clock: 1 MHz, 64 bit width

Main settings | **Advanced settings** | Information

Mode:

Count up: Rising edge Digital Input #01

Reset

Channel:    Inherit state

Digital Input #01

0 1 2 3 4

## Mode

**Upwards counter:** Each rising edge at the input increases the counter by one.

**Downwards counter:** Each rising edge at the input decreases the counter by one.

**Up/down counter:** Each rising edge at the input increases the counter; each rising edge at the input specified for **downward count** decreases the counter.

**Position counter:** When the level is high at the input specified for **Direction**, each rising edge increases the counter by one, or decreases the counter by one if the level is low.

**Quadrature decoder:** The counter is increased by one if the signal at this input (**A**) has an edge before the signal at the input specified for **B**. Otherwise, the counter is reduced by one (signal **B** before signal **A**). Depending on the quadrature mode, the following will be evaluated (counted): only the rising edge of signal **A** (**1x**), both edges of signal **A** (**2x**), or all edges of the signals **A** and **B**.

You can use the function, for example, to determine the rotation angle at a gear via two sensors. For this purpose, the sensors must be offset by 90 degrees of a vibration (360 degrees). That is, for example, they must be aligned to the tooth and the centre between the tooth and gap and must output the distance as tooth (1) or gap (0). Use the 4x setting in the case of few teeth in order to improve the angle resolution. Note the maximum frequency of the input when dealing with many teeth or high rotation speeds.

## Reset

Select an available channel via **Channel** that will reset the counter with a rising edge. In the case of **Application**, you can achieve this via DataService Configurator or a **ProfiSignal** application. But note the time delay that is created by the transmission via the interface.




### Info

For activating **Persistence** in the **Additional settings** tab, e.g. in the event of power outage, the last counter reading is saved and counting resumes from this point.

## 4.10.6.2 Frequency

This channel determines the frequency of the signal applied.

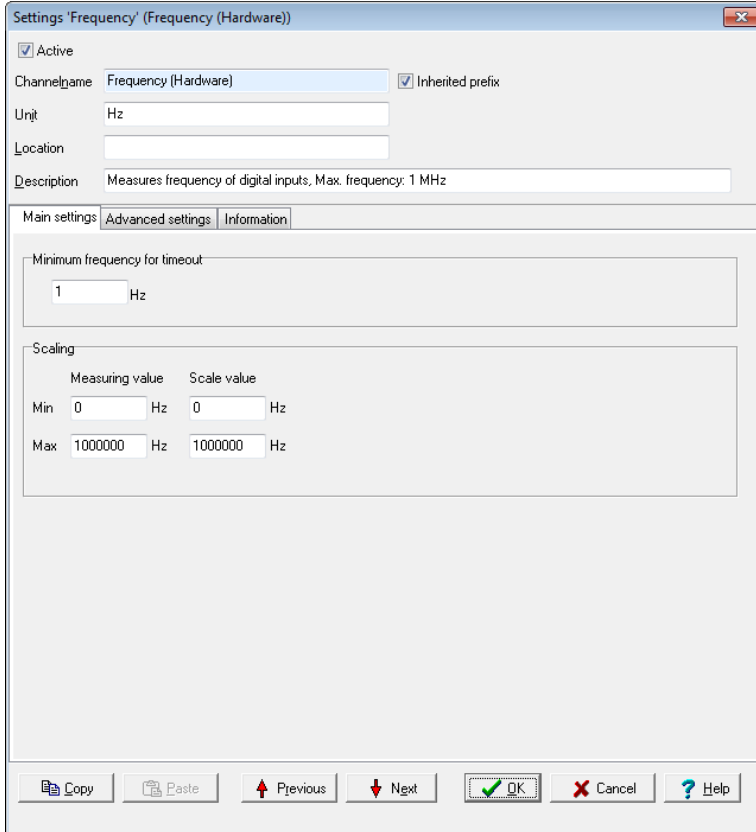

### Minimum frequency range

Below this threshold, 0 is displayed and/or output. Since the measurement value fluctuates considerably in the case of few pulses per second, the default setting for the threshold is 1 Hz. But different applications may require higher thresholds.

### Scaling

Enter two points from the sensor's characteristic curve, if possible, the lower (*Min*) and upper (*Max*) vertexes. For a linear characteristic, measurement values are then converted into the unit of measurement (**scale value**) from the sensor. The specified range is used as the default for the **ProfiSignal** graphic display area. The channel receives the status "scale

range overrun" or "scale range underrun" when not within the range. Channel status values are available in the table in [Status monitoring](#).

### 4.10.7 Digital outputs (**Expert Vibro / Expert Transient**)

#### **Mode**


You have the choice of three different settings: *Switch output*, *Fast limit value* and *PWM*. Depending on the setting, you will see further input fields.

#### **Switch output and fast limit value mode**

In *switch output* mode the output is controlled via the channel, and the response time is in the milliseconds range. In *Fast limit value* mode the output is controlled directly at Trigger group detection and the response time is in the 10  $\mu$ s range.

#### **Switch output mode:**

In *switch output* mode the output is controlled via the channel, and the response time is in the milliseconds range.

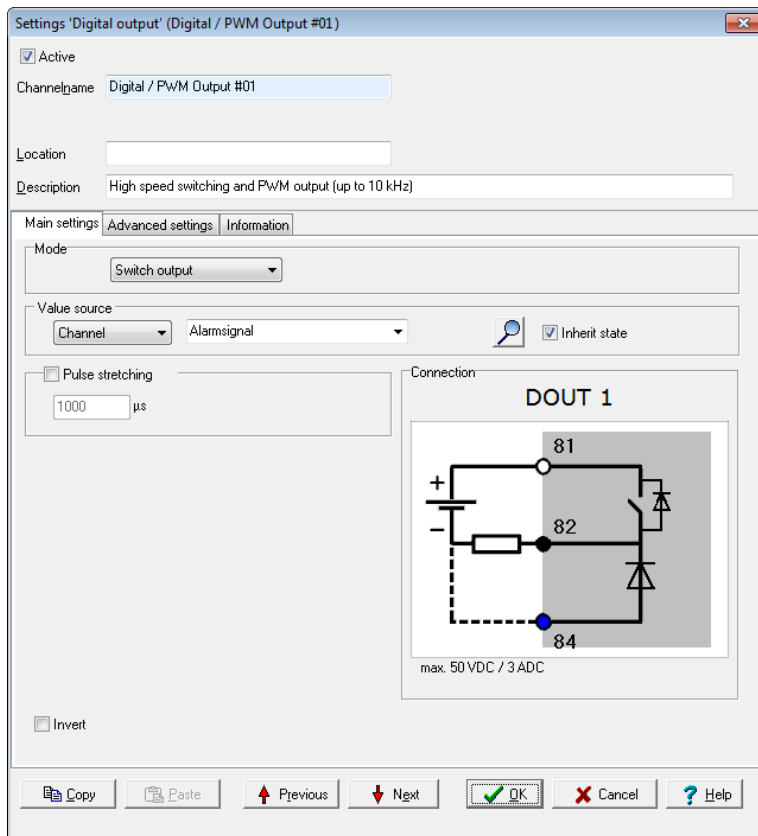


**Value source:** Select an available channel whose value is to be output using *Channel*, or enter a constant value (*Manual value*). Selecting *Application* enables the output value to be manually set via the DataService Configurator or automatically set via a ProfiSignal application.

**Inverted:** When enabled, this option inverts a 'high' level to a 'low' level at the output (measurement signal in device) and vice versa.

**Pulse stretching:** With this option you can ensure that at least one output pulse of this length is output, even if the specified value source has issued a shorter duration signal.

## PWM mode

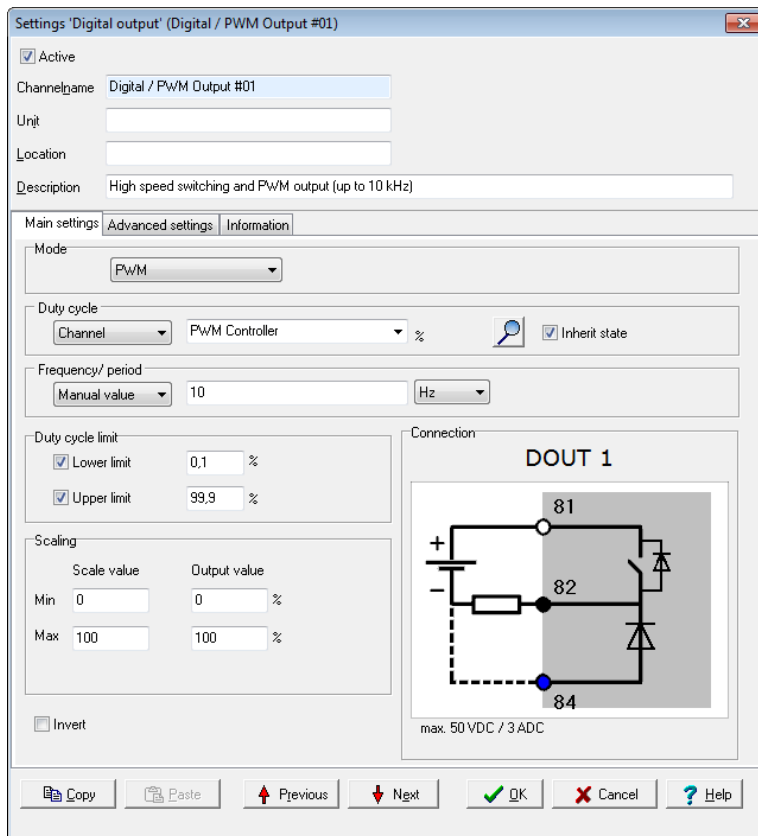

**Duty cycle:** Sets how the duty cycle should be controlled: Enter either a constant (**Manual value**) or select an existing channel from **Channel** whose value can be output as a scaling-dependent duty cycle. Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a ProfiSignal application. If you enter a channel, you must use a fixed value for the signal frequency.

**Frequency/period:** Enter a **channel** or a **manual value** (fixed frequency) for the output. If you enter a channel, you must use a fixed value for the duty cycle.

**Duty cycle restriction:** Enables you to set the variation limits for the duty cycle.

**Scaling:** Based on the scale specified here, the source signal is converted into the output value.


**Inverted:** When enabled, this option inverts a 'high' level to a 'low' level at the output (measurement signal in device) and vice versa.

## 4.11 Configuring software channels

Refer also to [Settings for all dialogues](#)

Software channels are calculations or functions that are performed within the device. In previous device families from **Delphin**, such channels were also called virtual channels. Any number of channels can be created. This is a standard feature of the device.

Display the **Software channels** in the context menu (DataService tab **Channels**). You can then either create a **Channel group** (e.g. **Analogue channels** in the example) to group together created channels, or select one of the available channel operations. The context menu contains all available calculations and functions.

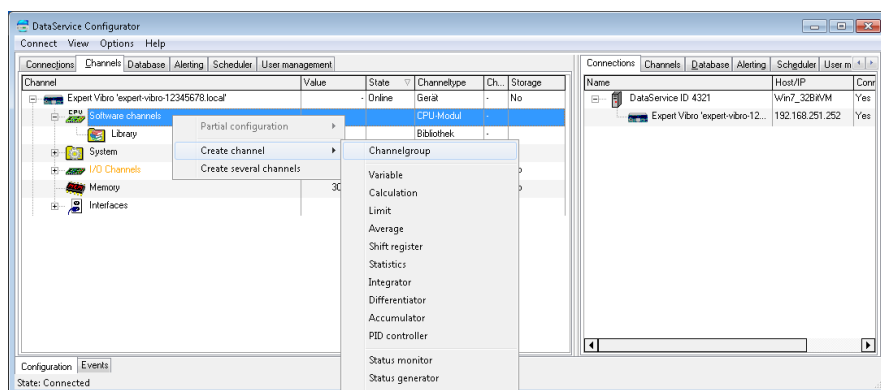

Alternatively, software channels can be created via the context menu of a hardware channel as **Create dependent channel**. In contrast to creation via **Software channel**, the source channel is already selected within the dialogue and the channel is (initially) located directly under the hardware channel. Following creation, the user-defined view enables channels to be moved and grouped differently.

Another option enables the linking of a channel. The original channel remains in the original position, but creates in another location an entry that is linked to this channel.

### Linking channels



From the **Options** of the DataService Configurator, select **Move/link channels**. Further information is available in the manual of the **DataService Configurator**. → Further information is available in the manual of the [DataService Configurator](#).

Further configuration is similar to module channels. Specific settings for each function are explained in the sections here. General information on dialogs is available in [Settings for all dialogues](#).

#### 4.11.1 Adder

This software channel adds together all values from the specified source channel:

Adder = adder + new value

**Reset**: When enabled, the calculated sum is output only in the case of a reset event and then reset internally to zero. When not enabled, the sum is output for each new value from the source channel.

Refer also to [Trigger options](#).

**Generate intermediate values**: When enabled, results are also output between reset events immediately following their calculation, (without being reset to zero).

**Initial value**: This enables you to indicate a start value. Select an available channel whose value will be used via **Channel**, or enter a constant value (**Manual value**). Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application.

#### 4.11.2 Operating hours counter

This software channel registers the time period during which the source has an active level. When the level becomes inactive, the time period is added to the existing time period.

**High level / Low level**: Sets the active level of the source.



The operating hours counter retains its value even when the scale is altered.

Enable **Reset** and configure a channel and the trigger (**edge, level**) to reset the operating hours counter at the time the reset event occurs.

Refer also to [Trigger options](#).

#### 4.11.3 Differentiator

Refer also to [Additional settings tab, "Information tab" on page 51](#).

This software channel calculates the ratio of the difference between two values from the source channel to the difference between their time stamps in relation to the time base:

$$\text{Differenzial} = \frac{(\square \text{Wert})}{\square \text{Zeichens temporal}} * \text{Zeitbasis}$$

**Time base:** Enter the time base for the calculation. The default is 1000 ms.

**Timeout:** Enable this option if a calculation is to be performed despite a constant source signal. In this case, enter the time period after which the calculation is to be performed.

**Overflow hardware counter:** Takes into account the overflow of counter channels. This is useful in connection with 16-bit counter channels of DIOT, AMDT and ADFT.

Enable the **Trigger** if the calculation is to be triggered by specific events. The differential between successive trigger events is then calculated. Refer also to [Trigger options](#).

#### 4.11.4 Event (Mail)

Specify an event here that, when it occurs, triggers the sending of a mail (or SMS if there is a WWAN option).



##### Info

Create the necessary information prior to calling the dialogue. When sending mails, create the [mail server](#) to be used and the necessary mail addresses of recipients in [Directory \(User management\)](#). For sending SMS, create users with registered phone numbers in [Directory \(User management\)](#).

#### Main settings tab

Settings 'Event'

Active

Channelname: Event  Inherited prefix

Unit:

Location:

Description: Sends emails

Main settings | **Advanced settings** | Variablen / Mail server | Information

Source: Rising edge Alarm signal  Inherit state

Recipient:

Type	Name
To	Username

Add Delete

Message content

Subject: This is a test message

Message text: This is the body of the email. This is the second line.

Copy Paste Previous Next OK Cancel Help



### Info

Set special variables for the message text or subject line in the dialogue of the *Variables/Mail Server* tab.


**Source:** Specify whether the event is to occur with a rising, falling or both edges of the channel in question.

Refer also to "[Trigger options](#)" on page 53.

**Recipient:** Select a recipient from the list in the Name column. Also select in the Type column how the selected user is to be notified by the event channel. Click Add for additional recipients.

**Message content:** Enter here the *subject line* and text of your mail/SMS (*Message text*).

## Variables / Mail Server tab

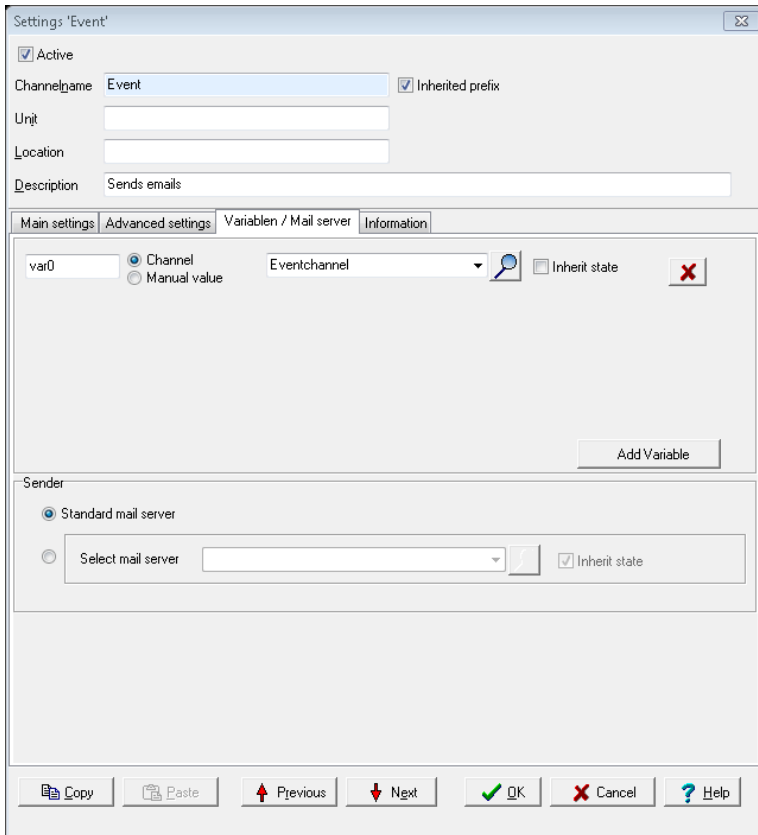

Settings: 'Event'

Active

Channel name: Event  Inherited prefix

Unit:

Location:

Description: Sends emails

Main settings | **Advanced settings** | **Variables / Mail server** | Information

var0  Channel  Manual value Eventchannel  Inherit state

Sender

Standard mail server

Select mail server   Inherit state

Using **Add variable** you can create variables here that can be used in the subject line or message text.

**Mail Server/Sender**: Enter here the "Mail server" on page 74 used to send the mails.

### Examples

In the network settings, you have entered **Logger01** for the **host name** and **aeolus.local** for the **domain**; the channel name is **EventVar**.

The Hostname setting uses **EventVar@Logger01.aeolus.local**.

If you entered in the free setting, for example, `test@delphin.de`, `EventVar <test@delphin.de>` will be sent, that is, the channel name is sent in addition as a name to be displayed.

## Incorporate channel values in the text to be sent

To do this, switch to the `Variables/Mail server` tab and press the `Add variable` button.

A new line appears. Now name the variable and select the appropriate source channel.

To use the newly created variable in the message text, please switch back to the `Basic Settings` tab.

In the `message content`, a variable can be used according to the following scheme: `%variablen_name.variablen_attribut%`

For `variablen_name`, please insert the previously selected variable name.

The following options are available for `variablen_attribut`:

Attribute	Displayed value
Surname	Source channel name
id	Hexadecimal ID of the source channel
value (int)	Integer value of the source channel
value (float)	(floating) comma number of the source channel
value (string)	Text value of the source channel
flags.l	Flags of the source channel

## Example

For example, if you want to monitor a temperature, you can trigger an event by exceeding a limit.

Assuming an *analogue input* measures the ambient temperature by thermocouple. This analogue input is monitored by *limit channel*. This limit channel is configured to 35 °C. The limit channel serves as the source for an *event channel*. As variables in the event channel, the analogue input is configured as *var0* and the limit channel is configured as *var1*.

Below is the example configuration of the message content:

Die Temperaturmessung an %var0.name% meldet eine Überschreitung des Grenzwertes von %var1.value(int)°C!

Die derzeitig gemessene Temperatur beträgt %var1.value(float)% °C.

The resulting mail/SMS thus contains the following, for example:


Die Temperaturmessung an Analogeingang #03 - Thermoelement meldet eine Überschreitung des Grenzwertes von 35°C!

Die derzeitig gemessene Temperatur beträgt 36,565°C.

## 4.11.5 Flip-flop

This software channel functions as a hardware flip-flop.

Select the type of flip-flop in the **Mode** field. A diagram is displayed depending on the selection. Various inputs are available. Disable any unnecessary inputs.

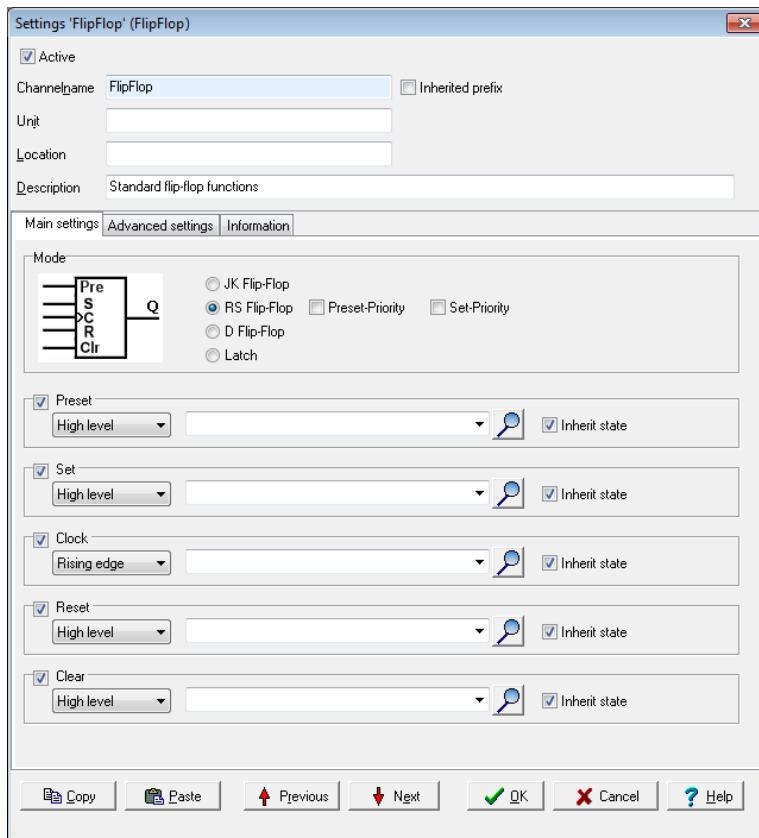

The "Latch" mode will store any data types, for example, if the D source is an analogue channel, the flip-flop stores the analogue value.

The following tables show possible statuses.

This means: X = any level,  $\uparrow$  = edge, H = "high" level, L = "low" level.

Refer also to [Trigger options](#) .

### JK flip-flop

Status	Y	K	C (clock)	Clr (clear)	Pre (preset)	Q
1	X	X	X	H	X	L
2	X	X	X	L	H	H
3	L	L	X	L	L	Previous status
4	H	L	↑	L	L	H
5	L	H	↑	L	L	L
6	H	H	↑	L	L	Toggle

### RS flip-flop state table

Status	S	R	S + set priority	C (clock)	Clr (clear)	Pre (preset)	Q
1	X	X	X	X	H	X	L
2	X	X	X	X	L	H	H
3	H	L	X	↑	L	L	H
4	L	H	X	↑	L	L	L
5	H	H	L	↑	L	L	L
6	H	H	H	↑	L	L	H
7	L	L	X	X	L	L	Previous status

In RS flip-flop, there is the additional option of *Set priority*, i.e. the value at set input (S) has priority when R = H.

### D flip-flop

Status	D	C (clock)	Clr (clear)	Pre (preset)	Q
1	X	X	H	X	L
2	X	X	L	H	H
3	H	↑	L	L	H
4	L	↑	L	L	L
5	L	L	L	L	Previous status

### Latch

Status	D	C (clock)	Clr (clear)	Q
1	X	X	H	L
2	D	↑	L	D
2	D	H	L	D (transparent)
3	X	L	L	Previous status

#### 4.11.6 Limit value

This software channel monitors the specified source channel. The result, i.e. the output signal of the limit value channel, is "High" when the specified alarm conditions are met.

The following forms of monitoring are available:

Mode	Alert when
Overrun	the value is above the specified range or above the threshold
Underrun	the value is below the specified range or below the threshold
Band monitoring	the value is outside the specified range (threshold $\pm$ bandwidth)
Band violation	the value is within the specified range (threshold $\pm$ bandwidth)
Steady condition	values change by more than the bandwidth during lag time.

In addition, you can also set no triggering for wire-breaks at the source. The setting is only for sources (sensors) which can have wire-break monitoring.


For all input, either enter a fixed value (*Manual value*) or specify a *channel* that delivers the value. It is possible to dynamically change the limit values during measurement.

*Threshold* is the decisive value in monitoring.

*Hysteresis*: Hysteresis prevents the alarm being repeatedly activated for small fluctuations around the threshold value in the monitored signal.

Depending on switch direction, the hysteresis lies below the threshold (for overruns) or above the threshold (for underruns). See images. The hysteresis is especially beneficial for small (noise) signals. The *Delay* option offers an alternative.



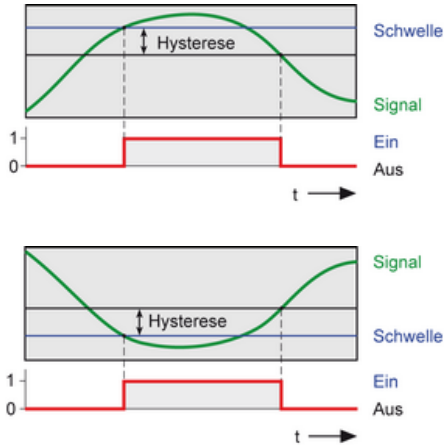

**Bandwidth:** Sets the "monitoring window" for forms of monitoring: *Band violation* and *steady condition*. In *Band monitoring/violation*, the "monitoring window" is symmetrical to the threshold. The value entered acts as a subtraction to the window with *band monitoring* in positive and negative directions, and as an addition with *band violation*.

Example: Threshold = 50, bandwidth = 3 → means the range from 47 to 53 is monitored.

**Delay:** The alarm condition must be met during the specified time to trigger an alarm. The option is an alternative to the *Hysteresis* option and is especially suitable for suppressing false alarms for brief signal distortions with high amplitudes. Both options can be combined.


**Latching:** The alarm is latched (continues to alarm) even when the alarm condition is no longer met. Enabling *Latching* changes the field label in Reset trigger for latching. The alarm resets when a reset event occurs, e.g. a *rising edge* in the given channel. The *Reset priority* option causes an alarm to reset when the alarm condition is still met.

Refer also to [Trigger options](#).

## 4.11.7 Pulse generator

This software channel can be used in two different modes:

- **Free running:** Continuous pulses are generated at a fixed repetition rate (*Cycle time*) and at a set *Pulse width*.

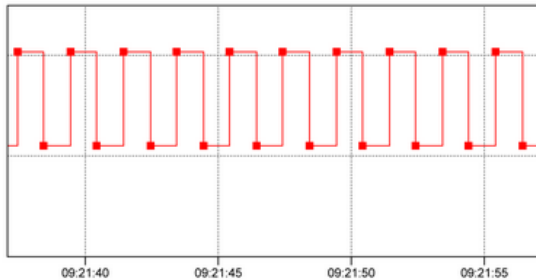

- Synchronous:** Pulses are generated with a repetition rate based on the time. If, for instance, a **Cycle time** is set at 15 minutes, pulses are generated at 00, 15, 30 and 45 minutes of each hour. As the pulses can only be generated with an integer scaling factor, only discrete values can be selected. In this mode, only certain times can be selected from the list as the cycles represent integer scaling factors with respect to time.


**Source:** In the trigger option **Level**, the pulse generator only operates while the source is active. In the trigger option **Edge**, the pulse generator starts with the edge of the source and runs continuously or until stopped with **Reset**.

**Pulse width:** Sets the pulse duration, for example how long the pulse maintains a "High" level.

**Cycle time:** Sets the pulse repetition rate.


**Reset:** Sets the output of the pulse generator immediately (asynchronous) to "Low" level when the event occurs, unless **End of running cycle** is enabled, in which case it will go on until the current cycle is finished. If the **Level** trigger setting is selected, this signal permanently suppresses further pulses occurring at the pulse generator output (as long as the respective level is applied).

Refer also to "[Trigger options](#)" on page 53.

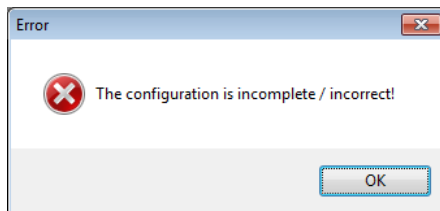

After closing the dialogue with **OK**, a validity check is performed. If the input is invalid, e.g. the pulse width is greater than the cycle time, an error message is displayed and the previous valid configuration is retained.

### Examples

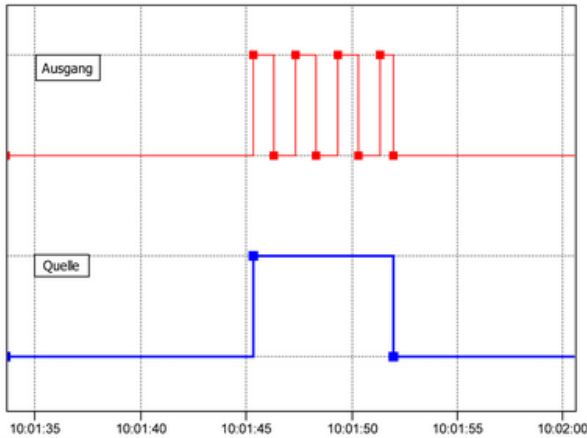

The diagram shows the release of the pulse generator ( **red** curve) by the source ( **blue** curve).

### Example 1

Settings 'Impulse generator' (ImpulseGenerator)

Active

ChannelName: ImpulseGenerator  Inherited prefix

Location:

Description: Generates impulses cyclically

Main settings | **Advanced settings** | Information

Pulse mode

Free running  
 Synchronous to real time

Source

High level    Inherit state

Pulse width

Channel  Manual value

Width  s  Inherit state

Cycle time

Channel  Manual value

2  s


Reset

Rising edge  Reset  Inherit state

Termination of current cycle

Copy Paste Previous Next OK Cancel Help

In this example, the pulse generator runs in continuous mode. The cycle time is 5 seconds. A channel has been selected for the pulse width that initially outputs the value 1 and then the value 2. The channel is not permitted to output a negative value (no negative times) nor a value greater than the cycle time, i.e. 5 in this example. Another channel is given for the reset.

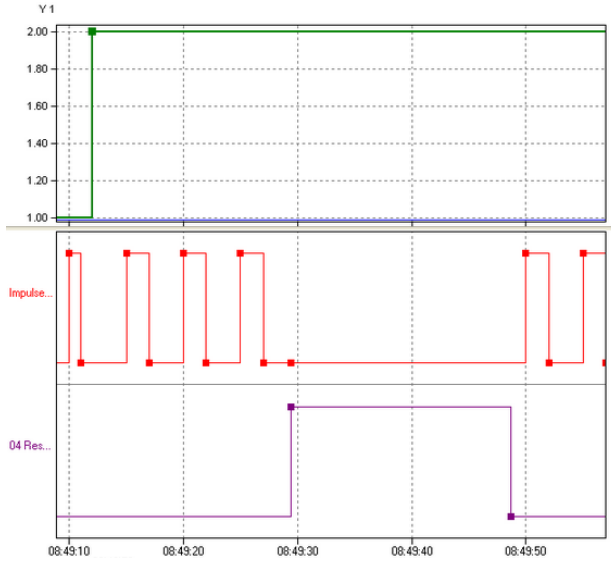

Once the pulse generator starts ( **red** curve) with a pulse duration of 1 second, the pulse duration is set to 2 seconds ( **green** curve). After three pulses, the reset channel ( **purple** curve) gives the reset signal and the pulse generator issues no more pulses (the next pulse would be due at 8:49:30). Pulses begin again only after deleting the reset signal (level = "Low"). The cycle time indicates that the next pulse will be output at 08:49:50.

### Example 2

Settings 'Impulse generator' (ImpulseGenerator)

Active

Channel name: ImpulseGenerator  Inherited prefix

Location:

Description: Generates impulses cyclically

Main settings | **Advanced settings** | Information

Pulse mode

Free running  
 Synchronous to real time

Source

High level  Trigger   Inherit state

Pulse width

Channel  Manual value

Pulse width  s  Inherit state

Cycle time

Channel  Manual value

Cycletime  s  Inherit state


Reset

Rising edge  Reset Impulse Generator  Inherit state

Termination of current cycle

Copy Paste Previous Next OK Cancel Help

In this example, the pulse generator runs in controlled mode. The trigger is enabled by setting *High level* ("High"). The pulse width and cycle time are set by other channels. Note that these channels may not issue negative values (no negative times) nor conflicting values such as a pulse width greater than the cycle time. Another channel is given for the reset.

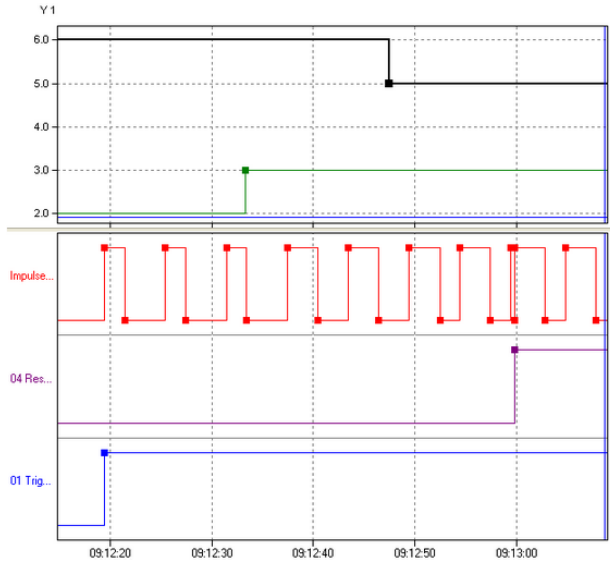


The pulse generator (**red** curve) is started by the trigger channel (**blue** curve) with a 2-second pulse duration (**green** curve) and a 6-second cycle time (**black** curve). After three pulses, the pulse duration is increased to 3 seconds (**green** curve). After another two pulses, the cycle time (**black** curve) is reduced to 5 seconds. Just before 9:13:00, a reset occurs at the rising edge of the reset channel. Because the trigger source has a "High" level, the pulse duration re-starts even though a pulse has already begun.

### Example 3

The following examples illustrate the relationship between trigger signal and reset signal.

a)


Trigger and reset are triggered by channels and are set to *Edges (both)*. Then both the signal's rising and falling edges trigger the event.

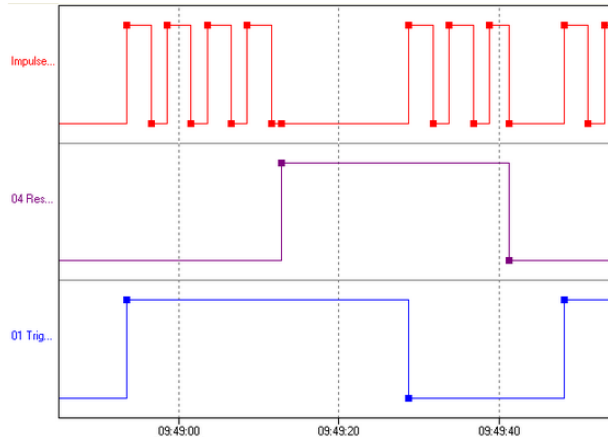

The trigger (**blue** curve) starts the pulse generator (**red** curve) with a rising edge. Then the reset (**purple** curve) is triggered with a rising edge and the pulse generator is stopped. Pulses are generated again only after the trigger gives a new start signal with a falling edge. A falling edge of the reset channel stops the pulse generator again and pulses are generated again only after the rising edge of the trigger channel.

b)

The trigger is triggered by a channel and has been set to **Edges (both)**. The reset is also triggered by a channel, but has been set to High level.

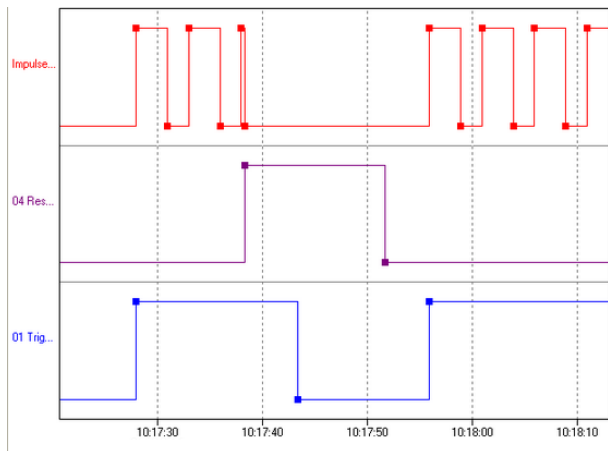




The trigger (**blue** curve) starts the pulse generator (**red** curve) with a rising edge. Then comes the reset (**purple** curve). Because the high level ("high") remains, no further pulses are generated (*Reset = High level*). Meanwhile, the trigger channel switches to a low level ("Low"). However, because the reset channel remains at a high level as before, the trigger channel's edge has no effect. The pulse generator does not re-start even when the reset channel reverts to a low level as it is only re-started with an edge in the trigger channel. The pulse generator restarts only once the trigger channel has a (rising) edge.

c)


Trigger and reset are triggered by channels and are set to *Level high*.

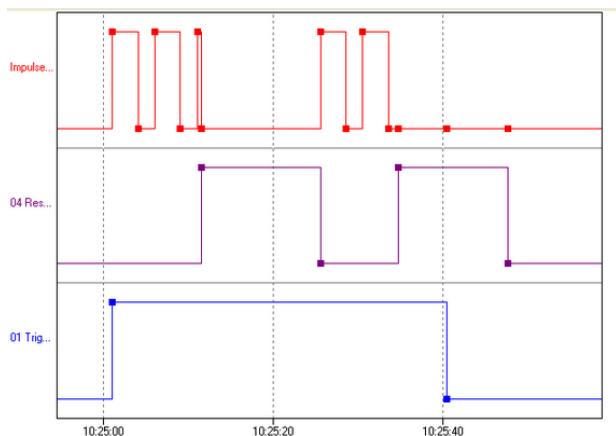

The pulse generator (**red** curve) is started by the trigger channel (**blue** curve). When a reset signal (**purple** curve) is received, the output is set to "low" and no further pulses are generated. When the reset signal resets to "Low", the pulse generator re-starts (10:25:25) because the trigger channel remains at a high level. In the second example, no further pulses are generated because the trigger channel has meanwhile gone to "low".

d)

The trigger is triggered by a channel and has been set to *High level*. The reset is also triggered by a channel, but has been set to *Edges (both)*.

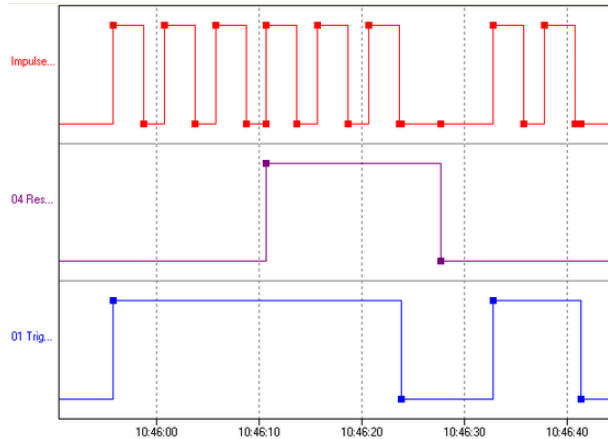

The pulse generator (**red** curve) is started by the trigger channel (**blue** curve). When a reset signal (**purple** curve) is received, the pulse counter is set to "low", but begins immediately to generate new pulses because the trigger signal remains "High" and the reset signal is generated only by the edge. The pulse generator stops only once the trigger signal also goes to "Low". The falling edge of the reset signal has no effect here as no pulses are being generated at this time.

#### 4.11.8 Integrator

This software channel calculates the area below a curve (*Source*).

$$Integral = \int \left( \frac{Vorgänger + aktuellerWert}{2} * \Delta Zeitstempel * \Delta Zeitbasis \right)$$

**Cyclic**: A new value is repeatedly obtained from the source for the given *Period* and the integral is calculated between the current and previous value. A new value is calculated for each interval and added to the running total.

**Adaptive**: When the source delivers a new value, the integral is calculated between this value and the previous value. The result is added to the running total.

**Time unit of source**: The calculated values are scaled to the source's time unit, e.g. in l/min (for litres per minute, enter 60 seconds).

**Reset**: When enabled, the calculated integral is output only in the case of a reset event and then reset internally to zero or the start value.

Refer also to [Trigger options](#).

**Generate intermediate values:** When enabled, results are also output between reset events immediately following their calculation, (without being reset to zero).

**Initial value:** Specify a value with which integration is to start. Select an available channel whose current value will be used at the start via **Channel**, or enter a constant value (**Manual value**). Selecting **Application** enables the value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application.



### Info

For activating **Persistence** in the **Additional settings tab**, each new status will be stored and, for example, integration will continue from there after a power outage. The choice for **Initial value** is then set to **Application**. When loading a configuration file, too, the last value stored is set as the initial value in this case.

Refer also to the "**Additional settings tab**" on page 48.

## 4.11.9 Channel group

Use channel groups to group related or interdependent channels. Any number of channel groups may be created. If required, a channel can be linked to more than one group (linked channels: refer to [Configuring software channels](#)).

## 4.11.10 Linearisation

Linearisation enables an additional conversion to be performed on a channel's values. An advantage of this feature is that the channel's original values remain available with the conversion being performed in a "new" channel.

This dialogue enables either a conversion function to be set for this channel (**Table type: local table**) or the use of a global linearisation function (**Linearisation table**) which has been set up via the **Global linearisation table** option in the device's context menu.

Refer also to [Linearisation table \(global\)](#), [Settings for all dialogues: Sensor compensation tab](#).

### Method

1. Select the table type.  
For external tables, select the table to be used next; for internal tables, create a table via the **Table** tab that is displayed after making your selection.
2. Select a source.
3. Set up a table if necessary (**Table** tab).

A table can be imported instead of creating a new one: **Import**.

### **Mode:** You may select between various methods

- **Offset**  
An offset shifts the curve by a fixed value, for example the given value is added to the measurement value.
- **Offset and slope**  
Allows a shifting of the curve and an increase in its slope.
- **Quadratic**  
Generates a quadratic curve through the given points to linearise the measured values.
- **Linear interpolation**  
Set a table for converting measured values into display values. Linear interpolation takes place between the given points.
- **Spline interpolation**  
An optimal fitting polynomial 3rd degree (cubic spline) is determined using spline interpolation for the given values which is then used to convert the measured values.



### **Info**

You can use copy and paste to transfer data from an Excel table into the dialog table. Position the cursor in the table's top left field of the first row. Extra rows are created automatically when this is permitted by the selected mode.

Click on a row and use the **Del** key to delete unwanted rows. Insert extra rows in a linear interpolation using the **Return** key.

A created table can be exported and then re-imported later: **Export** and **Import**.

## **Format information for export and import**

To import or export a table, please note the following information.

A table file for a linearisation channel is indicated by the suffix ".tab". Furthermore, these table files are constructed according to the following scheme:

Row	Text	Description
1	Mode: X;""	Selection of the table mode
2	y1;z1	First calibration point
3	y2;z2	Second calibration point
...	...	Other calibration points


**Please note:** The decimal separator "," is used for the values y and z.

For the "Mode:" attribute, one of the following values can be entered for "X" in the diagram shown above:

Set mode	Attribute	Number of calibration points
Offset	Offset	1
Offset and slope	Gradient	2
Quadratic	Squarely	3
Linear interpolation	Linear	$\geq 3$
Spline interpolation	Spline	$\geq 4$

#### 4.11.11 Logic

This software channel enables digital channels to be linked logically. Various boolean functions are available: **AND**, **OR**, **NAND**, **NOR**, **NOT**, **XOR** and **XNOR** as well as **antivalence** (XOR with more than two inputs) and **equivalence** (XNOR with more than two inputs).

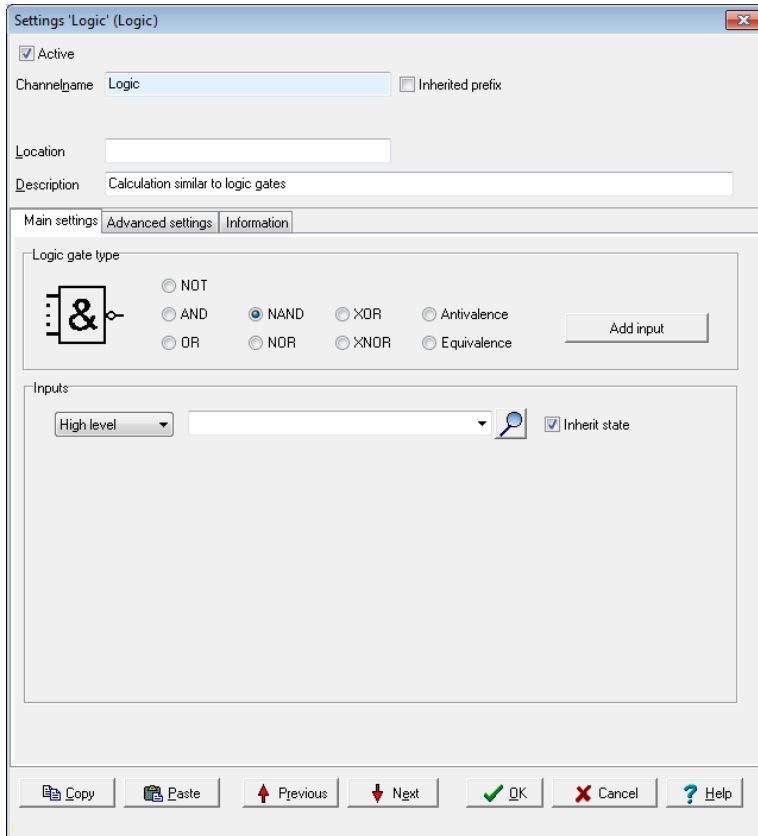


**Add input** produces additional inputs. All inputs are linked according to the selected logic.



NOT, XOR and XNOR functions can link only one or two inputs.  
Only this number of inputs can then be created.



Click  to delete an input.

## Status table NOT

Input value	Output value
L	H
H	L

### Status table AND

Input value A	Input value B	Output value
L	L	L
L	H	L
H	L	L
H	H	H

### Status table OR

Input value A	Input value B	Output value
L	L	L
L	H	H
H	L	H
H	H	H

### Status table NAND

Input value A	Input value B	Output value
L	L	H
L	H	H
H	L	H
H	H	L

### Status table NOR

Input value A	Input value B	Output value
L	L	H
L	H	L
H	L	L
H	H	L

### Status table XOR (exclusive OR)

Input value A	Input value B	Output value
L	L	L
L	H	H
H	L	H
H	H	L

### Status table XNOR

Input value A	Input value B	Output value
L	L	H
L	H	L
H	L	L
H	H	H

### Status table antivalence

The output for antivalence is then "High" if an odd number of inputs are "High" and the remaining inputs are "Low".

Input value A	Input value B	Input value C	Output value
L	L	L	L
L	L	H	H
L	H	L	H
L	H	H	L
H	L	L	H
H	L	H	L
H	H	L	L
H	H	H	L

### Status table equivalence


Input value A	Input value B	Input value C	Output value
L	L	L	H
L	L	H	L
L	H	L	L
L	H	H	H
H	L	L	L




Input value A	Input value B	Input value C	Output value
H	L	H	H
H	H	L	H
H	H	H	H

### 4.11.12 Variable

This software channel generates a variable (or constant for *Manual value*) that you can use for other channels or calculations. This provides a control option that enables either manual control over the processes in a device via the DataService Configurator or automated control via a **ProfiSignal** application. For example, you can use a marker as a reset trigger for a counter channel. It is also helpful in testing certain device or system reactions.

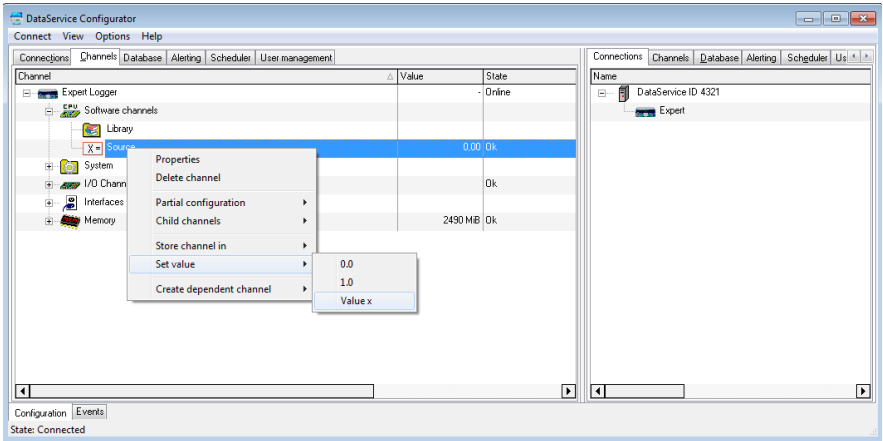

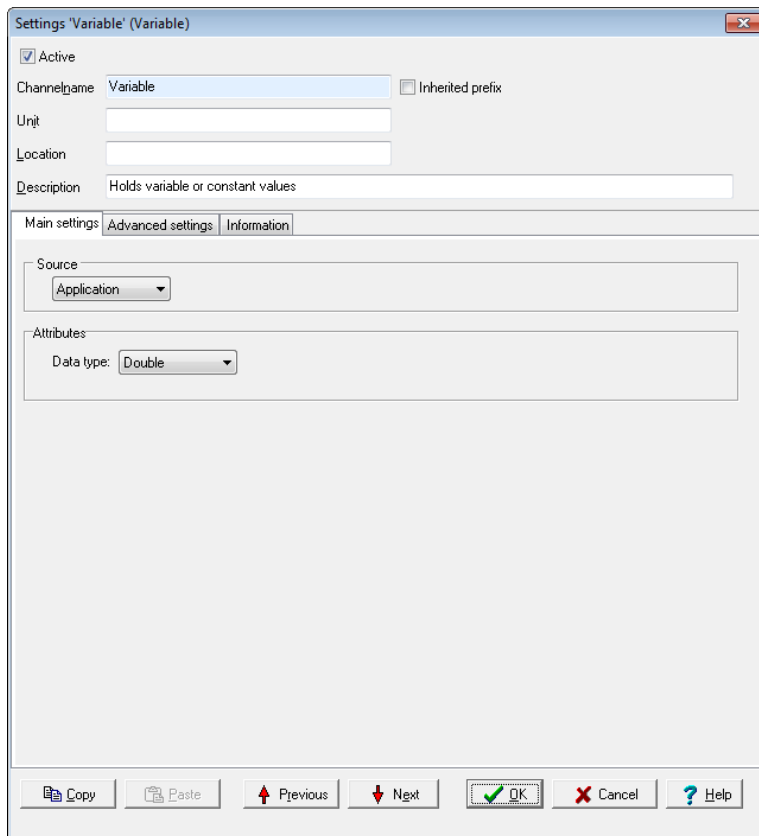

Settings 'Variable' (Variable)

Active

Channelname: Variable  Inherited prefix

Unit:

Location:

Description: Holds variable or constant values

Main settings | Advanced settings | Information

Source: Application

Attributes: Data type: Double

Copy Paste Previous Next OK Cancel Help

**Source:** Select an available channel whose value will be used via **Channel**, or enter a constant value (*Manual value*). Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application.

You can use **Properties** to define whether the output value is to be handled as a **String** (text) or as a numeric value, such as **Float** or **Double**.

#### 4.11.13 Average

This software channel calculates the average from the source values.

**Moving, arithmetic average:** This arithmetic average is calculated from a configured series of values numbering from 2 to 1000 values.

Moving means that each new value from the source is stored to the data series and triggers calculation of the average from the accumulated values

and output of the result. If the number of values reaches the specified maximum, the data series is then full and a new value from the source then overwrites the oldest value.

A device reboot or a configuration change deletes all the accumulated values.

**Block averaging:** This option provides two methods of averaging:

- **Arithmetic average:** The arithmetic average, also called the mean, is the sum of all values of a data series divided by the number of values.
- **Vector average:** The vector average is the average for a unit circle. The method is used, for example, for mass flow rates in air conditioning engineering.

**Edge triggering** (only with block averaging): The configured average type is calculated at the time of the trigger event for all values of the data series that have accumulated between two trigger events. The result is output following calculation.

**Level triggering** (only with block averaging): When a level moves from an active to inactive state, the average is calculated from the values accumulated during the active level period.

**Generate intermediate values** (only with block averaging): When enabled, the results between the trigger events are immediately output after calculation (with each new source value).

Refer also to [Trigger options](#).

## 4.11.14 PID controller

The PID controller channels enable the continuous control of a process variable. Available controllers are P, I, PI and PID. Additional settings are also available, e.g. dead zone, manipulated variable limit etc.

### 4.11.14.1 Introduction to control technology

This Section gives you an introduction to control technology in order to help you understand the PID controller.

#### Designations

#### Control loop variables

w – reference variable. Process variable setpoint or target value.


y – manipulated variable. Controller output value.

x – control variable. Process variable to be controlled. .

xd – control difference or control deviation.  $X_d = W - X$

z – interference variable. Interference influence on process variable by process.

## Control loop with controller and control paths:

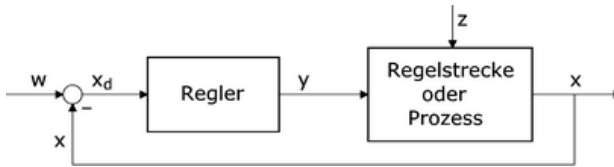

## Control parameter

$K_p$  – proportional amplification. For controller P component.

$T_n$  – reset time. For controller I component.

$T_v$  – derivative time. For controller D component.

## Typical formula for a standard PID controller:

$$y = K_p * \left( x_d + \frac{1}{T_n} * \int x_d dt + T_v * \frac{dx_d}{dt} \right)$$

## Characteristic control system values

$K_S$  – process gain.  $dx/dy$  of a system step response.

$T_u$  – delay time

$T_g$  – compensation time

$T_t$  – dead time

$W$  – inflection point

$K_I$  – integral gain

$T_I$  – integral time

## Control paths

To find a suitable controller, you must know the characteristics of the control paths to be influenced.

A control path is that part of a system between the final control element for the control quantity (the process quantity to be controlled) and the control quantity's measuring point. The final control element and the measuring element are also part of the control path.


Control paths can be fundamentally divided into two categories:

- Control paths with compensation: When a control or interference variable changes, the control variable searches for a new final value (steady state). Example: Flow, temperature, etc.

- Control paths without compensation: Control paths that do not search for a final value (integrating control paths), are known as control paths without compensation. Example: Fill level.

Most control paths consist of P systems (amplification/attenuation), one or more T1 systems (lowpass) and if possible one dead time (run time). Paths with P T1 properties are called first order control paths. Control paths with multiple T1 systems correspond to nth order control paths.

### Control paths with compensation have the following characteristics:

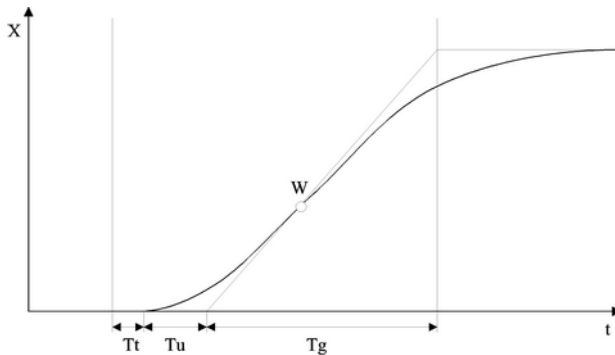


The controllability of such a control path by a PID controller can be estimated as follows:

- $T_g / T_u > 10$ : easy controllability
- $T_g / T_u > 6$ : medium controllability
- $T_g / T_u < 3$ : poor controllability

For control paths with dead time,  $T_g / (T_t + T_u)$  defines the controllability..

### Step response of control path without compensation:

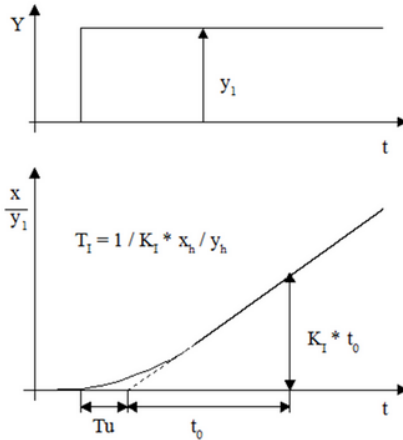

### Continuous controller (PID)

With continuous controllers, the manipulated variable Y assumes any value within a working range.

- P controller: The P controller changes the manipulated variable immediately proportionally to the change in the control deviation.
- I controller: The I controller (integrator) assigns a particular control rate to a particular control deviation.
- PI controller: The PI controller is formed by combining a P controller with an I controller. The PI controller contains a proportional and an integral term.
- PD controller: The controller comprises a controller with a P term and a D term. The derivative element assigns a manipulated variable to a particular change rate of the control deviation.
- PID controller: The manipulated variable consists of a proportional, an integral and a derivative term.

### Controller choice

Controller type Loop (with compensation)	P	I	PI	PD	PID
Pure dead time	Unusable	A little worse than PI	Setpoint and disturbance	Unusable	Unusable
Dead time and delay	Unusable	Worse than PI	A little worse than	Unusable	Setpoint and dis-

Controller type Loop (with compensation)	P	I	PI	PD	PID
1. Order			PID		turbance
Dead time and delay 2. Order	Unsuitable	Bad	Worse than PID	Bad	Setpoint and disturbance
Delay 1. Order and small dead time (delay time)	Reference	Unsuitable	Interference	Setpoint with delay time	Disturbance with delay time
Higher order	Unsuitable	Worse than PID	A little worse than PID	Unsuitable	Setpoint and disturbance
Without compensation and with delay	Setpoint (without delay)	Unusable, unstable	Disturbance (without delay)	Reference	Interference

#### 4.11.14.2 Controller parameter settings

Various methods have been established to determine controller parameters. This introduction describes the Chien, Hrones and Reswik configuration guidelines. You can find further configuration guidelines and methods in related specialist literature.

#### Configuration guidelines for control paths with equalisation:

Determine the following control path characteristic values from the control path step response:

- Process gain  $K_S$
- Compensation time  $T_g$
- Delay time  $T_U$
- For systems with dead time, the equivalent dead time  $T_u + T_t$  is used in place of the delay time  $T_u$ .

You can specify the controller parameters (reference values) according to the following table:

Controller type	Aperiodic control process (no overshoot)		Control process with approximately 20% overshoot	
	Interference	Reference	Interference	Reference
Optimise:	Interference	Reference	Interference	Reference
P	$K \gg 0.3 * T_g / T_u$	$K \gg 0.3 * T_g / T_u$	$K \gg 0.7 * T_g / T_u$	$K \gg 0.7 * T_g / T_u$
PI	$K \gg 0.6 * T_g / T_u$ $T_N \gg 4 * T_u$	$K \gg 0.35 * T_g / T_u$ $T_N \gg 1.2 * T_g$	$K \gg 0.7 * T_g / T_u$ $T_N \gg 2.3 * T_u$	$K \gg 0.6 * T_g / T_u$ $T_N \gg T_g$
PD	$K \gg 0.95 * T_g / T_u$ $T_N \gg 2.4 * T_u$ $T_V \gg 0.42 * T_u$	$K \gg 0.6 * T_g / T_u$ $T_N \gg T_g$ $T_V \gg 0.5 * T_u$	$K \gg 1.2 * T_g / T_u$ $T_N \gg 2 * T_u$ $T_V \gg 0.42 * T_u$	$K \gg 0.95 * T_g / T_u$ $T_N \gg 1.35 * T_g$ $T_V \gg 0.47 * T_u$

### Configuration guidelines for control paths without equalisation:

Determine the following control path characteristic values from the control path step response:

- Integral gain KI
- Delay time TU

You can specify the controller parameters (reference values) according to the following table:

Controller type	K	TN	TV
P	$0.5 / (KI * T_u)$	-	-
PD	$0.5 / (KI * T_u)$	-	$0.5 * T_u$
PI	$0.42 / (KI * T_u)$	$5.8 * T_u$	-
PID	$0.4 / (KI * T_u)$	$3.2 * T_u$	$0.8 * T_u$

#### 4.11.14.3 Configuring PID controllers

The controller is specifically configured in tabs "Main settings", "Controller 1" and "Controller 2".


Settings in tabs "Controller 1" and "Controller 2" are only required for specific applications.

The controller channel obtains its input values (setpoint variable "W" and process variable "X" from two HW channels or SW channels of the device). The controller yields the manipulated variable "Y" as the output value in the preset value range 0...100% or -100...+100%. If you link the output of



the controller channel directly with an analogue output, you must enter the same scaling 0...100 % or -100...+100 %.

## Main settings tab

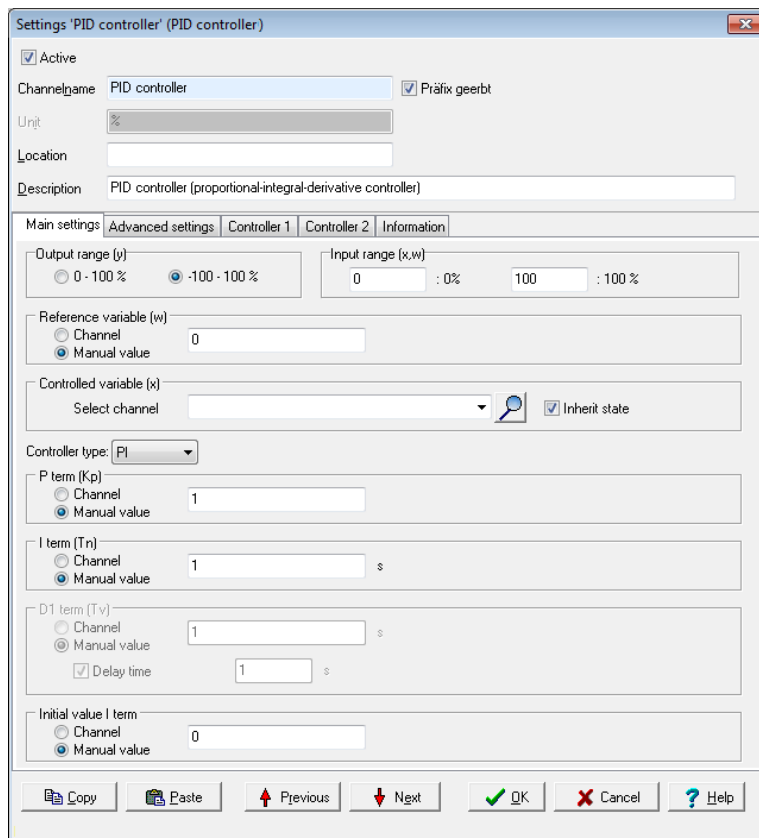

Settings 'PID controller' (PID controller)

Active

Channelname: PID controller  Präfix geerbt

Unit: %

Location:

Description: PID controller (proportional-integral-derivative controller)

Main settings | Advanced settings | Controller 1 | Controller 2 | Information

Output range (y):  0 - 100 %  -100 - 100 %

Input range (x,w): 0 : 0% 100 : 100 %

Reference variable (w):  Channel  Manual value 0

Controlled variable (x): Select channel    Inherit state

Controller type: PI

P term (Kp):  Channel  Manual value 1

I term (Tn):  Channel  Manual value 1 s

D1 term (Tv):  Channel  Manual value 1 s

Delay time 1 s

Initial value I term:  Channel  Manual value 0

**Output range:** Set the required output range for the final control element: 0...100 % or -100...+100 %.

**Input range:** Match the input range of the setpoint variable (w) and process variable (x) to the internal operating range of the controller. Important: The setpoint variable (w) and process variable (x) must match one another.

**Setpoint variable (w):** Source channel for the setpoint variable. An analogue input, a marker or the output of another controller (cascade) is normally used as the source channel. Ensure in the case of a cascade that the

master controller has a fixed output value range. Conversion may be required through a calculation channel.

**Process variable (x):** Source channel for the process variable. An analogue input is normally used as the source.

**Controller type: Type of controller:** P, PI, PID, PD or I controller

**P term (Kp):** The P part of the controller, i.e. the proportional gain, Kp. Alternatively to manual configuration, you can control Kp via a channel, for example, via a slider from a visualisation system.


**I term (Ti):** The I term of the controller, i.e. the integral time, Tn. Alternatively to manual configuration, you can control Tn via a channel, for example, via a slider from a visualisation system.

**D1 term (Td):** The first D term of the controller, i.e. the derivative time Td. Alternatively to manual configuration, you can control Td via a channel, for example, via a slider from a visualisation system.

**Delay time:** By enabling this option, you can switch the first D term of the controller from difference to time delayed difference. We recommend enabling this option.

**Start value I term:** Depending on whether the I term is activated (see controller type), here you can choose to give the start value of the I term or the zero point of the manipulated value (y).

## Controller 1 tab

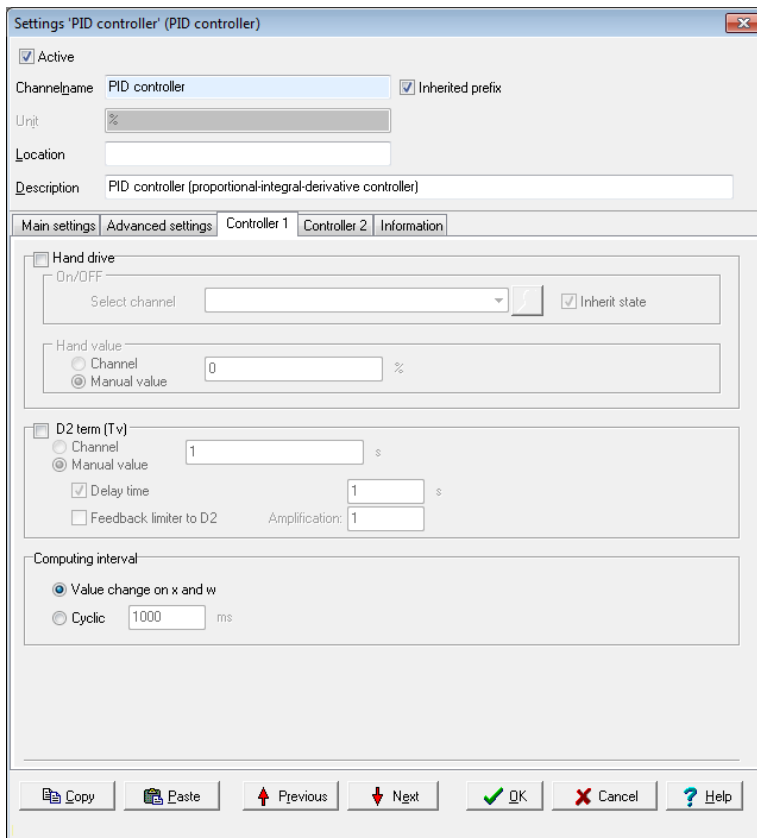

Settings: PID controller (PID controller)

Active

Channelname: PID controller  Inherited prefix

Unit: %

Location:

Description: PID controller (proportional-integral-derivative controller)

Main settings | Advanced settings | **Controller 1** | Controller 2 | Information

Hand drive

On/Off

Select channel:   Inherit state

Hand value

Channel  %

Manual value

D2 term (T<sub>v</sub>)

Channel  s

Manual value

Delay time  s

Feedback limiter to D2 Amplification:

Computing interval

Value change on x and w

Cyclic  ms

Copy Paste Previous Next OK Cancel Help

**Manual operation:** Enable this option to switch between automatic mode and manual operation.

**On/Off:** Give the source channel by which the switch between automatic mode and manual operation is to occur. If a value is  $\geq 1.0$ , the manual value (see below) will be output as manipulated variable (y).

**Manual value:** Give the source value which delivers the "manual value".


**D2 term (T<sub>d</sub>):** Optional second D term of controller.

**Delay time:** By enabling this option, you can switch the first D term of the controller from difference to time delayed difference. We recommend enabling this option.

**Limiter feedback to D2:** This option feedbacks the manipulated variable cut in the preceding control cycle to the second D term. Give the degree of feedback in the **Amplification** field (1.0 = full feedback).

**Computing interval:** Enter how the controller output is to be updated: Via a value change of the process variable ( $x$ ) and setpoint variable ( $w$ ) or via an adjustable time period.

## Controller 2 tab

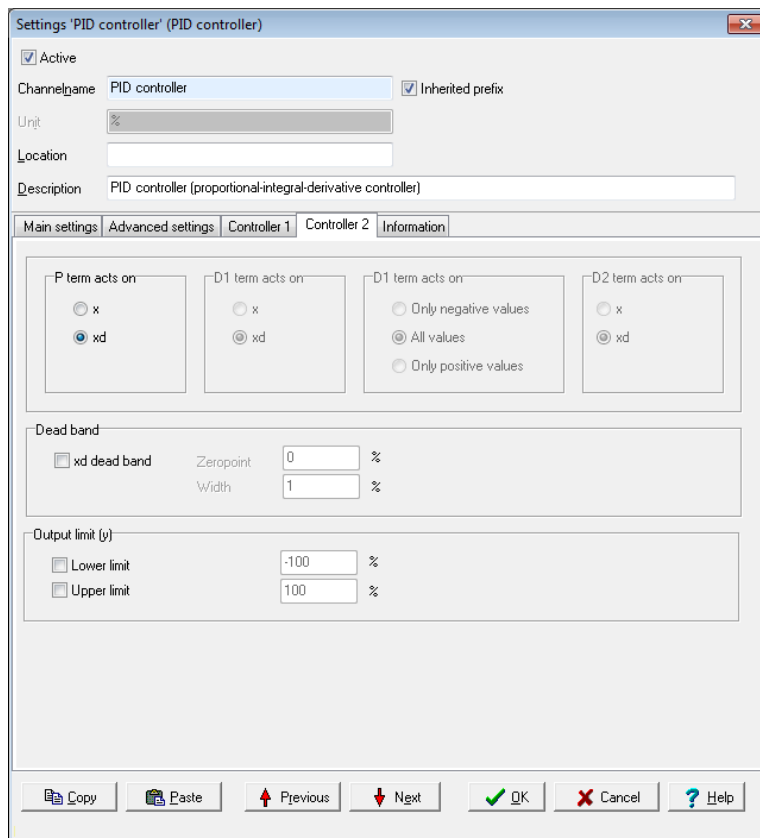

The screenshot shows the 'Settings: PID controller' dialog box with the 'Controller 2' tab selected. The dialog is titled 'Settings: PID controller (PID controller)' and has a close button in the top right corner. It contains the following fields and options:

- Active
- Channelname: PID controller  Inherited prefix
- Unit: %
- Location: (empty text field)
- Description: PID controller (proportional-integral-derivative controller)

The 'Controller 2' tab is active, showing the following settings:

- P term acts on:**  x,  xd
- D1 term acts on:**  x,  xd
- D1 term acts on:**  Only negative values,  All values,  Only positive values
- D2 term acts on:**  x,  xd

**Dead band:**

- xd dead band
- Zeropoint: 0 %
- Width: 1 %

**Output limit (y):**

- Lower limit: -100 %
- Upper limit: 100 %

At the bottom, there are buttons for Copy, Paste, Previous, Next, OK, Cancel, and Help.

**P term affects:** Specify how the P term of the controller is to use the **control deviation** ( $xd$ ) or immediately the **process variable** ( $x$ ) as an input value.

**D1 term affects:** Specify how the first D term of the controller is to use the **control deviation** ( $xd$ ) or immediately the **process variable** ( $x$ ) as an input

value. You can also set which input values the first D term reacts to. All non-effective values are taken as 0.0.

The option is only available if the first D term operates without *Delay time*.


**D2 term affects:** Specify how the second D term of the controller is to use the *control deviation (xd)* or immediately the *process variable (x)* as an input value.

**Dead zone:** Activates the dead zone of the control deviation (xd). Specify the zero point of the dead zone with *Zero point*. The entry field **Width** contains the maximum deviation from the zero point of the dead zone, within which the control deviation is set to 0.0.

**Output limitation:** This option allows the value range of the manipulated variable to be limited to values larger than -100% or smaller than +100%. The cut term of the manipulated variable can optionally be fed back to the second D term of the controller.

#### 4.11.15 Pulse width modulation (PWM)

This software channel generates a square signal with a variable frequency and variable pulse-pause ratio. The pulse-pause ratio is determined by the source.

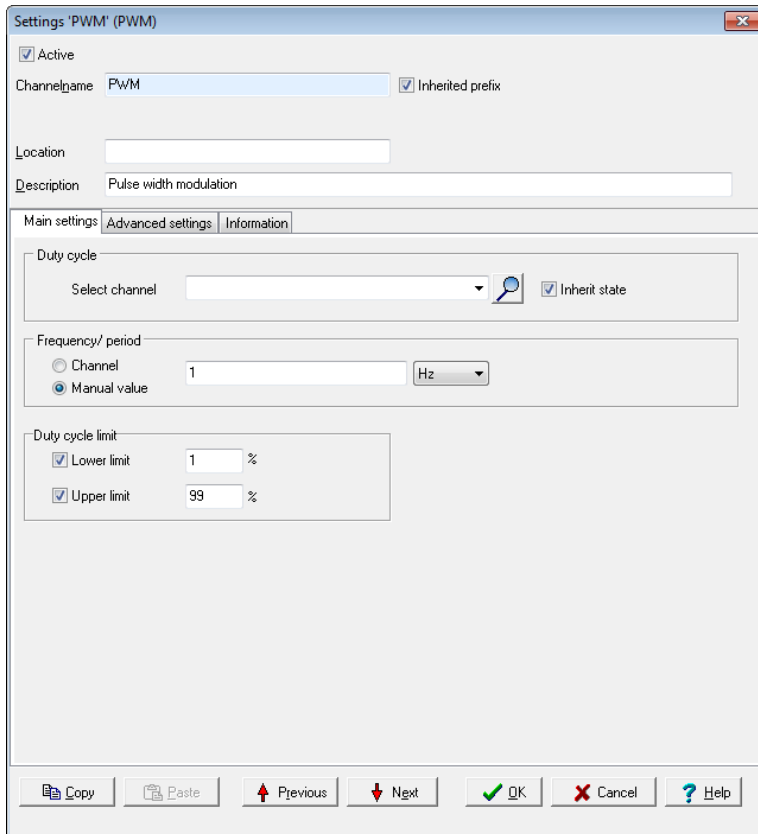

### **Frequency/period:**

Enter either a fixed frequency or time for the period of the fundamental oscillation or name a channel that provides the appropriate value.

### **Duty cycle restriction**

**Lower / upper limit:** Set here the minimum and maximum values for the pulse-pause ratio.

A pulse-pause ratio of 0% means that the PWM output is permanently switched off. A pulse-pause ratio of 100% means that the PWM output is permanently switched on. The range of source values is limited to the specified range.

### 4.11.16 Calculation channel

This software calculates the input mathematical formula. Any number of sources can be linked within the formula. Each source is represented by a variable that can assume either a constant value or the value from the specified channel.

#### Method

1. Set the required variables with *Add variable*.  
A variable named *var0* is created by default, but its name can be changed.
2. Set whether the variable is to have a constant value (*Manual value*) or whether the value is to be obtained from a channel (*Channel*).
3. Enter the formula expression in the field *Formula*.

#### Restrictions on variable names

1. The first character must be alphabetic (a...z/A...Z).  
The subsequent characters must be alphanumeric (letters a...z/A...Z or numbers 0..9) or an underscore (\_).
2. Variable names must be unique (no repeat names in different channels).
3. A distinction is made between upper and lower case letters.

Input in the formula field must use the same syntax as for variable names, otherwise the formula is invalid.

#### Example

Settings 'Calculation' (Calculation)

Active

Channelname: Calculation  Inherited prefix

Unit:

Location:

Description: Calculates various arithmetic operations

Main settings | Advanced settings | Additional | Information

Formula

$$(Pres1 + Pres2) / 100 + Offset$$

Pres1:  Channel  Manual value Pres. Fill 01  Inherit state

Pres2:  Channel  Manual value Pres. Fill 02  Inherit state

Offset:  Channel  Manual value 1000

Only calculate, if all input values within the time frame  s

The example calculates the difference between two channels, divides the result by 100 and adds an offset.

### Syntax for the formula field

- Operand1 operator operand2, e.g. pressure 1 - pressure2
- Operator operand, e.g. ! DigIO1
- Function(operand), e.g. sin(pressure)
- Function(operand1 , operand2), e.g. pow(pressure, 2)

### Available calculation functions



Type of calculation	Function	Data types		Syntax
		Operand1	Operand2	
Basic calculations	Addition	bool, int, float	bool, int, float	Operand1 + Operand2
	Subtraction	bool, int, float	bool, int, float	Operand1 - Operand2
	Multiplication	bool, int, float	bool, int, float	Operand1 * Operand2
	Division	bool, int, float	bool, int, float	Operand1 / Operand2
Logical (boolean) operations	AND	bool, int, float	bool, int, float	Operand1 && Operand2
	OR	bool, int, float	bool, int, float	Operand1    Operand2
	NOT	bool, int, float	—	!Operand1
Binary (bit by bit) operations	AND	bool, int	bool, int	Operand1 & Operand2
	OR	bool, int	bool, int	Operand1   Operand2
	XOR	bool, int	bool, int	Operand1 ^ Operand2
	Negation	bool, int	—	~Operand1
	Left shift (move operand1 to the right by number of positions in operand2.)	bool, int	bool, int	Operand1 << Operand2
Right shift (move operand1 to the left by number of positions in operand2.)	bool, int	bool, int	Operand1 >> Operand2	

Type of calculation	Function	Data types		Syntax
		Operand1	Operand2	
Operations with sets	Minimum	bool, int, float	bool, int, float	Min(operand1, operand2)
	Maximum	bool, int, float	bool, int, float	Min(operand1, operand2)
Matching operations	Less than	bool, int, float, string	bool, int, float, string	Operand1 < Operand2
	Less than or equal	bool, int, float, string	bool, int, float, string	Operand1 <= Operand2
	Greater than	bool, int, float, string	bool, int, float, string	Operand1 > Operand2
	Greater than or equal	bool, int, float, string	bool, int, float, string	Operand1 >= Operand2
	Equals	bool, int, float, string	bool, int, float, string	Operand1 == Operand2
	Not equal to	bool, int, float, string	bool, int, float, string	Operand1 != Operand2
Trig. functions	Tangent	bool, int, float	—	TAN(Operand1)
	Cosine	bool, int, float	—	COS(Operand1)
	Sine	bool, int, float	—	SIN(Operand1)
Reverse trig. functions	Arctangent	bool, int, float	—	ATAN(Operand1)
	Arccosine	bool, int, float	—	ACOS(Operand1)
	Arcsine	bool, int,	—	ASIN(Oper-

Type of calculation	Function	Data types		Syntax
		Operand1	Operand2	
		float		and1)
Other operations or functions	Exponential	bool, int, float	—	EXP(Operand1)
	Power	bool, int, float	bool, int, float	POW(basis, factor) POW(Operand1, Operand2)
	Root	bool, int, float	—	SQRT(Operand1)
	Modulo	bool, int, float	bool, int, float	Operand1 % Operand2
	Absolute	bool, int, float	—	ABS(Operand1)
	Natural logarithm	bool, int, float	—	LN(Operand1)
	Logarithms (base 10)	bool, int, float	—	LOG(Operand1)
Constants	Pi	—	—	PI
	Euler e number	—	—	EX

## Data types

- bool: True or false
- float: a floating point number or a fraction
- int: an integer

## Constants

- Constants are considered as integers if entered without a decimal point
- Constants must be given with a decimal point and not a comma, regardless of the country setting of the computer and the DataService Configurator.

### 4.11.17 Batch alarms

This software channel monitors channels with boolean output signals to generate a common alarm. Its output has an ON state when one of the sources (*Monitored channels*) has an ON-state (logical OR link).

**Latching:** The alarm is latched (continues to alarm) even when the alarm condition is no longer met. The alarm has to be reset by a reset event. If the **Latching** option is not selected, the output for the batch alarm channel takes the state of the linked sources.

Enabling **Latching** changes **Reset trigger for latching**. The alarm resets when a reset event occurs, e.g., a rising edge in the given channel. The **Reset priority** option causes an alarm to reset when the alarm condition is still met.

Refer also to "[Trigger options](#)" on page 53.

## Method

- Select one or several channels to trigger a batch alarm from the **Available channels** field and click to accept the selection.
- Select one or several channels from **Monitored channels** and click to remove the selection.

### 4.11.18 Shift register

The slider tab allows you to transmit values with delay.

Give the **Source** which is to be delayed and how many values (**Number of values**) the delay is to affect. An entry from **100** allows the 101 value, when there are 100 values, to cause the first read value to be output. 100 values are always "reserved".

Use the **Trigger** to establish that the delay only occurs if the trigger event occurs. **Reset** cancels the delay.

Refer also to [Trigger options](#).

Settings 'Shift register' (ShiftRegister)

Active

Channelname: ShiftRegister  Inherited prefix

Unit:   Inherited

Location:

Description: Shifts incoming values through an array

Main settings | **Advanced settings** | Information

Source

Select channel: Analog Input #01  Inherit state

Number of measurements

100 (1...1000)

Trigger

Rising edge Digital Input #01  Inherit state

Reset

Rising edge   Inherit state

Copy Paste Previous Next OK Cancel Help

#### 4.11.19 Setpoint

This software channel enables the device to be used as a program controller. The setpoint table creates a conditional procedure (track) with reference points set by value pairs of time and a value, which can be repeated any number of times. Each row of the table describes a program step with a *time* t (fixed or variable) and a *value* y (fixed or variable).

Refer also to [Setpoint table \(global\)](#), "[Additional settings tab](#)" on page 48, "[Information tab](#)" on page 51

Settings 'Setpoint' (Setpoint)

Active

Channelname: Setpoint  Inherited prefix

Unit:

Description: Generate slopes, steps, curves either timed or triggered

Main settings | **Advanced settings** | Table | Variables | Information

Table

Table type: Local table

Number of repeats: 1  infinite

Start

Rising edge Digital Input #01  Inherit state

Pause

High level Digital Input #02  Inherit state

Reset

Rising edge Digital Input #03  Inherit state

Copy Paste Previous Next OK Cancel Help

**Table type:** Use a global (external) table (*Global table* setting) that has been created for the device under Library (refer to [Setpoint table \(global\)](#)) or define a table for a specific channel (*Local table* setting). In the latter case, a *Table* tab will appear.

**Number of repeats:** Determine here whether and how often the program sequence will be repeated automatically. After the last repeat, the final setpoint remains in the table.

**Start:** The state (*Level*) or edge (*Edge*) of the specified channel starts the program execution with the specified number of repetitions. Once the repetitions have been completed, a new or active start event then sets the programmer to the beginning and restarts the program sequence.

**Pause:** Pauses the program's execution, i.e. the current setpoint is retained for as long as the specified channel has the set *Level*. The break pause channel has a higher priority than the start channel, i.e. the start

channel does not start the programmer while pause state is active. For **Edge** settings, the setpoint is retained from the onset of the edge until the next edge. An event here is also unable to give priority to a start channel over a pause state.

**Reset**: A reset event from the specified channel sets the program to the beginning but does not start it. The reset channel has the highest priority, i.e. the reset condition prevents starting by a start event and cancels a pause state.

Refer also to [Trigger options](#) .

### Table tab (only for local table)

The setpoint table contains the value pairs of time and value. Each row of the table describes a program step with a **time**  $t$  (fixed or variable) and a **value**  $y$  (fixed or variable). If a variable is used, it requires configuring via the **Variables** tab. This applies even when using a global setpoint table for the selected channel.

Settings 'Setpoint' (Setpoint)

Active

Channelname: Setpoint  Inherited prefix

Unit:

Description: Generate slopes, steps, curves either timed or triggered

Main settings | **Advanced settings** | Table | Variables | Information

Line	Time			Value	
	Type	Value/ channel	Time unit	Type	Value/ channel
1	Value	0,001	Minutes	Variable (Value)	var0
2	Value	15	Minutes	Variable (Value)	var1
3	Value	6	Seconds	Variable (Value)	var2
4	Value	2	Days	Value	0
5	Value	7	Hours	Value	0

Append

Global settings

Relative time  Cycle time: 1 second

## Method

1. For each table row (program step) enter the time value (Time) with the unit of time to be used and the **value** to be output. The first row defines the starting point, so at least two value pairs need to be entered.
2. Click **Add** for additional rows.
3. Enter the required **Global Settings** (valid for the entire table).

Click on a field to modify the value specified there. **Delete** removes the selected row.

A table can be imported instead of creating a new one: **Import**.

Numbers (constants) or variables can be used for times and values. The variables are defined via the **Variables** tab. For time input, the variable may be used as a value or as a trigger:

**Variable (value)**: Means that the value of the variables is used as time



value. **Variable (trigger)** means that the channel set for the variable in the **Variables** tab is used as a trigger channel. A trigger event is a rising edge. If this trigger occurs, the value that is programmed into the program step for the trigger is assumed as a setpoint and the next program step is then started. This method enables time control of a program sequence to be expanded by an event control.

### Global settings (for all rows)

**Relative time:** Based on the previous value  $y_{i-1}$ , the  $t_i$  value indicates how long it will take to reach the  $y_i$  value.

**Absolute time:** Based on the starting point (first row), the  $t_i$  value indicates how long it will take to reach the  $y_i$  value

**Cycle time:** The cycle time determines in which time frame the values are output between two program steps. Intermediate values are linearly interpolated, i.e. calculated using a linear equation. The intervals between program steps used in the table should be integral multiples of the cycle time.

Variables tab

The tab appears only if there are variables in the table.

Specify whether the variables used are fixed values (**Manual value**) or are to be imported from a **Channel**.

## 4.11.20 Statistics

This software channel enables a source to be evaluated with a range of statistical functions.

**Moving minimum/maximum:** This minimum or maximum is calculated from a configured series of values numbering from 2 to 1000 values.

Moving indicates that each new value from the source is stored to the data series and triggers calculation of the minimum or maximum from the accumulated values and output of the result. If the number of values reaches the specified maximum, the data series is then full and a new value from the source then overwrites the oldest value.

A device reboot or a configuration change deletes all the accumulated values.

**Block evaluation:** The number of values in the data series is determined by the frequency of new source values within an interval set by trigger events. A change in the specified channel produces the trigger event. Several statistical functions are available in this mode.

**Edge triggering:** The selected function is calculated at the time of the trigger event from the data series that has accumulated between two trigger events. After calculation, the result is output and all the accumulated values are deleted.

**Level triggering:** When a level moves from an active to inactive state, the selected function is applied to the values accumulated during the active level period. The result is output and the accumulated values then deleted.

**Generate intermediate values:** When enabled, the results between the trigger events are immediately output after calculation (with each new source value).

Refer also to [Trigger options](#).

## Definitions

- The minimum is the smallest value within the data series.
- The maximum is the greatest value within the data series.
- The variance is the mean square error relative to the mean.
- The number of measurement values are values in the block interval.
- The standard deviation is the square root of the variance (not the average deviation!).
- The True RMS is the root from the sum of the squares of the values by the number of values.
- The arithmetic mean, also called the average, is the sum of all values of a data series divided by the number of values.
- The geometric mean is the Nth root from the product of n values.
- The harmonic mean is the reciprocal from an average of reciprocals.

### 4.11.21 Status filter

The function allows certain status messages to be suppressed and another output to be controlled. You can pass on all status messages to a digital output to be informed of problems, but relay only certain messages to a second digital output, such as the actions of switching off machines etc.

Refer to [Status monitoring](#), [Status generator](#).

## Available status functions and their meaning

Selection	Description
Wire break	Wire break in monitored channel.
Configuration error	Error in monitored channel configuration.
Invalid value	Invalid value in monitored channel.
Measuring range over-run	The measured value is outside the (positive) measuring range of the A/D converter, that is, it is too high in the positive range.
Measuring range under-	The measured value is outside the (negative) measuring range of the A/D converter, that is, it is too high in the neg-

Selection	Description
run	ative range.
Hardware error	Error in the hardware, please contact the service of <b>Delphin</b> .
Simulated value	An internally generated value for testing, for example from the PROFIBUS.
No number (NAN = Not A Number)	A calculation has not returned a valid number, for example root of negative numbers.
Infinite value (INF = infinity)	A calculation is infinite, for example division by zero.
Inactive	This is set when a channel that is output, calculated or used in any other way is not active at the start of a measurement. Thus, you can see at run time which channels are inactive.
Scale range overrun	Scaling range exceeded.
Scale range underrun	Scaling range not met.
Trigger block end	End of a trigger block (data storage).
Input value outside the (permissible) range	The source channel value cannot be processed, there is a parameter error. Check the parameters specified.
Recursion	When a channel is used for a calculation and the input signal of that channel depends on the calculation, there is a loop and thus a recursion. The <b>MetiOS</b> software recognises this; the calculation is terminated and this status is set.
Overload	An analogue or digital input or output is overloaded. For example, the power source for a Pt100 sensor may be overloaded at one input. The load resistance could be too small at one output, resulting in an excessive current.

#### 4.11.22 Status generator

This software channel, e.g. for test purposes, can generate a certain status. You can check whether the system reacts as required.

You can trigger the status immediately (upon closing the dialogue) or via a channel (*Set status only with trigger*).

Refer also to [Status filter](#), [Status monitoring](#).

#### Available status functions and their meaning

Selection	Description
Wire break	Wire break in monitored channel.
Configuration error	Error in monitored channel configuration.
Invalid value	Invalid value in monitored channel.
Measuring range overrun	The measured value is outside the (positive) measuring range of the A/D converter, that is, it is too high in the positive range.
Measuring range under-run	The measured value is outside the (negative) measuring range of the A/D converter, that is, it is too high in the negative range.
Hardware error	Error in the hardware, please contact the service of <b>Delphin</b> .
Simulated value	An internally generated value for testing, for example from the PROFIBUS.
No number (NAN = Not A Number)	A calculation has not returned a valid number, for example root of negative numbers.
Infinite value (INF = infinity)	A calculation is infinite, for example division by zero.
Inactive	This is set when a channel that is output, calculated or used in any other way is not active at the start of a measurement. Thus, you can see at run time which channels are inactive.
Scale range overrun	Scaling range exceeded.
Scale range underrun	Scaling range not met.

Selection	Description
Trigger block end	End of a trigger block (data storage).
Input value outside the (permissible) range	The source channel value cannot be processed, there is a parameter error. Check the parameters specified.
Recursion	When a channel is used for a calculation and the input signal of that channel depends on the calculation, there is a loop and thus a recursion. The <b>MetiOS</b> software recognises this; the calculation is terminated and this status is set.
Overload	An analogue or digital input or output is overloaded. For example, the power source for a Pt100 sensor may be overloaded at one input. The load resistance could be too small at one output, resulting in an excessive current.

#### 4.11.23 Status monitoring

This software channel monitors the source and becomes active (switches to " On" ) when the source assumes the specified status.

Refer also to [Status filter](#), [Status generator](#).

#### Available status functions and their meaning


Selection	Description
Wire break	Wire break in monitored channel.
Configuration error	Error in monitored channel configuration.
Invalid value	Invalid value in monitored channel.
Measuring range over-run	The measured value is outside the (positive) measuring range of the A/D converter, that is, it is too high in the positive range.
Measuring range under-run	The measured value is outside the (negative) measuring range of the A/D converter, that is, it is too high in the negative range.
Hardware error	Error in the hardware, please contact the service of <b>Delphin</b> .
Simulated	An internally generated value for testing, for example

Selection	Description
value	from the PROFIBUS.
No number (NAN = Not A Number)	A calculation has not returned a valid number, for example root of negative numbers.
Infinite value (INF = infinity)	A calculation is infinite, for example division by zero.
Inactive	This is set when a channel that is output, calculated or used in any other way is not active at the start of a measurement. Thus, you can see at run time which channels are inactive.
Scale range overrun	Scaling range exceeded.
Scale range underrun	Scaling range not met.
Trigger block end	End of a trigger block (data storage).
Input value outside the (permissible) range	The source channel value cannot be processed, there is a parameter error. Check the parameters specified.
Recursion	When a channel is used for a calculation and the input signal of that channel depends on the calculation, there is a loop and thus a recursion. The <b>MetiOS</b> software recognises this; the calculation is terminated and this status is set.
Overload	An analogue or digital input or output is overloaded. For example, the power source for a Pt100 sensor may be overloaded at one input. The load resistance could be too small at one output, resulting in an excessive current.

#### 4.11.24 Stopwatch

##### Example 1


Setting: **Start /Stop** at **High level**, **Reset at start** is enabled.

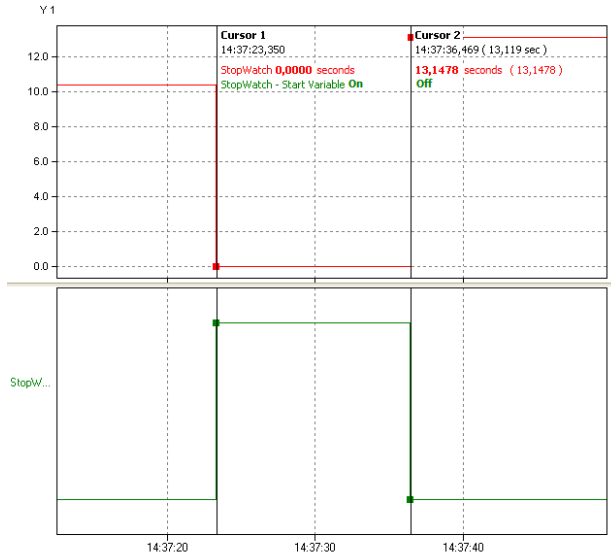

The stopwatch starts (**red** curve) at a high level in the start/stop channel (**green curve**). Once the level reverts to low, recording stops. The recording time is the high level time.

### Example 2

Setting: *Start/Stop* with *High level*, *Reset with start* is disabled.

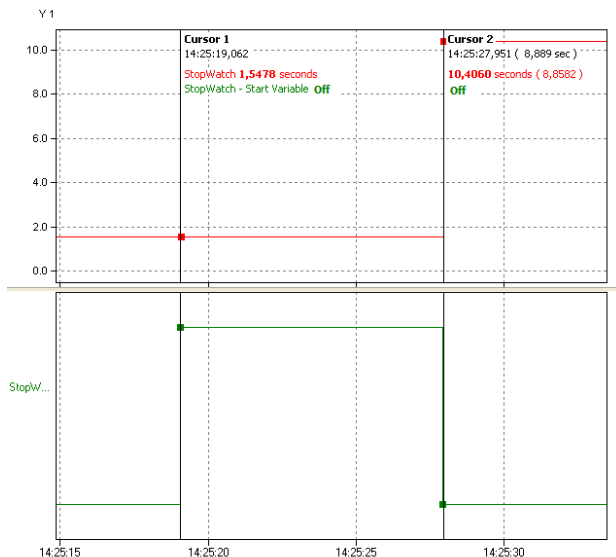

The stopwatch starts (**red** curve) when a high level starts in the start/stop channel (**green** curve). The last measured value was 1.5478 seconds. Once the level reverts to low (8.8582 seconds, calculated from the beginning of the high level), recording stops. The last measured value is added to the the current "runtime". The stopwatch thus has the value of 10.4060 seconds.

### 4.11.25 System monitoring

This software channel displays system information such as CPU load or memory usage.



Some of the system monitoring functions are already created in the "System Monitoring" group. Not all monitor values may be available, depending on the device version.

### Available system information

Selection	Description	Unit
Total CPU usage	Display of total used processing power.	%
Application CPU usage	Display of processing power used by the main program (data acquisition and calculation).	%



Selection	Description	Unit
System CPU usage	Display of processing power used by (operating) system.	%
Available memory	Displays how much free working memory is available.	MiB
Used memory	Displays how much working memory is in use.	MiB
System operating time	Display of time that the operating system has been working, as in the time since the device was last switched on.	Days
Application operating time	Display of time that the main program has been working, as in the time since <a href="#">Restart main application</a> or switching on or <a href="#">Reboot</a> of the device.	Days
Data storage used	Amount of memory already used for the data.	MiB
Free data storage	Amount of memory available for the data.	MiB
Firmware version	Device firmware version number.	—
CPU temperature	Temperature of the CPU.	°C
Core voltage	CPU core voltage, diagnostic value.	V
Core RAM voltage	Internal value for diagnostics only.	V
Aux voltage	Internal value for diagnostics only.	V
Battery OK	Display whether the backup battery for the real-time clock and the SRAM is working.	—


MiB = 1024 x 1024 byte (Mebibyte, actual storage capacity); MB = 1000 x 1000 byte (Megabyte). A hard disk with 500 MB (according to the manufacturer) can therefore effectively only save 476 MiB (500,000,000/(1024 x 1024)).

#### 4.11.26 Tolerance filter

The tolerance filter enables you to hide small (interference) signals. Values are only output (relayed) if the set **tolerance** for the previously output

value is exceeded. You can reduce the number of values which are directed into a memory group.

You can specify the tolerance in the electric unit of the channel or as a percentage in relation to the signal's scaling. In the example, values are only output if they deviate from the previously output value by more than 1 mV.

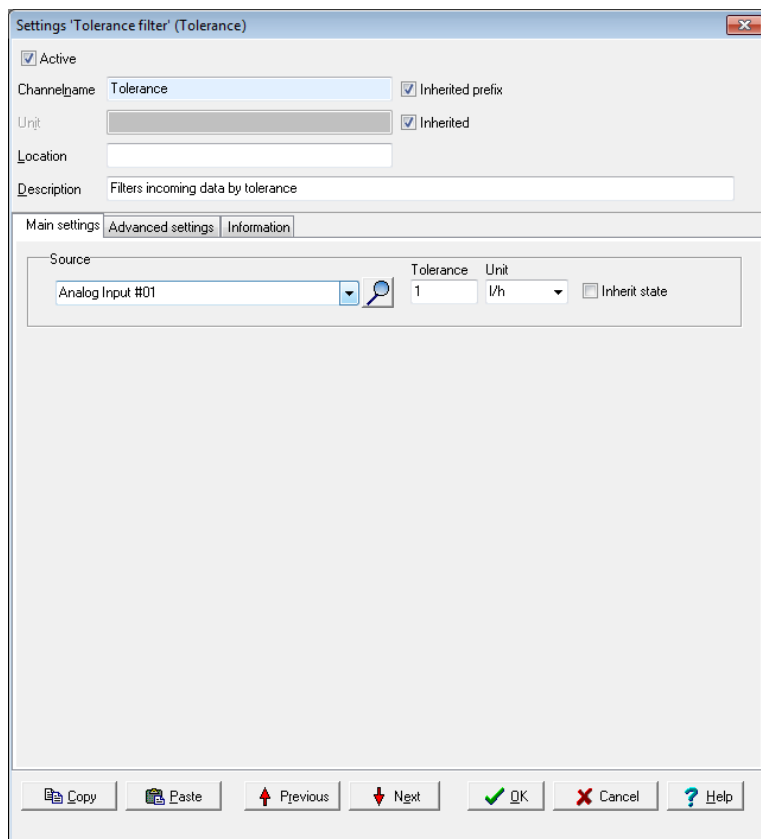

#### 4.11.27 Trigger

This software channel uses the signal of an (analogue) source to generate a logic signal for further processing. Its output is active ("On") after a trigger event (*High level*, *Low level*, *Rising edge*, *Falling edge* or *Edges (both)*). With *Every high*, every value unequal to 0 is a trigger, and with *Every low*, every value equal to 0 is a trigger.

Refer also to [Trigger options](#).

A trigger channel can be used for edge detection or recognition of a non-zero value. Another application is a trigger that is used after a limit value in order to evaluate the edge of the limit value separately.

### 4.11.28 Clock

This software channel allows you to define the date and clock time or their components as a channel. You can use different time systems, e.g. the time of the current time zone, the UTC or Unix time, and you can keep track of daylight saving time. Status information is also available:

- *Source of clock* shows which reference is used.
- *The clock is synchronised* states whether the clock has or hasn't been synchronised to a reference.
- *Synchronisation chain* shows on what part of the stratum chain (stratum 2, 3 etc) the device is.
- *Frequency errors of the clock* shows the deviation of the clock stroke.

Some definitions are available in the default setting of channels in the group [System](#).

Settings 'Clock' (Clock)

Active

Channelname: Clock

Unit:

Location:

Description: Date and time as a data value

Main settings | **Advanced settings** | Information

Mode

<input type="radio"/> Unix time	<input type="radio"/> Number of days 1 ... 28/29/30/31 (depending on month)
<input checked="" type="radio"/> Seconds since midnight 0 ... 86399 (24h * 60min * 60s)	<input type="radio"/> Number of hours 0 ... 23
<input type="radio"/> Structured date and time Example: 16.01.12 14:31:51 is 120116143151	<input type="radio"/> Number of minutes 0 ... 59
<input type="radio"/> Structured date Example: 16.01.12 is 120116	<input type="radio"/> Number of seconds 0 ... 60 (may include one leap second)
<input type="radio"/> Structured time Example: 14:31:51 is 143151	<input type="radio"/> Source of the clock
<input type="radio"/> Daylight saving time active	<input type="radio"/> The clock is synchronised
<input type="radio"/> Coordinated universal time (UTC)	<input type="radio"/> Synchronisation chain
<input type="radio"/> Time zone	<input type="radio"/> Frequency error of the clock
<input type="radio"/> Day of the week 1 (Monday) ... 7 (Sunday)	<input type="radio"/> Time as string
<input type="radio"/> Day since year beginning 1 ... 365	<input type="radio"/> Time as string without weekday and timezone
<input type="radio"/> Number of Year	<input type="radio"/> Last system start of the server
<input type="radio"/> Number of months 1 (january) ... 12 (december)	<input type="radio"/> Last system start of the device

#### 4.11.29 Alarm clock

This software channel allows the triggering of specific events at specified times. According to the configuration, an alarm clock channel generates one-off or repeat alarms for the specified duration.

Settings 'Alarmclock' (Alarmsignal)

Aktiv


Channelname: AlarmClock  Inherited prefix

Location:

Description: Generates Impulses at predefined Times

Main settings | **Advanced settings** | Information

Alarm setting

 **Activate daily alarm: Every 1 th day at 08:00:00, as from 01.09.2015 at 08:00:00.**

Alarm time:  Start time:   
 Start date:

Interval: Every 1  st day

Alarm duration (s)

Reset

Inherit state

Active fields for **Alarm clock setting** depend on the repetition settings (*One off, Hourly, Daily, Weekly, Monthly or Annually*). Enter the times in each active field. The alarm clock response is then described in the text box above these fields. With an alarm, the output of the alarm clock's channel switches to an active state ("On").

**Alarm duration:** Enter either a constant value (*Manual value*) or use *Channel* to select a channel with a value which determines the alarm duration as a time in seconds.

**Reset:** A reset event (a trigger via *Level* or *Edge*) ends the alarm and sets the alarm clock output to the non-active state ("Off"). Alarm clock settings are not changed by a reset, i.e. a follow-up alarm may trigger during the configured time.

Refer also to [Trigger options](#).

### 4.11.30 Counter

This software channel counts events.

Refer also to [Trigger options](#) .

**Upward count trigger:** The channel's counter is increased by one at the selected edge (*Rising edge*, *Falling edge*, *Edges (both)* or *Every high* (each value greater than 0) or *Every low*) (each value less than or equal to 0).

**Downward count trigger:** The channel's counter is decreased by one at the selected edge (*Rising edge*, *Falling edge*, *Edges (both)* or *Every high* (each value greater than 0) or *Every low*) (each value less than or equal to 0).

**Reset trigger:** The channel's counter is output and reset internally to zero at the selected edge (*Rising edge*, *Falling edge* or *Edges (both)*). When **Reset trigger** is enabled, the counter is displayed only at a reset event unless the **Generate intermediate values** option has been enabled.

**Generate intermediate values:** When enabled, the results are also output between the reset events immediately after their calculation (with every counter change).

**Value output:** The channel's counter is output with the selected edge (*Rising edge*, *Falling edge* or *Edges (both)*).

**Initial value:** Specify a value with which integration is to start. Select an available channel whose current value will be used at the start via **Channel**, or enter a constant value (**Manual value**). Selecting **Application** enables the value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application.




#### Info

If you activate **Persistence** in the **Additional settings tab**, each new counter status will be stored and, for example, will continue counting from there after a power outage. The choice for **Initial value** is then set to **Application**. When loading a configuration file, too, the last value stored is set as the initial value in this case.


Refer also to the "[Additional settings tab](#)" on page 48.

### Example of upwards counter

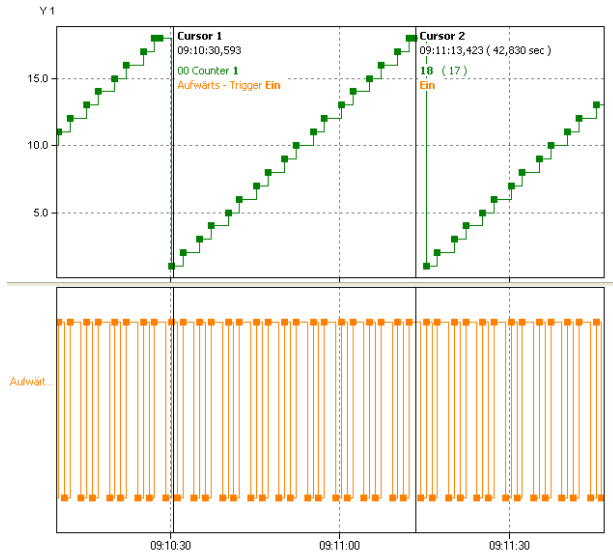

The counter (**green** curve) increases by one for each rising edge from the source channel (**orange** curve) until the reset trigger becomes active. The *Generate intermediate values* option is enabled, so all new counter readings are output immediately.


### Example for downwards counter

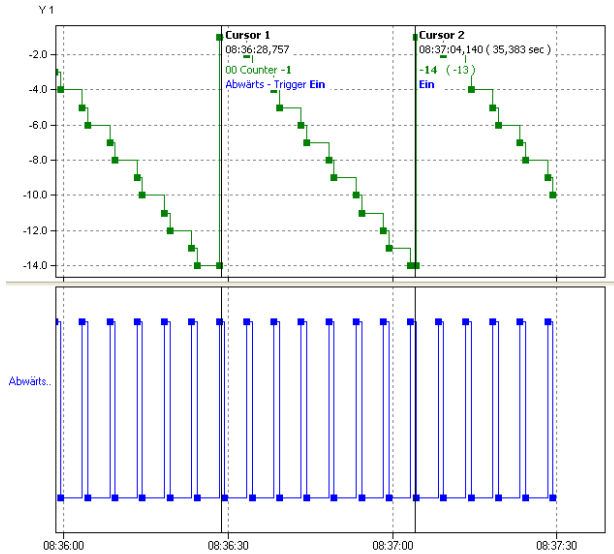

The counter (**green** curve) decreases by one for each edge from the source channel (**orange** curve) until the reset trigger becomes **active**. The *Generate intermediate values* option is enabled, so all new counter readings are output immediately.

### Example of value transfer



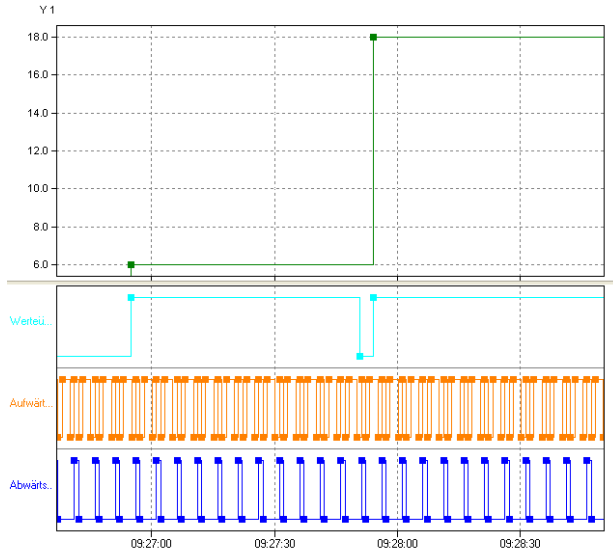


During the period of value transfer (**light blue curve**), the counter value is output. The option *Generate intermediate values* is disabled, so no intermediate values are output.


### 4.11.31 Time delay

This software channel allows you to change the time of (digital) source signals. This permits, for example, new trigger time points to be created for a subsequent channel or defined signals to be generated for outputting to the process. A *Pickup delay* mode temporally compresses the source signal and a *Dropout delay* temporally expands a signal.

**Pickup delay:** The timer channel starts the delay time when the source changes to the active state (*High level* or *Low level* trigger). At the end of the delay time, the timer output switches into an active state ("On") so long as the source retains the active state. If source's active state is shorter than the delay time, no reaction takes place with the timer output.

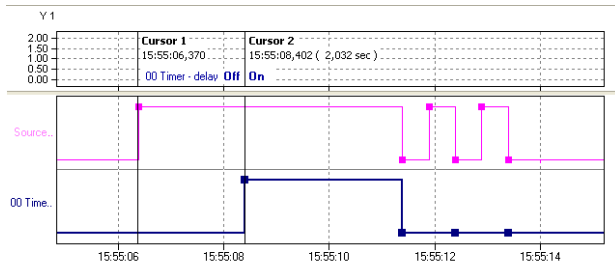

**Dropout delay:** The output of the timer channel becomes active ("On") when the source switches to an active state (*High level* or *Low level* trigger) or edge triggering (*Rising edge*, *Falling edge* or *Edges (both)* triggers). The same edge or the switch of the source from active back to inactive starts the delay time. At the end of the delay time, the timer's output becomes active ("Off").

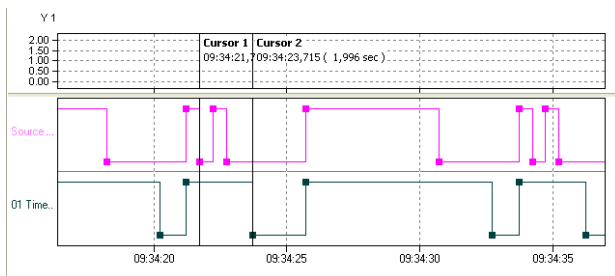

The image shows the signal of a dropout delay with level triggering (Low level).


**Retriggerable:** This option enables a restart of the delay time via other source trigger events during the delay time.

**Source:** Specify the delay channel here and which level or which edge is to be delayed.


**Reset:** A reset event (a trigger via *Level* or *Edge*) ends the delay time and puts the timer output into a non-active state ("Off"). The reset channel has a higher priority than the *source*. This enables a reset state to block the timer function.

**Delay:** Enter either a constant value (*Manual value*) or use *Channel* to select an existing channel with a value that determines the delay time in seconds.

### Example for dropout delay

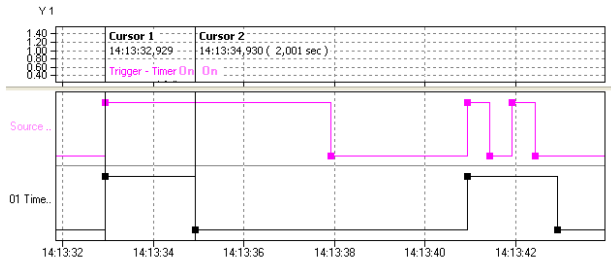


The source (**purple** curve) triggers with a rising edge. The delay is 2 seconds. Retriggerable is not enabled.

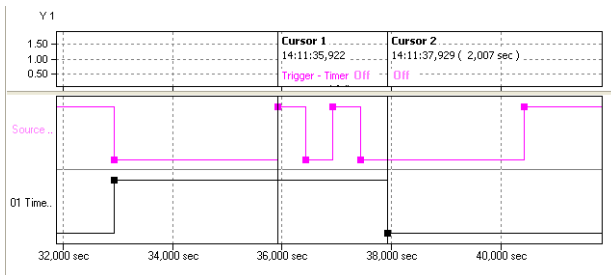


The source (**purple** curve) triggers with a **falling edge**. The delay is 7 seconds. **Retriggerable** is not enabled.

Examples for reset

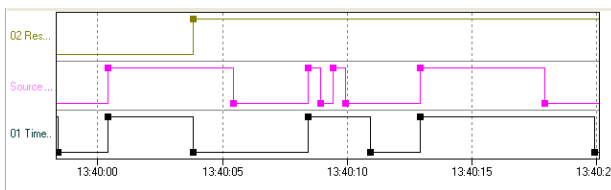

The source (**purple** curve) triggers with a **rising edge**. The delay is controlled via a channel. **Retriggerable** is not enabled. Reset (**green** curve) occurs at a **Rising edge**.

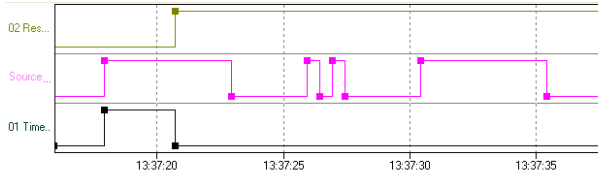

The source ( **purple** Triggers curve) triggers with a *Rising edge*. The delay time is controlled via a channel. *Retriggerable* is not active. Reset ( **green** Curve) occurs at a *High level*. The timer ( **black** curve) is then blocked for the duration of the reset signal.

## 4.12 Configuring interfaces

The device is equipped with multiple interfaces to enable communication with external devices. These interfaces enable connection to other PCs, PLCs, other third party equipment and sensors for data import or export. Ethernet, CAN bus and COM interfaces are configured as with channels, from the channel view of the DataService Configurator. The configuration is described in this section.

Refer also to "[Network settings](#)" on page 72, "[Settings for all dialogues](#)" on page 46

### Configuring the ethernet interface for Modbus TCP

- [TCP/IP services](#)
- [Modbus TCP server](#)
- [Modbus TCP client](#)
- [Modbus channel](#)

### Configuring the CAN bus interface

- [CAN connection](#)
- [CAN protocol](#)
- [CAN bus channel](#)

### Configuring the COM interfaces

- [COM connection](#)
- [PROFIBUS protocol](#)
- [PROFIBUS channel](#)
- [PROFIBUS logger protocol](#)
- [Modbus RTU protocol](#)
- [Modbus RTU master](#)
- [Modbus RTU slave](#)

- [User-defined protocol](#)
- [User-defined input channel](#)
- [User-defined output channel](#)

### Configuring LAN/WLAN/WWAN interfaces

- [LAN connection](#)
- [WLAN connection \(option\)](#)
- [WWAN connection \(option\)](#)

### USB interfaces

- [USB Device](#)
- [USB Host](#) (interface for USB memory)


#### 4.12.1 TCP/IP services

You can configure an ethernet connection to enable you to connect the device to a Modbus system (Modbus TCP).


Refer also to "[LAN](#)" on [page 256](#) if you wish to set up a DHCP server.

##### 4.12.1.1 Modbus Device (Server)

To create a Modbus channel, use the context menu for the Modbus protocol

(, Modbus RTU slave): *Modbus internal device*. To open the configurations dialogue, double click menu item *Modbus Device* or select *Properties* from the context menu. You can use the dialogue to set the name, location and description under which the device is to function in the Modbus network. Give the device's address settings here for the Modbus network.


### Main settings tab

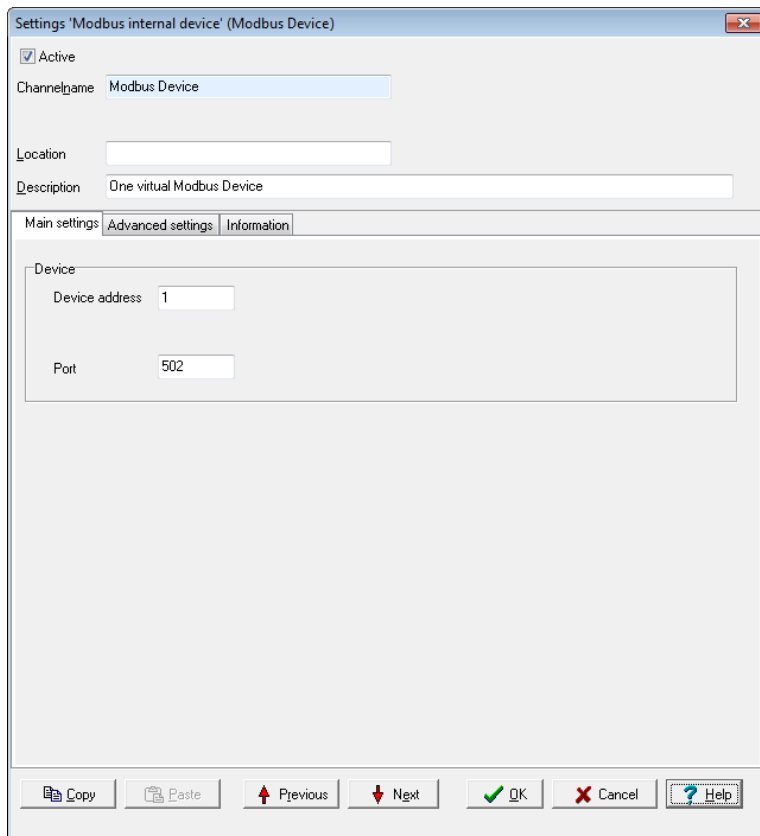


## Device

- **Device address**  
Sets the address for the device (slave).

The Port setting cannot be changed.


The  symbol is displayed following configuration. Then create and configure the required [Modbus channels](#) (signals).

### 4.12.1.2 Modbus Device (Client)

Use the context menu of the Modbus protocol (, Modbus RTU Master) to create a Modbus device: *Modbus external device*. To open the configurations dialogue, double click menu item *Modbus Device* or select *Properties* from the context menu. Use the dialogue to enter a name, location

and description for the external device. Set the device's (own) address in the Modbus network and the parameters for querying Modbus users.

## Main settings tab

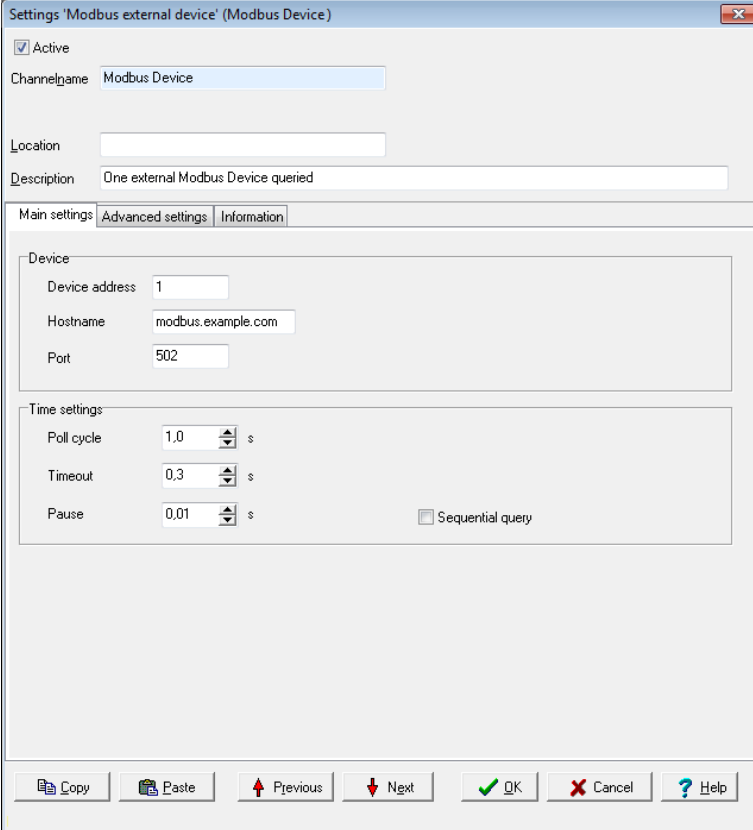

Settings: Modbus external device (Modbus Device)

Active

Channelname: Modbus Device

Location:

Description: One external Modbus Device queried

Main settings | **Advanced settings** | Information

Device

Device address:

Hostname:

Port:

Time settings

Poll cycle:  s

Timeout:  s

Pause:  s

Sequential query

Copy Paste Previous Next OK Cancel Help


## Device

- **Device address**  
Sets the address for the master.



Settings for **Host name** and **Port** cannot be changed.

## Time setting

- **Poll cycle**  
Sets the the time for cyclical querying of data. Existing Modbus users are (re)-queried once the set time expires. The time must be long enough in relation to the **pause** time and the number of channels (users), or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Timeout**  
Sets the maximum permissible time between a request and a response before an error status is shown. In the event of an error, a "wire-break" status is displayed (refer also to the table in [Status monitoring](#)). The time must be short enough in relation to the time for the **Poll cycle** or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Pause**  
Sets the waiting time for a query from more than one channel within a poll cycle. The time must be short enough for all channels to be queried within the time entered under **Poll cycle** or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Sequential query**  
If you enable this option, only one request telegram will be generated for sequential Modbus addresses instead of a separate request telegram for each address.


The  symbol is displayed following configuration. Then create and configure the required [Modbus channels](#) (signals).

### 4.12.1.3 Modbus channel

Depending on whether you want to output or read a signal, select **Create channel** → **Modbus output** or **Modbus input**. A Modbus input channel is identified by  and a Modbus output channel by . Refer also to [Settings for all dialogues](#).

#### **Main settings tab**



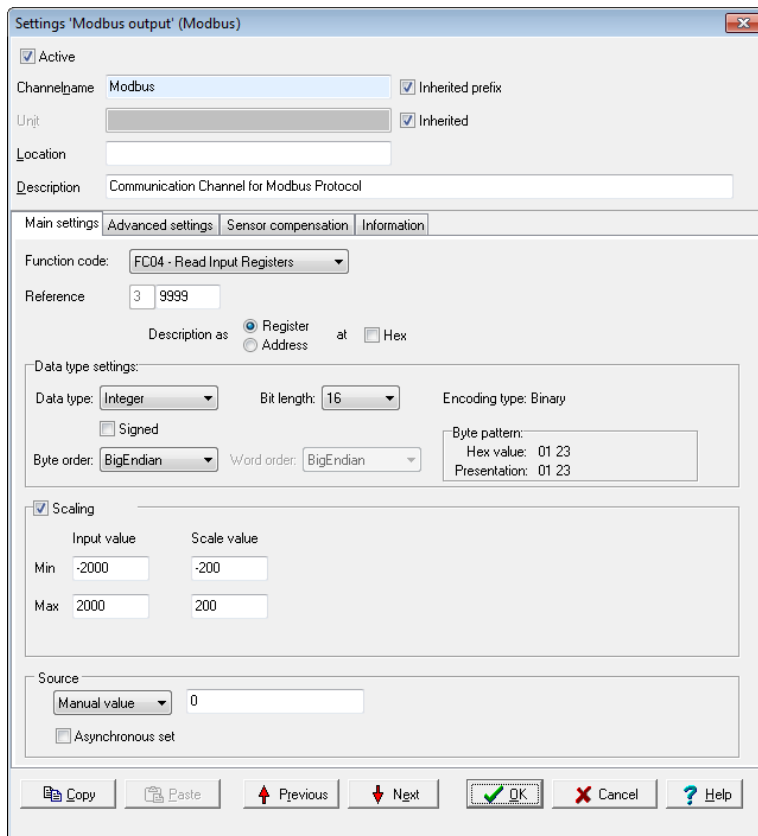

Settings: Modbus output (Modbus)

Active

Channel name: Modbus  Inherited prefix

Unit:   Inherited

Location:

Description: Communication Channel for Modbus Protocol

Main settings | Advanced settings | Sensor compensation | Information

Function code: FC04 - Read Input Registers

Reference: 3 9999

Description as:  Register at  Address  Hex

Data type settings:

Data type: Integer Bit length: 16 Encoding type: Binary

Signed

Byte order: BigEndian Word order: BigEndian

Byte pattern: Hex value: 01 23 Presentation: 01 23

Scaling

	Input value	Scale value
Min	-2000	-200
Max	2000	200

Source: Manual value   Asynchronous set

Copy Paste Previous Next OK Cancel Help

**Function code:** Select what is to be read (input) or written (output). Only permitted data will be available, for example FC01 to FC04 for the inputs and FC05/06 as well as FC15/16 for the outputs. The setting influences the values that can be configured in Data type settings.

**Reference:** The number in front of the input field indicates the memory page and thus the tab type. Input is made in decimal form by default, and is restricted to valid values. Using **Show as** you can specify whether the input is to be used **as an Address** or **as a Tab**, and whether it should follow decimal or hexadecimal (Hex) notation.

## Data type settings

These settings are dependent on the *Function code* inputs and also on whether the channel is an input or output.

- **Data type**  
Specifies the data type for interpreting the transmitted payload data. *Bit length*, *Byte order* and *Word order* are set and adjusted in relation to the adopted setting. *Start position in payload data*, *Scaling* and [Use channel as output](#) are also set according to the data type.
- **Signed**  
Sets whether the integer data type is to be interpreted as signed or unsigned. An 8-bit value would then be in the range -128 to 127 (two's complement) or 0 to 255. Floating values are always interpreted as signed. Bit-values make no distinction between signed and unsigned.
- **Bit length**  
Sets the bit lengths for integer and floating data types. *Byte sequence* and *Word sequence* are adjusted according to length value. This also applies to the numeric fields in the *Start position in data*.
- **Encoding type**  
Displays the encoding type used for interpreting the transmitted payload data.
- **Byte sequence**  
The byte order (byte sequence) is a number, made up of several bytes, that sets how bytes are ordered for the address. BigEndian, also known as Motorola format, orders the most significant byte to the lowest address. LittleEndian, also known as Intel format, orders the least significant byte to the lowest address. Refer also to <http://en.wikipedia.org/wiki/Endianness>.
- **Word order**  
Like the byte order, word order orders word data (1 word = 2 bytes = 16 bits) to addresses. In addition to determining byte order, a different word ordering may be necessary.
- **Byte pattern** (input channels only)  
To display the different byte and word order combinations, a hex value (a random number in the example) is shown with the resulting byte pattern of a message.

## Scaling

If a Modbus user sends values that require conversion, enable *Scaling* and enter Min / Max values to convert from the Input *value* to the Scale value.

If the [Use channel as output](#) option is used, scaling takes place in the opposite direction: Enter the range from the source data in *Scale* value and the range for the output signal in *Output value*.



Without scaling, the channel's *Data type* is used. When scaling is enabled, the floating data type is always used for the channel.

This also applies when the channel is used as an output: When scaling is enabled, the channel must have the floating data type, otherwise you have to use the type under *Data type*.

## Scaling example

In the above image, a conversion takes place from 2000 (integer value) to 200 (°C), i.e. it returns a decimal point despite transmission of an integer (whole number).

## Using the channel as output

If you create a Modbus channel as an output, you can send data from the **Delphin** device to other Modbus users.

Enter the data for the message to be sent in a similar way to a Modbus input. You must also enter the **Source** (of the signal).

Enter either a constant for the **Source** (**Manual value**) or select **Channel** and an existing channel in the device for which a value is to be output. Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application. The source type is converted to the type given in **Data type** (refer also to [Scaling](#)).

**Inherit status** (for Channel settings only): The status of the input channel is used, but not output to the CAN bus.

**Set asynchronous**: When this option is enabled the output value transmits as soon as the value changes, that is, in real-time. Otherwise a new value is transmitted with the next cycle.

### 4.12.2 CAN connection


Follow these steps to run a device or sensor via the CAN interface (both the reading and output of signals is possible):

1. Configuring the basic settings of the CAN connection (this section)
2. Creating the channel for CAN protocol: [CAN protocol](#)
3. Create one (or several) [CAN bus channels](#)

The CAN connection is displayed in the **Channels** tab with the CAN-symbol **CAN**. The CAN connection is available in the user-defined channel view under the interface entry. The hardware channel view lists the CAN connection directly below the device as long as the user has not already moved the modules or channels.

Double-click a CAN entry or select **Properties** from the context menu to display the configuration dialogue. Set the baud rate and the length of the identifier in the Main settings tab. We recommend giving a unique **Channel name**, amending the **Description** and, if necessary, entering a **Location**.

## Main settings tab

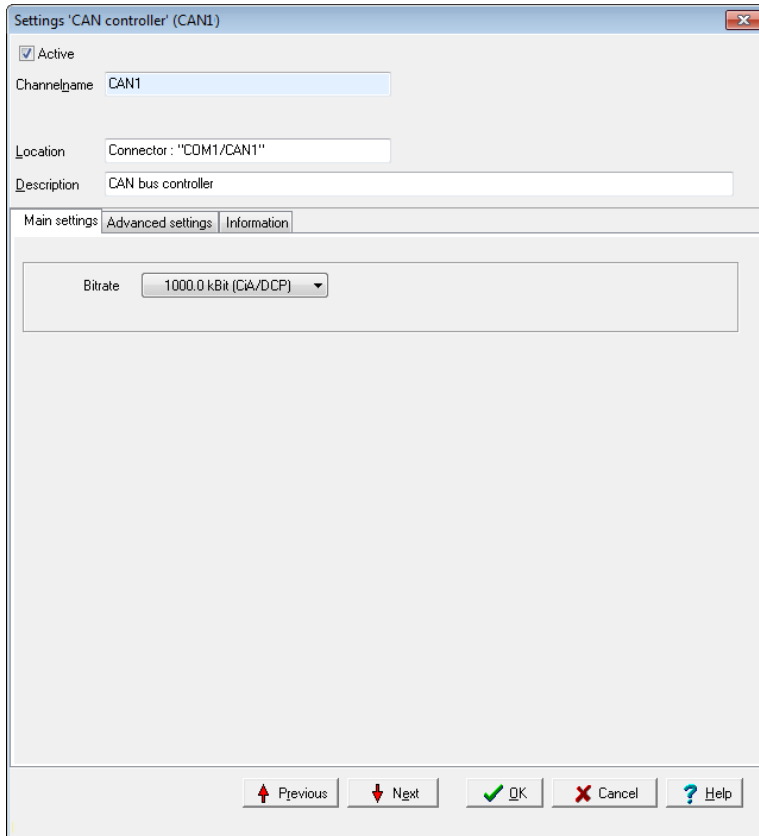

## Bit rate

The bit rate states the number of characters transferred per second. Selection depends on the properties of the connected devices and the cable length between the devices:

For longer lines, a lower baud rate should be selected to achieve error-free communication.

The following are valid for CAN connections.


- from 15 m: 1000 kBit (standard setting)
- up to 20 m: 500 kBit
- up to 45 m: 333.3 kBit
- up to 60 m: 250 kBit
- up to 150m: 100 kBit

The bit rate must be the same for transmission and reception. Therefore, determine firstly the bit rate for the equipment communicated with and use this value to set the CAN connection's bit rate.

The detail in brackets shows for which protocol this bit rate is available (CiA = CAN in automation, DCP = **Delphin** CAN protocol).

#### 4.12.2.1 CAN protocol

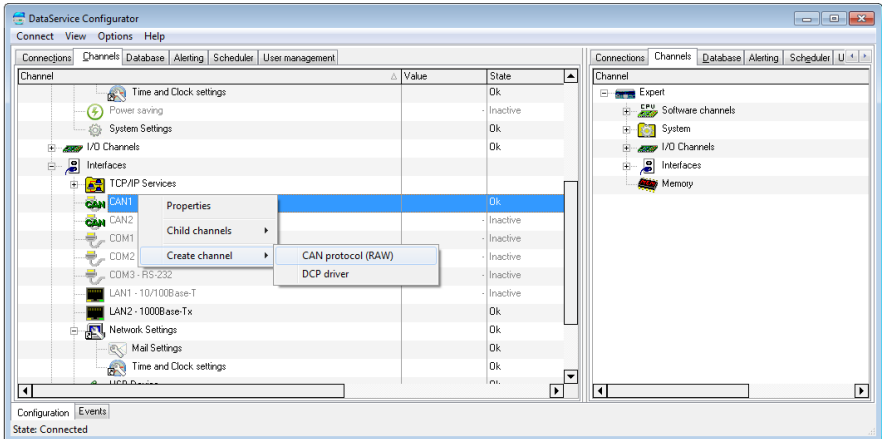


Create a channel for the CAN protocol via the context menu *Create channel* → *CAN protocol (RAW)* of the CAN connection.




The  symbol is then displayed for the CAN protocol.

Double-click the CAN protocol or select *Properties* from the context menu to display the configuration dialogue. Use the dialogue to enter a name, location and description for the CAN protocol.

#### 4.12.2.2 CAN bus channel

A CAN bus input channel is identified by  and a CAN bus output signal by . CAN-bus channels are available only when a [CAN connection](#) and [CAN protocol](#) have been configured. Select *Create channel* → *CAN bus input* or *CAN bus output* in the CAN protocol context menu (, CAN RAW protocol), to create channels.

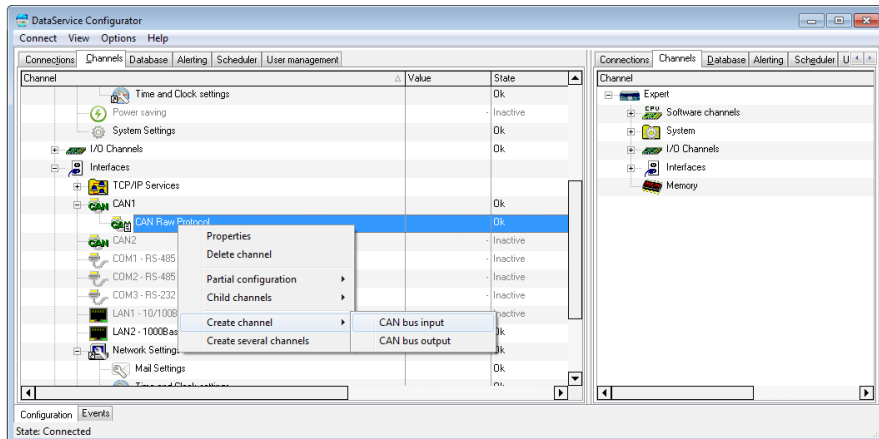

Double-click a CAN bus channel entry or select **Properties** from the context menu to display the configuration dialogue. The data to be entered depends on the type signal that is to be sent to or received from the CAN-bus user. (Refer to [Using channel as an output](#)). Therefore, obtain information on the format and settings of the signal before entering data here. Refer also to [Settings for all dialogues](#).

Settings 'CAN bus input' (Oiltemperature)

Active

Channelname: Oiltemperature  Inherited prefix

Unit: °C  Inherited

Location:

Description: Communication Channel for CAN RAW Protocol

Main settings | **Advanced settings** | Sensor compensation | Information

CAN ID

Extended ID (Extended: 29 bit)

ID: 110 Mask: 7FF

Startposition within reference data

Byte offset: 2 (Maximum value: 4 Byte) Bit offset: 0 Bit offset not available

Data type settings:

Data type: Integer Bit length: 16 Encoding type: Binary

Signed

Byte order: BigEndian Word order: BigEndian

Byte pattern:  
Hex value: 01 23 45 67  
Presentation: 01 23 45 67

Scaling

	Input value	Scale value
Min	-2000	-200 °C
Max	2000	200 °C

Input adaptive

Copy Paste Previous Next OK Cancel Help

## Main settings tab

### CAN ID

- **Extended ID**  
Set whether the CAN message uses 11 bit or 29 bit for the identifier.
- **ID**  
ID Enter a hexadecimal value for an ID either with 11 bit (hex value of between 1 and 7FF) or 29 bit (between 1 and 1FFFFFFF). Input is restricted to the valid values.  
The entry directly sets the identifier for message to be received (or sent, see [Use channel as output](#)) when 7FF or 1FFFFFFF is selected for **Filter**.
- **Mask**  
The mask functions as a filter and provides the option of setting the CAN bus channel to a whole group of IDs. The range of input depends on the setting

in **Extended ID**. The filter value is linked with the configured and received ID bit by bit AND. The message is evaluated when the configured and received ID have the same value, otherwise it will be ignored. An identifier group is established when the bits that are to be ignored during evaluation are set to 0. Enter **7FF** or **1FFFFFFF** when you do not want to use a mask for filtering.

Example for mask settings

**ID** = 0x027 = 100111 = binary, **Filter** = 0x24 = 100100 binary (numbers with 0x are in hexadecimal format); bit by bit AND operation results in 100100 in binary. The first four digits of the link and ID are identical; and only the last two digits are 0 and 1. CAN messages are then received with IDs that begin with 1001 (binary) and end with either two zeroes or two ones, i.e. all messages with the (binary) IDs 100100, 100101, 100 110 and 100111.

### Start position in payload data

- **Byte offset**

The length of the payload data, i.e. the size of the data field (DATA) of a CAN message, is limited to a maximum of 8 bytes. This allows multiple signals to be transmitted within a CAN message as long as not all the 8 bytes per signal are being used (this would only be the case with a binary-coded 64-bit floating value). Enter the starting byte for this signal's payload data. In the example, the value 2 means that, for example, one signal with 2 bytes (binary-coded 16-bit integer value) would fit before the current signal and two signals behind it.

The maximum possible value of the offset is derived from the bit length of the data type and is displayed to the right of the numeric field. Input is restricted to the valid values, and the default is 0

- **Bit offset**

This field is available only for the bit data type and binary encoding. The payload bit in this data type can be between the 0 and seventh byte position.

Byte offset is also available for this data type. Input is restricted to the valid values, and the default is 0

### Data type settings

- **Data type**

Specifies the data type for interpreting the transmitted payload data. **Bit length**, **Byte order** and **Word order** are set and adjusted in relation to the adopted setting. [Start position in payload data](#), [Scaling](#) and [Use channel as output](#) are also set according to the data type.

- **Signed**

Sets whether the integer data type is to be interpreted as signed or unsigned. An 8-bit value would then be in the range -128 to 127 (two's complement) or 0 to 255. Floating values are always interpreted as signed. Bit-values make no distinction between signed and unsigned.



- **Bit length**  
Sets the bit lengths for integer and floating data types. **Byte sequence** and **Word sequence** are adjusted according to length value. This also applies to the numeric fields in the [Start position in data](#).
- **Encoding type**  
Displays the encoding type used for interpreting the transmitted payload data.
- **Byte sequence**  
The byte order (byte sequence) is a number, made up of several bytes, that sets how bytes are ordered for the address. BigEndian, also known as Motorola format, orders the most significant byte to the lowest address. LittleEndian, also known as Intel format, orders the least significant byte to the lowest address. Refer also to <http://en.wikipedia.org/wiki/Endianness>.
- **Word order**  
Like the byte order, word order orders word data (1 word = 2 bytes = 16 bits) to addresses. In addition to determining byte order, a different word ordering may be necessary.
- **Byte pattern**  
To display the different byte and word order combinations, a hex value (a random number in the example) is shown with the resulting byte pattern of a message.

## Scaling

If a CAB user sends values that require conversion, enable **Scaling** and enter **Min / Max** values to convert from the **Input value** to the Scale value .

If the [Use channel as output](#) option is used, scaling takes place in the opposite direction: Enter the range from the source data in **Scale** value and the range for the output signal in **Output value**.



Without scaling, the channel's **Data type** is used. When scaling is enabled, the floating data type is always used for the channel. This also applies when the channel is used as an output: When scaling is enabled, the channel must have the floating data type, otherwise you have to use the type under Data type.

### Scaling example

In the above image, a conversion takes place from 2000 (integer value) to 200 (°C), i.e. it returns a decimal point despite transmission of an integer (whole number).

## Using the channel as output

If you create a CAN bus channel as an output, you can send data from the **Expert VibroExpert Logger** device to other CAN bus users.

Enter the data for the message to be sent in a similar way to a CAN bus input. There is no **mask** available here as for an input, so the (signal) **source** has to be entered.

Enter either a constant for the **Source (Manual value)** or select **Channel** and an existing channel in the device for which a value is to be output. Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application. The source type is converted to the type given in **Data type** (refer also to [Scaling](#)).

**Inherit status** (for **Channel** settings only): The status of the input channel is used, but not output to the CAN bus.

### 4.12.3 COM connection

Follow these steps to run a device via the COM interface (serial, Modbus RTU or PROFIBUS):

- Select the interface mode of the COM connection (this section).
- Set the communication parameters for the selected COM connection.

To use the connection for PROFIBUS, the following settings must be adopted:

- Configure the [PROFIBUS protocol](#).
- Create one (or several) channels: [PROFIBUS channel](#).

To use the Modbus RTU connection, the following settings must be adopted:


- Configure the [Modbus RTU protocol](#).
- Create a [Modbus RTU master](#) or a [Modbus RTU slave](#).
- Create one (or several) channels: [Modbus channel](#).

Alternatively, you can set a protocol yourself - the user-defined protocol:

- Configure the [user-defined protocol](#).
- Create one (or several) [input channels](#).
- Create one (or several) [output channels](#).


To use the connection as a logger for PROFIBUS data telegrams, the following settings must be adopted:

- Configure the [PROFIBUS logger protocol](#).
- Create one (or several) [PROFIBUS logger pairs](#).
- Create one (or several) [input channels](#).

The COM connection is indicated in the **Channels** tab with the COM symbol . The COM connection is available in the channel view under the interface entry.

Double-click a COM entry or select **Properties** from the context menu to display the configuration dialogue. We recommend giving a unique channel name, amending the **Description** and, if necessary, entering a **Location**.

## Main settings tab

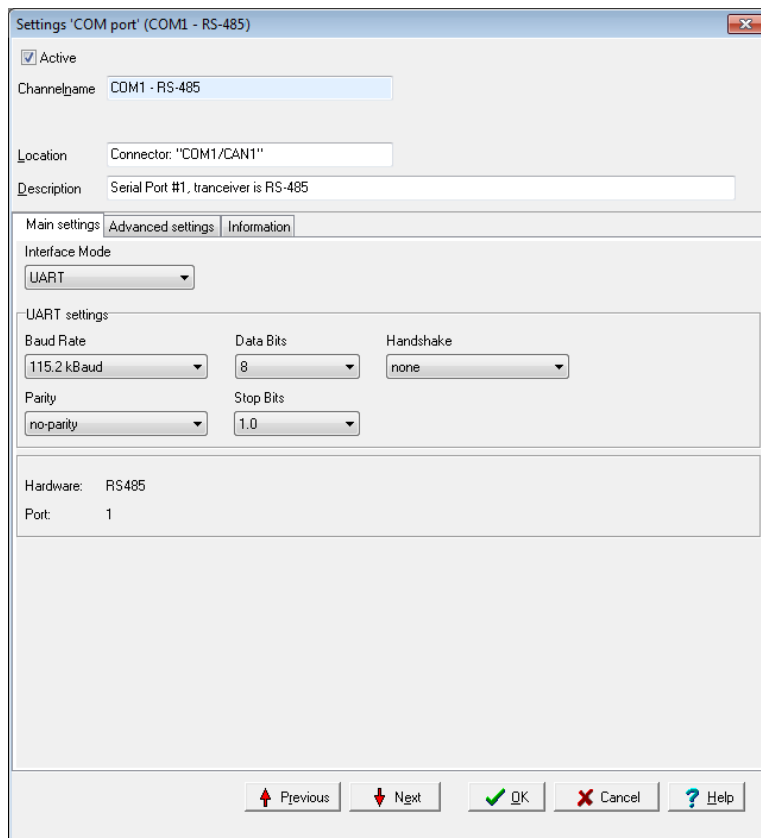

Settings: 'COM port' (COM1 - RS-485)

Active

Channelname: COM1 - RS-485

Location: Connector: "COM1/CAN1"

Description: Serial Port #1, transceiver is RS-485

Main settings | Advanced settings | Information

Interface Mode: UART

UART settings:

Baud Rate: 115.2 kBaud	Data Bits: 8	Handshake: none
Parity: no-parity	Stop Bits: 1.0	

Hardware: RS485  
Port: 1

Previous | Next | OK | Cancel | Help

### Interface mode

You might not make a choice for some COM interfaces, depending on the device, as there is only one setting available. Otherwise, select whether the connection is for PROFIBUS devices (selection **PROFIBUS** or **PROFIBUS logger**) or you want to give settings freely for other protocols (**Modbus**, **user-defined**)(selection **UART**). Additional fields are displayed depending on your selection, e.g. to set interface parameters such as baud rate, number of data bits, or parity. You can also create a channel with

PROFIBUS protocol via the context menu. However, only PROFIBUS settings can be chosen afterwards.



PROFIBUS communication is limited to fixed communication parameters. Therefore, the interface mode cannot be changed after the protocol has been created, i.e. the channel only functions as PROFIBUS.

A change of the interface mode is only possible after protocol is deleted.

## UART settings

- **Baud rate**  
The baud rate states the number of characters transferred per second. Selection depends on the properties of the connected devices and the cable length between the devices: For longer lines, a lower baud rate should be selected to achieve error-free communication. Usually a maximum 20 m are permitted for a RS232 connection.
- **Data bits**  
Sets how many bits can be used for a data transmission, whereby the default setting is 8.
- **Handshake**  
Sets how the data flow is controlled. You can choose between *none* (without control), *Xon/Xoff* (software handshake) and *RTS/CTS* (hardware handshake), whereby the default setting is *none*.
- **Parity**  
Sets whether a parity bit accompanies a transmission and how it is determined. The default setting is *none*.
- **Stop bits**  
Sets the number of stop bits, which are the default setting.

## Displayed information

Below the UART settings are the connection properties (**Hardware:** *RS485* or *RS232* / **Port:** *1 ... 3*).

## PROFIBUS settings




**Delphin devices are set to address 126 via the web interface in factory mode or after [configuration reset \(default configuration\)](#). This address is a placeholder and does not exist in the PROFIBUS network.**

## PROFIBUS address

**Slave address:** Enter the address configured in PROFIBUS master for the device (1 to 125).

## Displayed information

The connection properties (*Hardware* and *Port*) are displayed below the PROFIBUS settings.

The symbol  is then displayed for the channel following configuration. Then create and configure the required [PROFIBUS channels](#) (Signals).


## PROFIBUS logger settings

### PROFIBUS baud rate

**Baud rate:** Enter the baud rate of the connected PROFIBUS network here.

## Displayed information

The connection properties (*Hardware* and *Port*) are displayed below the PROFIBUS settings.

The symbol  is then displayed for the channel following configuration. Then create and configure the required [PROFIBUS logger protocol](#).

Other settings are described in the following sections:


- [PROFIBUS protocol](#)
- [PROFIBUS channel](#)
- [PROFIBUS logger protocol](#)
- [PROFIBUS logger pair](#)
- [Modbus RTU protocol](#)
- [Modbus RTU master](#)
- [Modbus RTU slave](#)
- [Modbus RTU channel](#)
- [User-defined protocol](#)
- [User-defined input channel](#)
- [User-defined output channel](#)

### 4.12.3.1 PROFIBUS protocol




**You must run the COM connection in the *PROFIBUS* interface mode and set the PROFIBUS address there (see [COM connection](#)).**

Create the PROFIBUS protocol channel via the context menu of the COM connection: *Create channel* → *PROFIBUS protocol*.

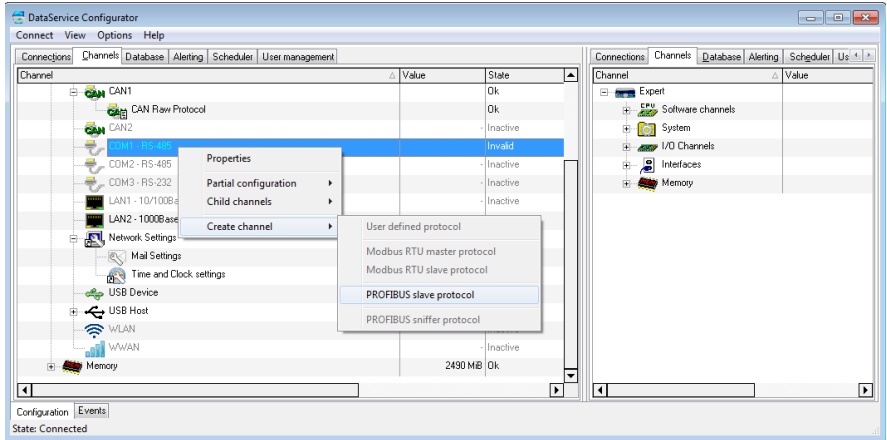

We recommend giving a unique *Channel name*, amending the *Description* and, if necessary, entering the *Location*.

## Main settings tab

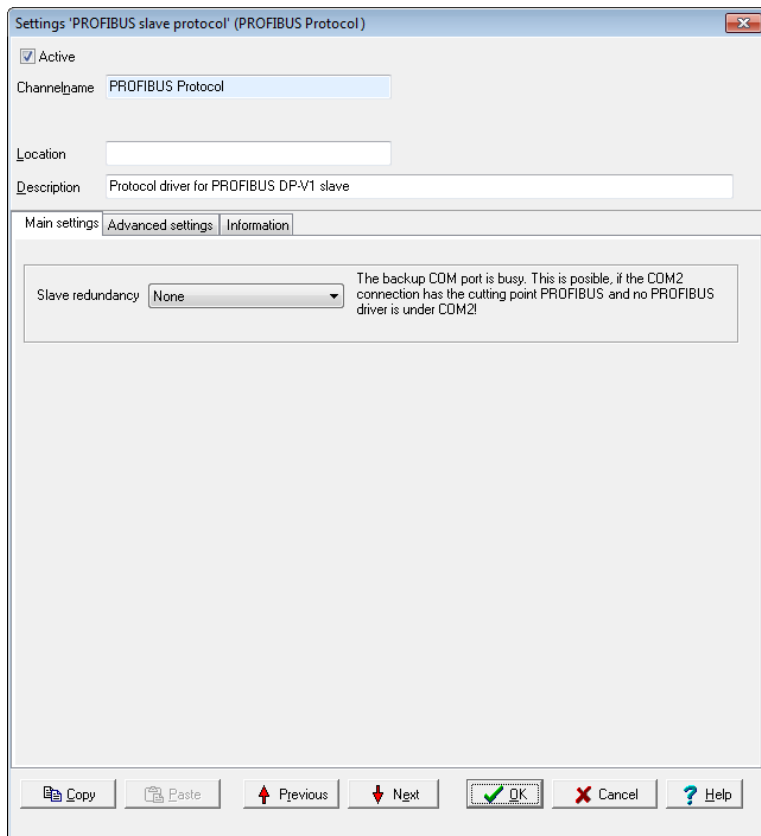


Use **Slave redundancy** to set up a redundant PROFIBUS interface. The interface is used only when the intended interface (COM1) fails.

- Select **None** if redundancy is not required.
- Select **PNO\_2212\_V1.2** to set up a redundant PROFIBUS interface. A redundant PROFIBUS interface can be configured with this setting in accordance with the procedure described in PNO Document No. 2212 V1.2 of November 2004 from the German PROFIBUS User Organization (PNO).
- The **Custom1** or **Custom2** option is reserved for customer-specific enhancements.




After selecting **Slave redundancy**, **Backup COM-Port** shows that the COM2 interface is used for backups.




**Slave redundancy** can be selected only when a second interface is available for backup operations. A second interface must run in PROFIBUS mode. However, no PROFIBUS protocol is allowed to be configured to this connection. The dialogue notifies of any incorrect settings.

The symbol  is then displayed for the channel following configuration. Then create and configure the required [PROFIBUS channels](#) (Signals).

### 4.12.3.2 PROFIBUS channel

Creating PROFIBUS channels requires creation of a [COM connection](#) in the **PROFIBUS** interface mode and of a [PROFIBUS protocol](#) (subchannel). Select *Create channel* → *PROFIBUS input* or *PROFIBUS output* from the context menu of the [PROFIBUS protocol](#) (, PROFIBUS protocol) in order to create channels for your PROFIBUS signals. A PROFIBUS input channel is identified by , and a PROFIBUS output channel by .

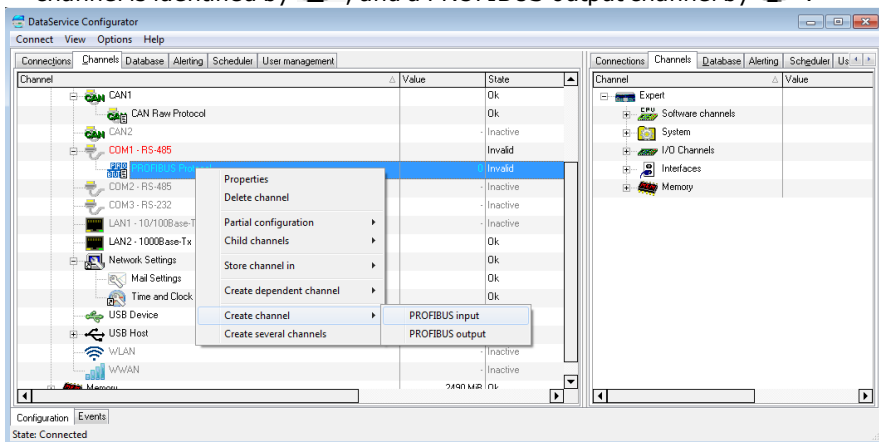

Double-click a PROFIBUS channel or select **Properties** from the context menu to display the configuration dialogue. The data to be entered depends on the signal type that is to be sent to or received from the PROFIBUS user. (Refer to [Using channel as an output](#)). Therefore, obtain information on the format and settings of relevant PROFIBUS signals before entering data here.

Refer also to [Settings for all dialogues](#).

### Main settings tab



Settings 'PROFIBUS input' (PROFIBUS)

Active

Channelname: PROFIBUS  Inherited prefix

Unit:   Inherited

Location:

Description: Communication Channel for PROFIBUS Protocol

Main settings | **Advanced settings** | Sensor compensation | Information

Start position within user data frame

Byte offset:  (Maximum value: 240 Byte) Bit offset:

Data type settings:

Data type:  Bit length:  Encoding type: Binary

Signed

Byte order:  Word order:

Byte pattern:  
Hex value: 01 23 45 67  
Presentation: 01 23 45 67

Scaling

	Input value	Scale value
Min	<input type="text" value="0"/>	<input type="text" value="0"/>
Max	<input type="text" value="1"/>	<input type="text" value="1"/>

Input adaptive

Copy Paste Previous Next OK Cancel Help

## Start position in payload data

- **Byte offset**

The length of the payload data, i.e. the size of the data field (DU) of a PROFIBUS message, is limited to a maximum of 244 bytes. This enables multiple signals to be transmitted within a message. Enter the starting byte for this signal's payload data

The maximum possible value of the offset is derived from the bit length of the data type and is displayed to the right of the numeric field. Input is restricted to the valid values, and the default is 0



When configuring the Profibus master, it receives information on the number of I/O channels from its slave, and hence also from the PROFIBUS slave. At run time, i.e. when data exchange is taking place, the master sends the I/O configuration to the slave. If the configured byte offset in the **Delphin** device is greater than the I/O addresses of the transmitted master configuration, the **Delphin** device shows a configuration error in the channel status.

- **Bit offset**

This field is available only for the bit data type and binary encoding. The payload bit in this data type can be between the 0 and seventh byte position. Byte offset is also available for this data type. Input is restricted to the valid values, and the default is 0

## Data type settings

- **Data type**

Specifies the data type for interpreting the transmitted payload data. **Bit length**, **Byte order** and **Word order** are set and adjusted in relation to the adopted setting. The [Start position in data](#) and [Scaling](#) are set according to data type.

- **Signed**

Sets whether the integer data type is to be interpreted as signed or unsigned. An 8-bit value would then be in the range -128 to 127 (two's complement) or 0 to 255. Floating values are always interpreted as signed. Bit-values make no distinction between signed and unsigned.

- **Bit length**

Sets the bit lengths for integer and floating data types. Byte sequence and Word sequence are adjusted according to length value. This also applies to the numeric fields in the [Start position in data](#).

- **Encoding type**

Displays the encoding type used for interpreting the transmitted payload data.

- **Byte sequence**

The byte order (byte sequence) is a number, made up of several bytes, that sets how bytes are ordered for the address. BigEndian, also known as Motorola format, orders the most significant byte to the lowest address. LittleEndian, also known as Intel format, orders the least significant byte to the lowest address. Refer also to <http://en.wikipedia.org/wiki/Endianness>.

- **Word order**

Like the byte order, word order orders word data (1 word = 2 bytes = 16 bits) to addresses. In addition to determining byte order, a different word ordering may be necessary.

- **Byte pattern**

To display the different byte and word order combinations, a hex value (a random number in the example) is shown with the resulting byte pattern of a message.

## Scaling

If a PROFIBUS master sends values that require conversion, enable **Scaling** and enter **Min / Max** values to convert from the **Input value** to the Scale value .

If the [Use channel as output](#) option is used, scaling takes place in the opposite direction: Enter the range from the source data in **Scale** value and the range for the output signal in **Output value**.



Without scaling, the channel's data type is that entered under **Data type**. When scaling is enabled, the floating data type is always used for the channel.

This also applies when the channel is used as an output: When scaling is enabled, the channel must have the floating **data type**, otherwise you have to use the type under Data type.

### Scaling example

In the above image, a conversion takes place from 2000 (integer value) to 200 (°C), i.e. it returns a decimal point despite transmission of an integer (whole number).

## Using the channel as output

If you create a PROFIBUS channel as an output, you can send data from the **Delphin** device to other PROFIBUS users.

Enter the data for the message to be sent in a similar way to a PROFIBUS input. You must also enter the **Source** (of the signal).

Enter either a constant for the **Source (Manual value)** or select **Channel** and an existing channel in the device for which a value is to be output.


Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application. The source type is converted to the type given in **Data type** (refer also to [Scaling](#)).

**Inherit status** (for **Channel** settings only): The status of the input channel is used, but not output to the PROFIBUS itself.


### 4.12.3.3 Modbus RTU Slave/Master


Use the **Main settings** tab to enter the general settings for the interface (baud rate, number of data bits etc.) for the relevant COM interface. Refer to [COM interface, UART settings](#).

Use the context menu of the COM connection to create the protocol for Modbus: **Create channel** → **Modbus RTU master/slave protocol**.

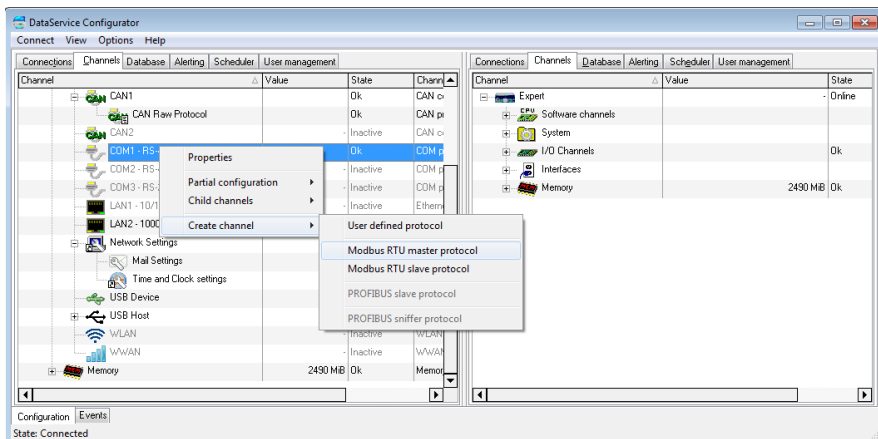


We recommend giving a unique **Channel name**, amending the **Description** and, if necessary, entering a Location.

Following configuration, the  symbol is displayed for a Modbus RTU

master and  for a Modbus RTU slave. Then create and configure the required channels for the [Modbus master](#) and/or [Modbus slave](#).

## Modbus Device (Master)

Use the context menu of the Modbus protocol (, Modbus RTU Master) to create a Modbus device: **Modbus external device**. To open the configurations dialogue, double click menu item **Modbus Device** or select **Properties** from the context menu. Use the dialogue to enter a name, location and description for the external device. Set the device's (own) address in the Modbus network and the parameters for querying Modbus users.

## Main settings tab

Settings 'Modbus external device' (Modbus Device)

Active

Channelname: Modbus Device

Location:

Description: One external Modbus Device queried

Main settings | **Advanced settings** | Information

Device

Device address:

Hostname:

Port:

Time settings

Poll cycle:  s

Timeout:  s

Pause:  s  Sequential query

Copy Paste Previous Next OK Cancel Help

## Device


- **Device address**  
Sets the address for the master.

Settings for **Host name** and **Port** cannot be changed.

## Time setting


- **Poll cycle**  
Sets the the time for cyclical querying of data. Existing Modbus users are (re)-queried once the set time expires. The time must be long enough in relation to the **pause** time and the number of channels (users), or you will receive an error message when closing the dialogue. The values entered will then not be saved.

- **Timeout**  
Sets the maximum permissible time between a request and a response before an error status is shown. In the event of an error, a "wire-break" status is displayed (refer also to the table in [Status monitoring](#)). The time must be short enough in relation to the time for the *Poll cycle* or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Pause**  
Sets the waiting time for a query from more than one channel within a poll cycle. The time must be short enough for all channels to be queried within the time entered under *Poll cycle* or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Sequential query**  
If you enable this option, only one request telegram will be generated for sequential Modbus addresses instead of a separate request telegram for each address.


The  symbol is displayed following configuration. Then create and configure the required [Modbus channels](#) (signals).

## Modbus Device (Slave)

To create a Modbus channel, use the context menu for the Modbus protocol

(, Modbus RTU slave): *Modbus internal device*. To open the configurations dialogue, double click menu item *Modbus Device* or select *Properties* from the context menu. You can use the dialogue to set the name, location and description under which the device is to function in the Modbus network. Give the device's address settings here for the Modbus network.


## Main settings tab

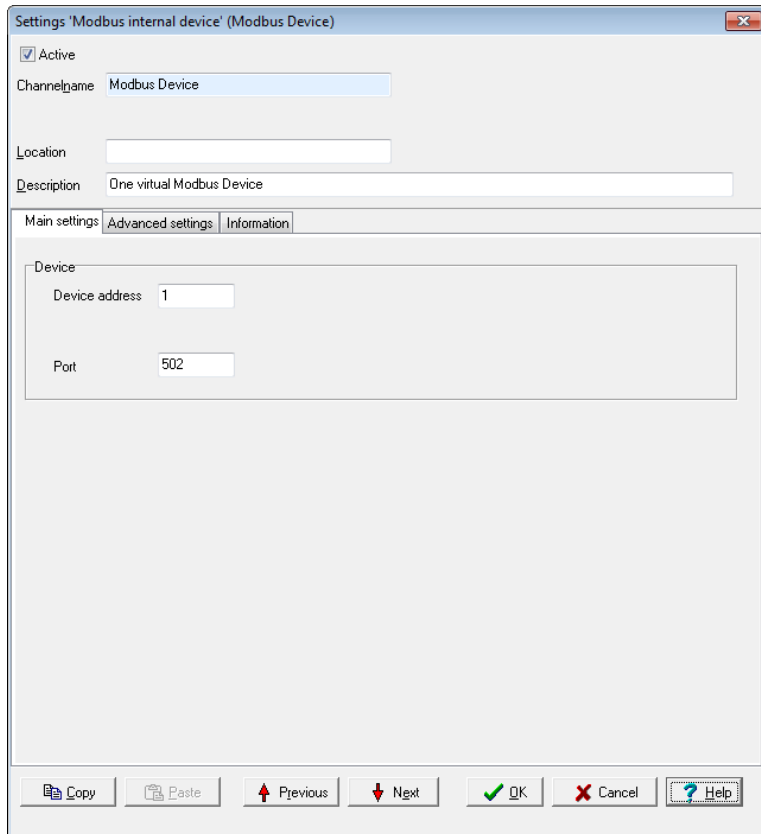



## Device

- **Device address**  
Sets the address for the device (slave).


The Port setting cannot be changed.

The  symbol is displayed following configuration. Then create and configure the required [Modbus channels](#) (signals).

## Modbus channel

Depending on whether you want to output or read a signal, select **Create channel** → **Modbus** output or **Modbus input**. A Modbus input channel is identified by  and a Modbus output channel by . Refer also to [Settings for all dialogues](#).

## Main settings tab

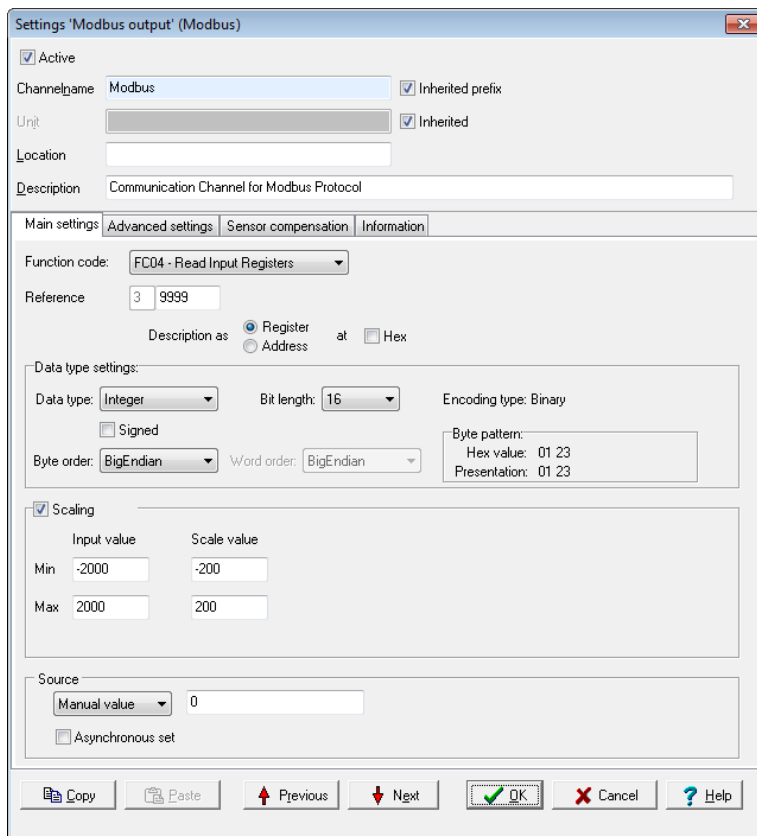

**Function code:** Select what is to be read (input) or written (output). Only permitted data will be available, for example FC01 to FC04 for the inputs and FC05/06 as well as FC15/16 for the outputs. The setting influences the values that can be configured in Data type settings.

**Reference:** The number in front of the input field indicates the memory page and thus the tab type.

Input is made in decimal form by default, and is restricted to valid values. Using **Show as** you can specify whether the input is to be used **as an Address** or **as a Tab**, and whether it should follow decimal or hexadecimal (Hex) notation.

## Data type settings



These settings are dependent on the *Function code* inputs and also on whether the channel is an input or output.

- **Data type**  
Specifies the data type for interpreting the transmitted payload data. *Bit length*, *Byte order* and *Word order* are set and adjusted in relation to the adopted setting. *Start position in payload data*, *Scaling* and [Use channel as output](#) are also set according to the data type.
- **Signed**  
Sets whether the integer data type is to be interpreted as signed or unsigned. An 8-bit value would then be in the range -128 to 127 (two's complement) or 0 to 255. Floating values are always interpreted as signed. Bit-values make no distinction between signed and unsigned.
- **Bit length**  
Sets the bit lengths for integer and floating data types. *Byte sequence* and *Word sequence* are adjusted according to length value. This also applies to the numeric fields in the *Start position in data*.
- **Encoding type**  
Displays the encoding type used for interpreting the transmitted payload data.
- **Byte sequence**  
The byte order (byte sequence) is a number, made up of several bytes, that sets how bytes are ordered for the address. BigEndian, also known as Motorola format, orders the most significant byte to the lowest address. LittleEndian, also known as Intel format, orders the least significant byte to the lowest address. Refer also to <http://en.wikipedia.org/wiki/Endianness>.
- **Word order**  
Like the byte order, word order orders word data (1 word = 2 bytes = 16 bits) to addresses. In addition to determining byte order, a different word ordering may be necessary.
- **Byte pattern** (input channels only)  
To display the different byte and word order combinations, a hex value (a random number in the example) is shown with the resulting byte pattern of a message.

## Scaling

If a Modbus user sends values that require conversion, enable *Scaling* and enter Min / Max values to convert from the Input *value* to the Scale value.

If the [Use channel as output](#) option is used, scaling takes place in the opposite direction: Enter the range from the source data in *Scale* value and the range for the output signal in *Output value*.



Without scaling, the channel's *Data type* is used. When scaling is enabled, the floating data type is always used for the channel. This also applies when the channel is used as an output: When scaling is enabled, the channel must have the floating data type, otherwise you have to use the type under *Data type*.

## Scaling example

In the above image, a conversion takes place from 2000 (integer value) to 200 (°C), i.e. it returns a decimal point despite transmission of an integer (whole number).

## Using the channel as output

If you create a Modbus channel as an output, you can send data from the **Delphin** device to other Modbus users.

Enter the data for the message to be sent in a similar way to a Modbus input. You must also enter the **Source** (of the signal).

Enter either a constant for the **Source (Manual value)** or select **Channel** and an existing channel in the device for which a value is to be output. Selecting **Application** enables the output value to be manually set via the DataService Configurator or automatically set via a **ProfiSignal** application. The source type is converted to the type given in **Data type** (refer also to [Scaling](#)).


**Inherit status** (for Channel settings only): The status of the input channel is used, but not output to the CAN bus.

**Set asynchronous**: When this option is enabled the output value transmits as soon as the value changes, that is, in real-time. Otherwise a new value is transmitted with the next cycle.

### 4.12.3.4 User-defined protocol

We recommend giving a unique **Channel name**, amending the **Description** and, if necessary, entering a **Location**. The **Main settings** tab is described in the following and then how [input](#) and [output channels](#) are created.

## Main settings tab

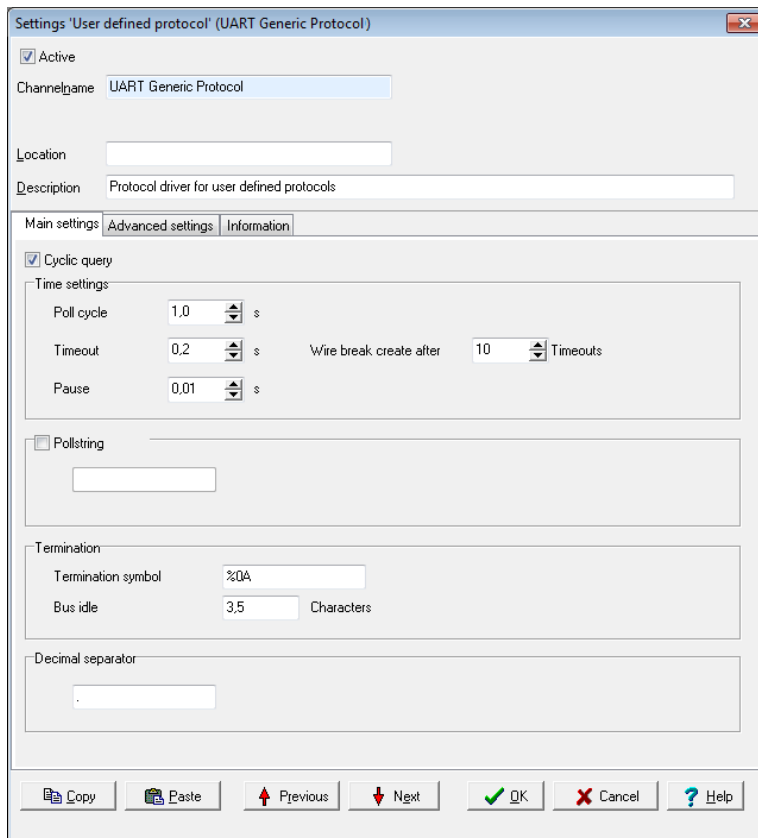

This tab enables you to make settings that apply to all channels (inputs and outputs) of the interface. It is also possible to create separate settings for each channel which differ to the general setting for poll string and poll cycle and/or output time. Termination settings only apply for all input and output channels.

**Cyclic query:** General settings on whether data is to be cyclically queried for all input channels and/or sent for all output channels. Do not enable the option if you wish to create the settings per channel.

## Time setting

- **Poll cycle**  
Sets the the time for cyclical querying of data. The current user is (re)-queried after this time has elapsed. The time must be long enough in relation to the **Pause** time and the number of channels (participants) or you will receive

an error message when closing the dialogue. The values entered will then not be saved.

- **Timeout**  
Sets the maximum permissible time between a request and a response before an error status is shown. In the event of an error, a "wire break" status is displayed according to the number of timeouts set with **Produce wire break after**. Refer also to the table in [Status monitoring](#). The time must be short enough in relation to the time for the **Poll cycle** or you will receive an error message when closing the dialogue. The values entered will then not be saved.
- **Pause**  
Sets the waiting time for a query from more than one channel within a poll cycle. The time must be short enough for all channels to be queried within the time entered under **Poll cycle** or you will receive an error message when closing the dialogue. The values entered will then not be saved.

## Poll string

Enter here a character string for all output channels which is to be output and which prompts the user to send its data if this is required. If you require data from several channels with different poll strings, do not enable the option here, but enter instead the poll string separately for each relevant input channel.

Enter the string as text. ASCII characters that cannot be entered directly, e.g. carriage return (CR) or line feed (LF), can be entered using % and the ASCII value in hexadecimal format: Enter CR as %0D and LF as %0A.

## Termination

This setting applies to input and output channels for the interface and cannot be changed for a specific channel. The entries for **termination symbol** and **transmission pause** are, however, used simultaneously. For example, an input message is considered ended after either the **Termination symbol** and/or a pause larger than the time given in **transmission pause**.

- **Termination symbol**  
One or more ASCII characters that indicate the end of a message. If the characters cannot be sent, or if you do not enter any characters, the **transmission pause** will be used for end recognition.  
Enter the characters as text. ASCII characters that cannot be entered directly, e.g. carriage return (CR) or line feed (LF), can be entered using % and the ASCII value in hexadecimal format: Enter CR as %0D and LF as %0A. You can enter only one end sequence. Multiple end sequences are not possible.
- **Transmission pause**

Enter the pause length in “character times” (time duration for transmission of a character via interface) after which a message should be considered as ended.


## Decimal separator

Enter the decimal separator here for the transmission of numerics. The character will be used for all channels which transmit numerics.

## Creating user-defined protocol


Use the *Main settings* tab to enter the general settings for the interface (baud rate, number of data bits etc.) for the relevant COM interface. Refer to [COM interface, UART settings](#).

Create the user-defined protocol via the COM interface's context menu: *Create channel* → *User-defined protocol*.

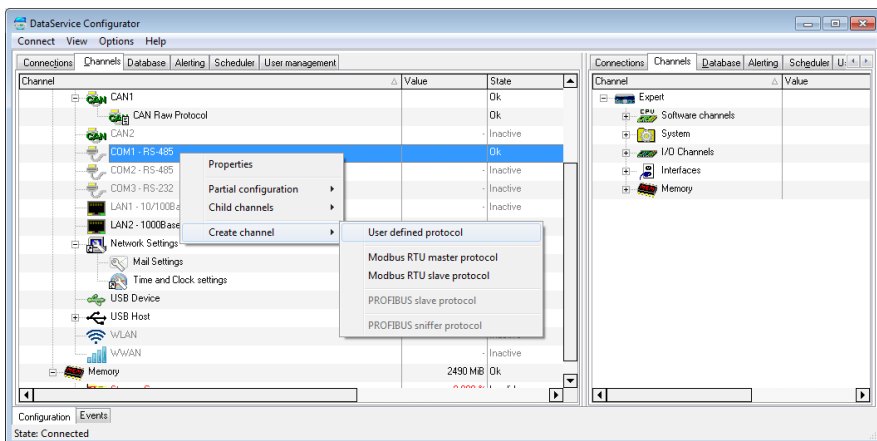

## User-defined output channel

Create an output channel via the the context menu for UART Generic Protocol:

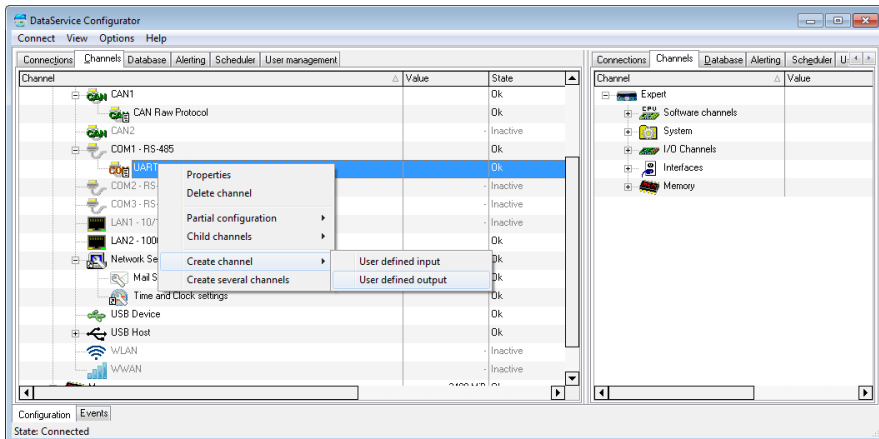

The main settings for user-defined input channels are given using two tabs:

1. [Main settings tab](#)  
Contains settings for the data type, data source and output frequency.
2. [Time settings tab](#)  
Enables customized settings for transmission time in case you need to use extra pauses for a message, e.g. to send an initialisation to a device that then needs time to perform the initialisation.

The other tabs contain standard settings. Refer also to [Settings for all dialogues](#).

## Main settings tab

Set how a value is to be output in the *Main settings* tab.

Settings 'User defined output' (COM)

Active

Channelname: COM  Inherited prefix

Unit:   Inherited

Location:

Description: Communication Channel for user defined protocol

Main settings | **Advanced settings** | Timing | Sensor compensation | Information

Datatype Settings

Data type: Float Length: 8 Example: .12

Pre decimal place: 0  Leading zeros

Post decimal place: 2  Always sign

Format

`%NAME%: %VALUE% %UNIT%`

Source

Select channel:   Inherit state

Output

cyclic Time: 1 s

adaptive

Always

Only initialization

Initialization Sequence: 0

Response expected

Copy Paste Previous Next OK Cancel Help

## Data type settings

Output is always as an ASCII string. However, you can set the format of the value to be output using the data type setting.

- Data type**

Sets the data type for the signal that is to be used. The value for other entries depends on the settings here. For example, the *integer* data type has no decimal places, but can be output with post-decimal places, which are then always zeroes.

For the *string* data type, enter its *length*.
- Pre-decimal places**

Sets the number of decimal places before the decimal point/separator. The decimal separator is output only when at least one post-decimal place is output.

- **Leading zeroes**  
Sets whether the pre-decimal places are to include leading zeroes when the number has fewer decimal places. This means that the same number of characters are always sent.
- **Post-decimal places**  
Sets the number of pos-decimal places to be output.
- **Always sign**  
Ensures that positive as well as negative signs are always sent. The sign does not count as a pre-decimal place.
- **Example**  
Displays the formatting of an imaginary number according to the settings made.

## Format

Sets what is to be sent, e.g. value and unit for the channel. Do not delete the required placeholders, including % signs. You can send only one channel (value), but any number of placeholders for other information, e.g. for outputting the current date and time. You can also enter text instead of placeholders, e.g. text to be sent for initialisation. For example, by using the initialisation string "Measure:Volt:DC" you can switch a multimeter to DC measurement.

To send output channel data, use the following placeholders:

- %VALUE%: Channel value.
- %STATUS%: Channel status.
- %UNIT%: Channel unit.
- %NAME%: Output channel name.
- %DESCRIPTION%: Output channel description.
- %LOCATION%: Output channel location.
- %ID%: Output channel ID.

To send source channel data, use the following placeholders:

- %UNITSOURCE%: Source channel unit.
- %NAMESOURCE%: Source channel name.
- %DESCRIPTIONSOURCE%: Source channel description.
- %LOCATIONSOURCE%: Source channel location.
- %IDSOURCE%: Channel ID for the source channel.

The following general placeholders are available for you to use:

- :%DATETIME%: Current date and time.
- %HOUR%: Current time.
- %MINUTE%: Current minute.
- %SECOND%: Current seconds.
- %YEAR2%: Current year as 2 digits.
- %YEAR4%: Current year as 4 digits.



%MONTH%: Current month.

%DAY%: Current day.

To output ASCII special characters, the following placeholders are also available:

%NUL%: 00 in hexadecimal format.

%SOH%: 01 in hexadecimal format.

%STX%: 02 in hexadecimal format.

%ETX%: 03 in hexadecimal format.

%EOT%: 04 in hexadecimal format.

%ENQ%: 05 in hexadecimal format.

%ACK%: 06 in hexadecimal format.

%BEL%: 07 in hexadecimal format.

%BS%: 08 in hexadecimal format.

%TAB%: 09 in hexadecimal format.

%LF%: 0A in hexadecimal format.

%VT%: 0B in hexadecimal format.

%FF%: 0C in hexadecimal format.

%CR%: 0D in hexadecimal format.

%SO%: 0E in hexadecimal format.

%SI%: 0F in hexadecimal format.

%DLE%: 10 in hexadecimal format.

%DC1%: 11 in hexadecimal format.

%DC2%: 12 in hexadecimal format.

%DC3%: 13 in hexadecimal format.

%DC4%: 14 in hexadecimal format.

%NAK%: 15 in hexadecimal format.

%SYN%: 16 in hexadecimal format.

%ETB%: 17 in hexadecimal format.

%CAN%: 18 in hexadecimal format.

%EM%: 19 in hexadecimal format.

%SUB%: 1A in hexadecimal format.

%ESC%: 1B in hexadecimal format.

%FS%: 1C in hexadecimal format.

%GS%: 1D in hexadecimal format.

%RS%: 1E in hexadecimal format.

%US%: 1F in hexadecimal format.

## Source

Select a channel for which the value is to be output. Enter the %STATUS% placeholder in the **Format** field so that you can inherit and hence output the status of the source channel.

## Output


- **Cyclic**  
Here you can set how often it is sent. The next value is sent after the time given here has elapsed.
- **Adaptive**  
This option means that a new value is sent only when the value to be sent has changed.
- **Never**  
This option is intended for sending of an initialisation in conjunction with the next option. The string entered in the **Format** field is then sent only once for initialisation and never cyclically or adaptively.
- **Initialisation**  
This option enables you to set initialisation strings, for example, "Measure:Volt:DC" to switch a multimeter to DC measurement. If you have to send more than one sequence, enter a number via **Sequence** to determine whether the string entered in the **Format** field is to be sent first (**Sequence = 1**) or second (**Sequence = 2**) and so on. Use the **Time settings** tab to set a pause after sending an initialisation sequence in order to give the device time to process the instruction.

## Response expected

Enable this option so that the next output takes place only when the user has responded to the previous transmission with a string. The response string itself is not evaluated. Only reception is awaited. If the response contains relevant information, you must define an input channel and then have the response evaluated.

## Time settings tab


Use the **Time settings** tab if you need to use extra pauses for a message, e.g. to send initialisation to a device that then needs time to perform the initialisation.

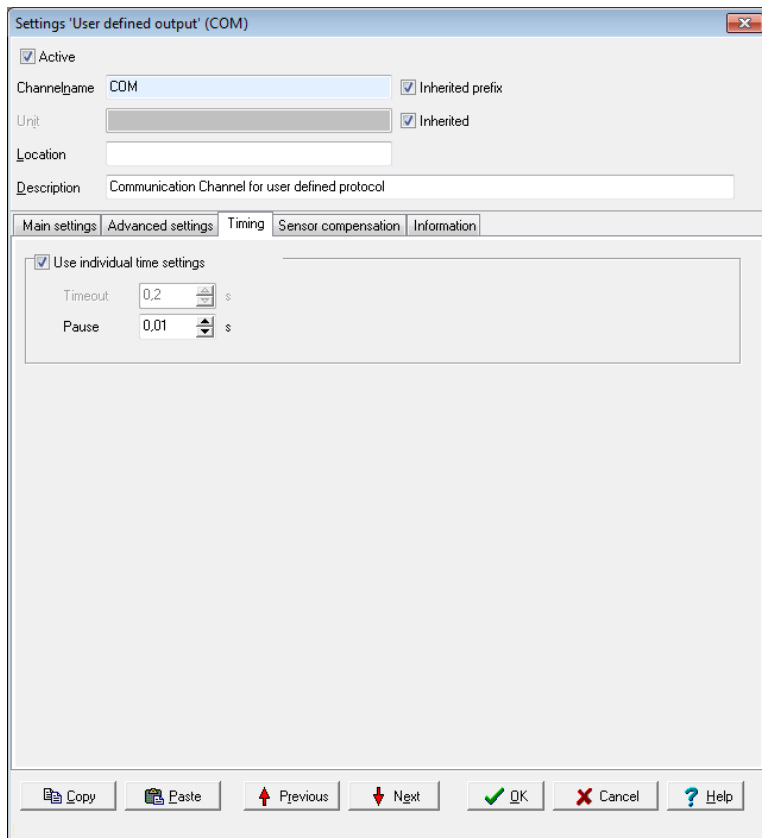

Enable *Use custom time settings* and enter the required pause time, e.g. for when an initialisation string is sent (refer to *output*: [Never](#)). Pause times aren't necessary in all other cases because sending takes place either cyclically or adaptively.

## User-defined input channel

Create an input channel via the the context menu for UART Generic Protocol:

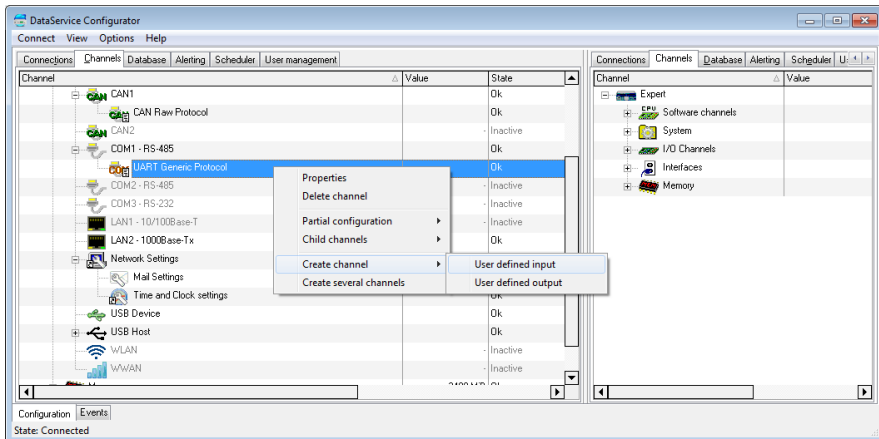


Main settings for user-defined input channels are given using the two tabs:

1. [Main settings tab](#)  
Contains settings for the data type and the scaling of received data.
2. [Input tab](#)  
Contains settings for receiving frequency, poll string and decoding (filtering) of received data.

The other tabs contain standard settings. Refer also to [Settings for all dialogues](#).

## Main settings tab

Use this tab to set how received (user) data is to be converted into a measurement value. Use the **Input** tab if not all the characters/bytes sent are to be converted (by setting filter and offset).

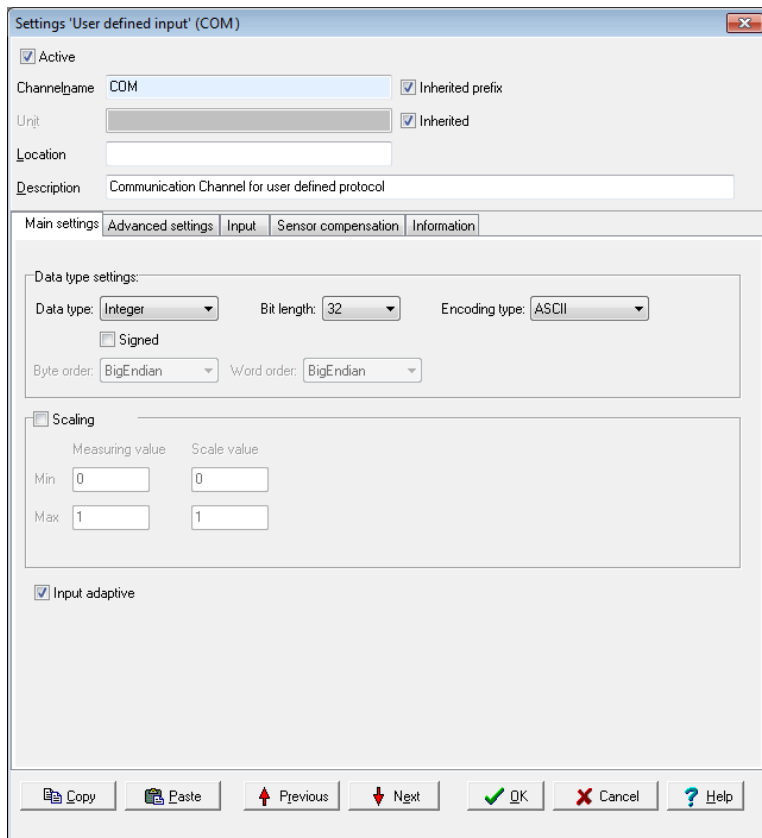

## Data type settings

- **Data type**  
Specifies the data type for interpreting the transmitted payload data. **Bit length**, **Byte order** and **Word order** are set and adjusted in relation to the adopted setting.
- **Signed**  
Sets whether the integer data type is to be interpreted as signed or unsigned. An 8-bit value would then be in the range -128 to 127 (two's complement) or 0 to 255. Floating values are always interpreted as signed. Bit-values make no distinction between signed and unsigned.
- **Bit length**  
Sets the bit lengths for integer and floating data types. **Byte sequence** and **Word sequence** are adjusted according to length value. This also applies to the numeric fields in the [Start position in data](#).

- **Encoding type**  
Displays the encoding type used for interpreting the transmitted payload data. **Binary** (the received bytes are interpreted as binary data), **ASCII** (ASCII characters, i.e. text) or **ASCIHex** (the received ASCII characters are interpreted as hexadecimal pairs). The data is converted into the given data type after being received.
- **Byte sequence**  
The byte order (byte sequence) is a number, made up of several bytes, that sets how bytes are ordered for the address. BigEndian, also known as Motorola format, orders the most significant byte to the lowest address. LittleEndian, also known as Intel format, orders the least significant byte to the lowest address.  
Refer also to <http://en.wikipedia.org/wiki/Endianness>.
- **Word order**  
Like the byte order, word order orders word data (1 word = 2 bytes = 16 bits) to addresses. In addition to determining byte order, a different word ordering may be necessary.
- **Byte pattern**  
To display the different byte and word order combinations, a hex value (a random number in the example) is shown with the resulting byte pattern of a message.

## Scaling

If the sent values require conversion, enable **Scaling** and enter **Min / Max** values to convert from the **Measurement value** into the **Scale value**.



Without scaling, the channel's **Data type** is used. When scaling is enabled, the floating data type is always used for the channel.

## Scaling example

In the above image, a conversion takes place from 2000 (integer value) to 200 (°C), i.e. it returns a decimal point despite transmission of an integer (whole number).

## Input tab

Use this tab to set how often data should/must be received, whether data output needs to be "prompted" and, if necessary, how data is to be extracted from a string.

Settings 'User defined input' (COM)

Active

Channelname: COM  Inherited prefix

Unit:   Inherited

Location:

Description: Communication Channel for user defined protocol

Main settings | **Advanced settings** | Input | Sensor compensation | Information

Use individual time settings

Timeout: 0.2 s

Pause: 0.01 s

Polled

Pollstring:

Filter: \$GPGGA

Delimiter: ; umpteenth element: 2

Decoding

Offset: 6

Maximum length: 8

Offset relative

Copy Paste Previous Next OK Cancel Help

## Custom time settings

Only activate the setting if you require different settings for this channel. Otherwise, general settings are used. Refer to [User-defined protocol](#).

- **Timeout**  
Sets the maximum permissible time that may elapse between a query (*poll string*) and its response, or between two sequential responses (without poll string) before an error status is given. In the event of an error, a "wire-break" status is displayed (refer also to the table in [Status monitoring](#)).
- **Pause**  
Sets the waiting time between two queries using a poll string. The poll string is resent once this time has elapsed.

## Polled

- **Poll string**  
The string entered here will be sent to the user according to the time frame defined using **Pause**. This is required when a user sends a response (a value) only after he has been "prompted". Leave the field empty if the user doesn't require prompting to send.  
Enter the string as text. ASCII characters that cannot be entered directly, e.g. carriage return (CR) or line feed (LF), can be entered using % and the ASCII value in hexadecimal format: Enter CR as %0D and LF as %0A.
- **Filter**  
If the user sends multiple responses (messages or comments), you can use a filter to retrieve the responses you require in this channel. Enter the message's beginning, e.g. **\$GP GGA**.
- **Delimiter**  
If the filtered message contains multiple elements, use this delimiter to determine how these elements are separated and which element (**n'th element**) is to be used for this channel.

## Decoding

- **Offset**  
Truncates the first character of the message as set under **Polled**. This means the message is evaluated from this offset. You can set the offset from the absolute beginning of the message (default) or relative to the first character with the **Filter(Offset relative to filter)**.
- **Maximum length**  
Evaluates the message only up to the character given here. All other characters are ignored.

### 4.12.4 LAN

This window enables network data to be input or amended. Changes to settings are only adopted after clicking **Save**.



**After changing the IP address or net mask, the device is then only accessible via the new address. The PC's IP address (and any subnet mask) then also requires amending to establish a connection if required.**



Settings: 'Ethernet controller'

Active

Channelname: LAN2 - 1000Base-Tx

Location: Connector: "LAN2"

Description: Ethernet 10/100/1000 Mbit/s Fullduplex

Main settings | **Advanced settings** | Information

IP settings:

IP address: 192.168.251.252

Use DHCP

Net mask: 255.255.240.0

MTU: 1500

Gateway: 0.0.0.0

DHCP server

Subnet: 192.168.240.0

Range start: 192.168.240.10

Range end: 192.168.240.50

Speed and Duplex: Automatic negotiation

## IP settings

Activate DHCP (*Use DHCP*) so that the device can obtain an IP address automatically from a DHCP server in the network. If no DHCP server is available in the network, enter a (strong) IP address and (sub) net mask or use *DHCP Server* on the right-hand side to let the device work as a DHCP server in the network.

Ask your network administrator whether your network requires MTU and gateway information. Otherwise, leave the default setting of **1500** for *MTU*. A gateway address is required only if connections are to be established to other networks.

## What Ethernet address to enter on the device?

Case 1: You are setting up a local network between your PC and your measurement device

You may require an Ethernet cross cable if you want to connect only the PC and the device. But most PCs today do not need a cross cable any longer; the interface is automatically reconfigured accordingly. If you use an Ethernet hub or Ethernet switch, connect the PC and devices to it (regular Ethernet cables).

Then, set the addresses on the devices. For example, assign the IP address 192.168.100.1 to your PC and the following addresses 192.168.100.2, 192.168.100.3, etc. to the **Delphin** devices. The address ranges 192.168.xxx.xxx are set aside for such internal networks, which is why they do not conflict with addresses on the Internet, even when your PC uses another Internet access.

Case 2: Your PC is connected to an Ethernet network, and your **Delphin** device is to be connected to the same network

Contact your system administrator to obtain an Ethernet address, which you then set on the device.

## DHCP Server

Use this function to set up a DHCP server that assigns to all devices on the network (*Subnet*) a valid IP address. Enter a start and end address for the range of addresses to be made available.

### Example

**Start:** 192.168.240.10, **End:** 192.168.240.50. With this setting, addresses from 10 to 50 can be assigned, that is, 41 users can receive addresses automatically.

The first three groups of digits must be identical for the start and end. The maximum range possible goes from 1 to 255.



**The settings for *IP address* and *Net mask* (subnet mask) on the left-hand side must match the settings for the *DHCP Server*, for example, identical digits in the first three groups of digits of the IP addresses. The *IP address* must be outside the range specified for the *DHCP Server*.**

## Speed and duplex

Generally, you should use *Auto negotiation*. This way, the adapters or Ethernet switches involved will negotiate appropriate settings.

Problems may occur during auto negotiation in rare cases that interrupt the transfer, because an attempt is made over and over again to find optimal settings. In such cases, make the setting dependent, for example,

on the Ethernet switch to which the **Delphin** device is connected. For managed switches, the speed can be fixed there too, which means that no more negotiation will be necessary.

#### 4.12.5 USB device

The device driver is automatically installed when the device is connected to the PC.

Then use the USB device interface (see **Delphin** device displays and connections) in order to connect the device with your PC. The driver simulates an Ethernet interface with the USB interface of your PC. It is therefore recommended, in the *USB device properties* dialogue, to keep the setting *DHCP Server* enabled (default setting), because the PC is assigned automatically a suitable address for this USB interface from the device. The default settings of the dialogue by themselves allow for easy communications.

If more than one device is connected via the USB interface, the IP addresses of the USB interface must be adapted to the devices in order to avoid an IP conflict.



**The address used for the *IP address* must not be within the range specified for *DHCP Server*.**

With a subnet mask of *255.255.255.0* (default setting for *Net mask*), the address ranges for *DHCP Server (Start/End range)* and the *IP address* for *IP settings* must match, that is, the first three groups of digits must be identical.

If you do not want to use the DHCP server, you must set appropriate IP addresses both at the USB interface of your PC (via the Network and Sharing Center) and in this dialogue.

Ignore the setting for **MTU** at **1400** (default). An input for **Gateway** is not required.

#### 4.12.6 USB device (host, such as memory)

##### USB flash drive

You can use the USB connection to write data to (local) storage, by connecting a USB memory stick or USB hard drive.



**The USB storage must be configured with the FAT32 filesystem; other file systems are not recognised.**

Once you have connected the storage, in DataService Configurator (**Channels** tab) in **Interfaces** → **USB host** an entry appears with the data carrier name.

Then, under **System** → **Drives** enter a drive and create or modify a memory group that this data carrier can write to.

Refer also to "[Drives](#)" on page 67, "[Device memory](#)" on page 271 for **Expert** devices .

### USB serial converter

You can also use the USB connection to connect a USB serial converter. After connecting the converter, the DataService Configurator (**USB host** tab), under **Interfaces** → **USB host**, displays an entry showing the designation of the converter.

Below the converter – as well as under **Interfaces** – a new [COM interface](#) is created automatically with the standard designation "USB COM". You can use this as [Modbus RTU](#) or as a [User-defined protocol](#).

Settings 'USB device'

Active

Channelname: USB Flash Drive

Location:

Description: USB Flash Drive SN:'0000000000000000'

Main settings | **Advanced settings** | Information

Device class: -

Vendor Id: -

Product Id: -

Manufacturer: -

Product: USB Flash Drive

Serial: 0000000000000000

Volume label: -

File system type: -

File system version: -

Partition size: 96 KiByte

#### 4.12.7 WLAN (option)

If the option is not available with your device, enter the data here for the WLAN connection.



**To establish a WLAN connection, you must screw the antennas supplied onto the connections at the front. Use both antennas to maximise the transmission rate (speed). You will only obtain half the speed possible if you use only one antenna.**

Settings 'WLAN' (WLAN)

Active

Channelname: WLAN

Location: Connector: "Antenna1" & "Antenna2"

Description: WLAN 802.11b/g/n

Main settings | **Advanced settings** | Information

IP settings

IP address: 192.168.4.1  
 Use DHCP

Net mask: 255.255.255.0

MTU: 1500

Gateway:

DHCP server

Are you sure that this device should be DHCP server for your complete network?

Subnet: 192.168.4.0

Range start: 192.168.4.10

Range end: 192.168.4.50

WLAN settings

Mode: Access Point

SSID: EL-44080310

PSK: xxxxxxxx  
 PSK shown on the display

Encryption: WPA/WPA2 PSK

Channel: 0

Copy Paste Previous Next OK Cancel Help

There are three connection options:

1. **Client**  
 This method is recommended if there is an access point (router) that the **Delphin** device can log into.
2. **Ad hoc network**  
 An ad hoc network allows you to establish a connection between a PC and the device. We do not recommend using this option unless necessary.
3. **Access Point**  
 The **Delphin** device functions as an access point with this option and other devices (PCs) can log into the device. In this case, you can also use the device as a DHCP server that will assign appropriate IP addresses to the other devices.

## Client

Use **DHCP** as the access point then generally assigns addresses . Then give the **SSID** of your access point, the password (**PSK**, Preshared Key), the **encryption** (mostly WPA2) and the **channel**.

## Ad hoc

With an ad hoc connection, you have to firstly set up your PC for connection.

## PC setup

1. Open the **Network connections** window via Windows' Start Menu and **Settings**.
2. Right click "Wireless Network Connection" and select **Properties**.
3. Find the **Wireless Networks** tab.
4. Create the network for the **Delphin** device: Click **Add** and specify the name of the network (network name, SSID) in the following dialogue, e.g. **DelphinDevice**.
5. Enable the option **Connect even if the network is not broadcasting** in the **Association** tab.
6. Select the option **This is a computer-to-computer ad hoc network**. Wireless access points are not used.
7. We recommend setting an encryption for the network, even though the less secure WEP is only possible with ad hoc networks: Enter **Open** with network authentication and **WEP** for data encryption.
8. Enter the network key which you have given to the **Delphin** device.
9. Go to the **Connection** tab and activate **Connect automatically when this network is in range**.
10. Close the dialogue with **OK**.  
The network should now appear in the list of networks and should be listed **automatically** behind the network name CX22.
11. Go to the **General** tab, select **Internet Protocol (TCP/IP)** in the list and click **Properties**.
12. Activate **Obtain an IP address automatically** and **Obtain DNS server address automatically** in the following dialogue.
13. Close all dialogues to the wireless connection by clicking **OK** and **Close**.

## Preparing **Delphin** device

Use **DHCP** and establish the **SSID** of your access points, e.g. **DelphinDevice**. Then set the password (**PSK**, Preshared Key), the **encryption** (WEP) and the **channel**.

## Creating a connection via **WLAN** and ad hoc network

1. Start up the PC on which a connection is to be created.
2. Right click on the symbol for **WLAN**, which is displayed in the information panel of the Windows task list and select **View available wireless networks**.



3. Check that the PC is connected to the name given above under network name (SSID).

### Access Point

Specify the IP address and net mask to be used by the **Delphin** device. Then set the **SSID**, the password (**PSK**, Preshared Key), the **encryption** (mostly WPA2) and the **channel** which the **Delphin** device is to use.

### DHCP Server

Use this function to set up a DHCP server that assigns to all devices on the network (**Subnet**) a valid IP address. Enter a start and end address for the range of addresses to be made available.

### Example

**Start:** 192.168.240.10, **End:** 192.168.240.50. With this setting, addresses from 10 to 50 can be assigned, that is, 41 users can receive addresses automatically.

The first three groups of digits must be identical for the start and end. The maximum range possible goes from 1 to 255.


## 4.12.8 WWAN (option)

If the option is not available with your device, enter the data here for the WWAN connection.



**To establish a WWAN connection, you must screw the antenna(s) supplied onto the connections "MAIN" and "AUX". The "AUX" connection is needed only if you wish to use LTE with a maximum of bandwidth and transmission speed. Otherwise, connecting one antenna to "MAIN" will suffice.**

**Also plug the SIM card of your provider into the slot above the antenna connections. The card's cut-off corner must face right, as indicated by the symbol above the slot.**

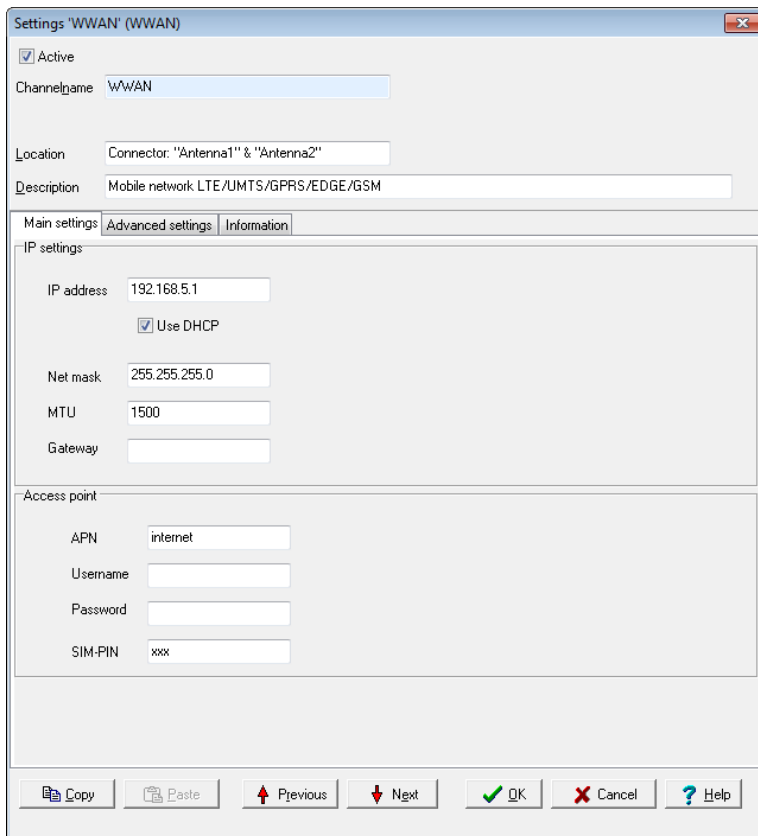

Settings: WWAN (WWAN)

Active

Channelname: WWAN

Location: Connector: "Antenna1" & "Antenna2"

Description: Mobile network LTE/UMTS/GPRS/EDGE/GSM

Main settings | Advanced settings | Information

IP settings:

IP address: 192.168.5.1

Use DHCP

Net mask: 255.255.255.0

MTU: 1500

Gateway:

Access point:

APN: internet

Username:

Password:

SIM-PIN: xxx

Copy Paste Previous Next OK Cancel Help

In the case of **APN**, give the identifier for your provider, the **user**, **password** and the PIN number of your SIM card (**SIM PIN**). As for the address settings, leave the default setting **Use DHCP** as is in order to obtain the address from your provider.

#### 4.12.9 OpenVPN


**Open VPN** is a program for setting up a **Virtual Private Network (VPN)** over an encrypted TLS connection. The libraries of the OpenSSL program are used for encryption. **Open VPN** optionally uses UDP or TCP for transport. An encrypted connection to a **Open VPN** server with a known IP address/DNS name is established by means of the **Open VPN** client in the device. The PC also connects to the **Open VPN** server. By means of new IP addresses assigned by the **Open VPN** server, the PC and device can now securely communicate with each

other. The connection and data exchange are the same as for a direct [LAN connection](#).


For configuration of a **Open VPN** connection with server/client configurations, you will find numerous examples on the Internet.

Alternatively, numerous services are also available on the Internet, which are made available by the exchange or the OpenVPN server. These services can often be tested free of charge for a certain period of time. One of the services is, for instance, Insys Connectivity Service (R) at <https://connectivity.insys-icom.de>

The device is typically not in the same network as the DataService Configurator. For example, to connect the device to a DataService Configurator over the wireless network, a **Open VPN** server is needed that couples all configured **Open VPN** clients together.

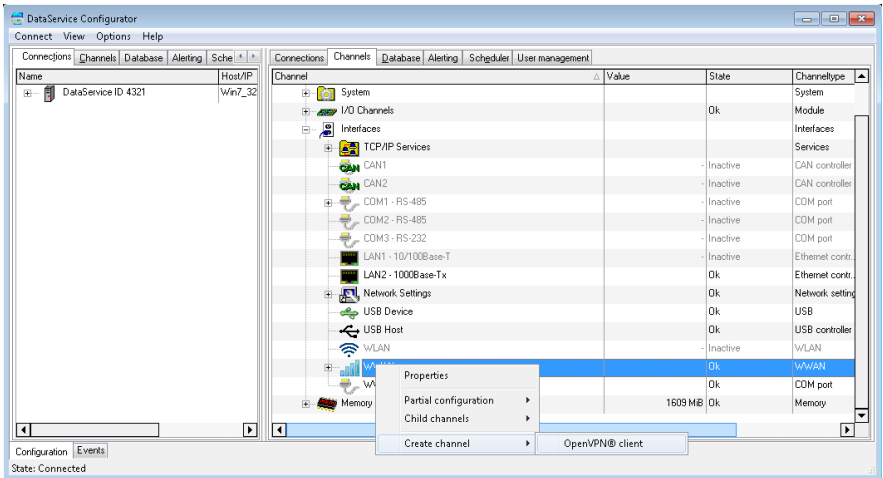

## Main settings tab

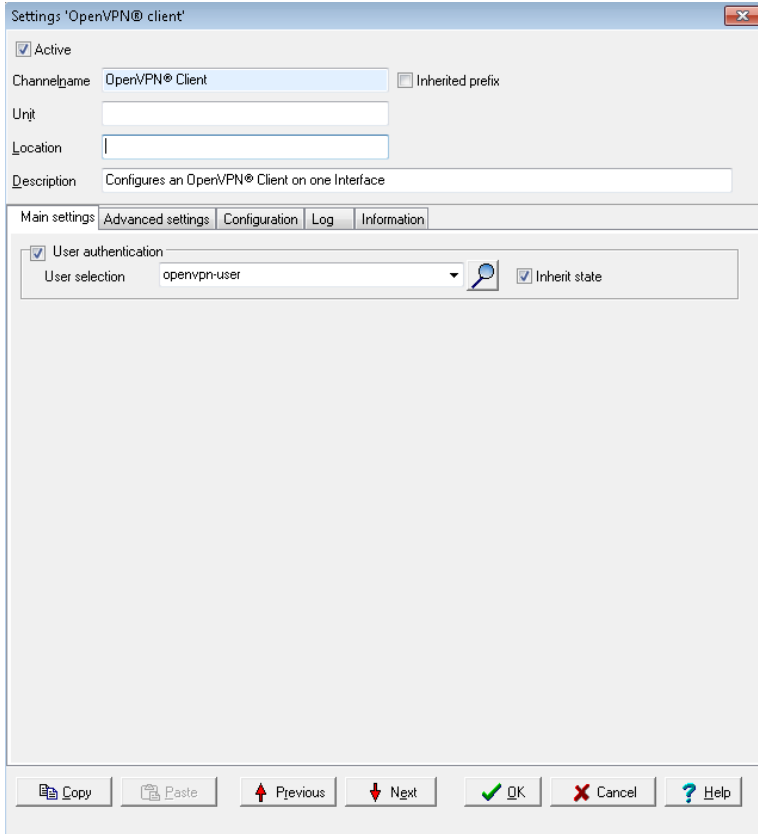

Settings: 'OpenVPN® client'

Active

Channel name: OpenVPN® Client  Inherited prefix

Unit:

Location:

Description: Configures an OpenVPN® Client on one Interface

Main settings | Advanced settings | Configuration | Log | Information

User authentication


User selection: openvpn-user   Inherit state



### Important

A user that can be selected under **User Authentication** must first be created in the "Directory (User management)" on page 63 with the user class *login data*.


### Configuration tab

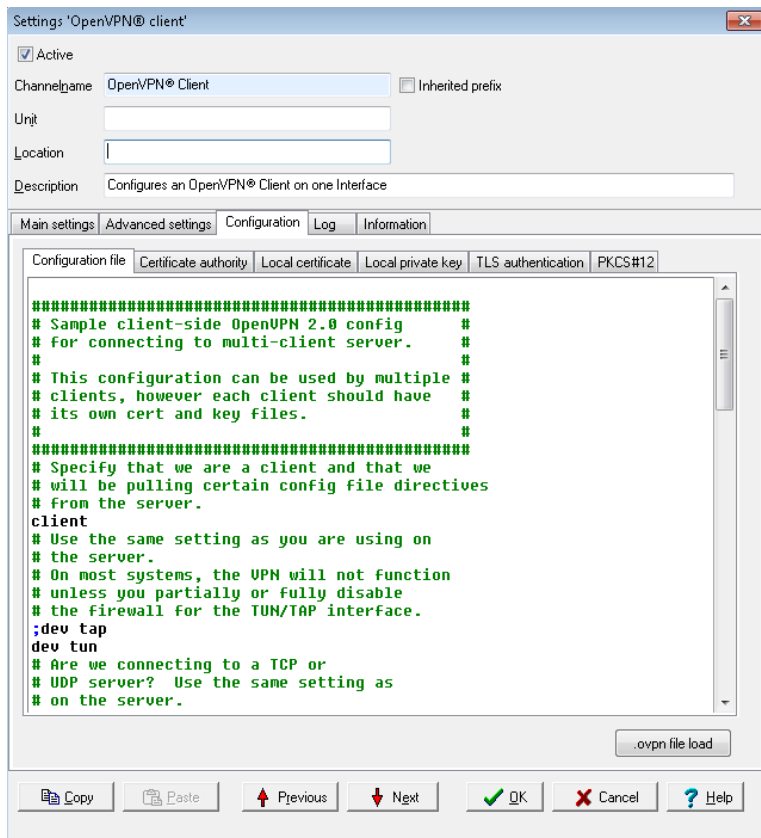

The **Open VPN** client configuration is created by the administrator of the **Open VPN** server.

The configuration can be a `.ovpn` file where all certificates and keys are contained, or multiple files where the certificates and keys are in separate files.

The easiest way to load a **Open VPN** configuration is to use the `.ovpn file` button. All files described in the configuration are loaded.

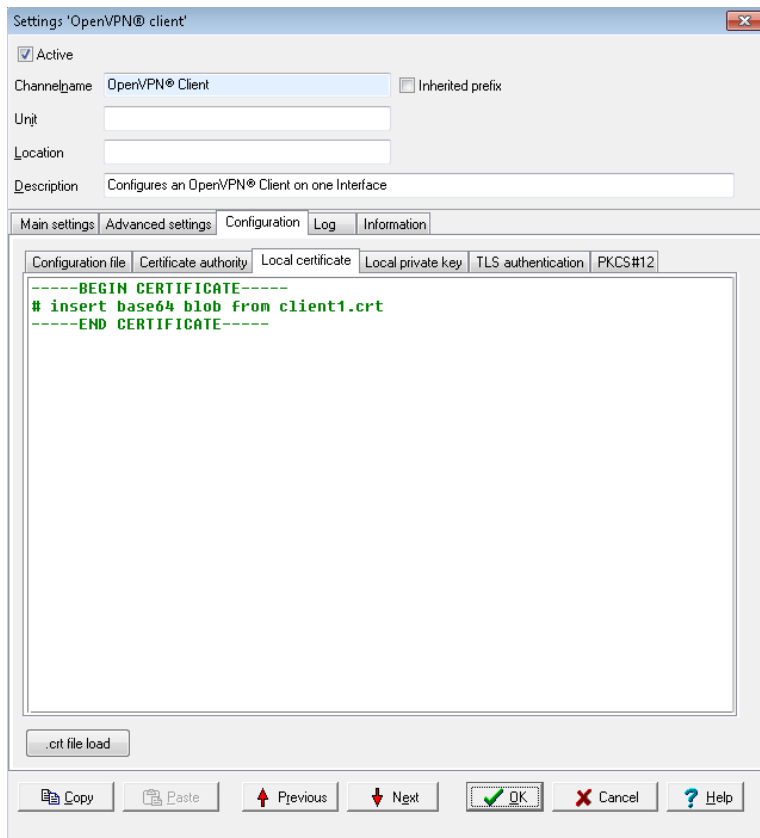


The individual files of the **Open VPN** configuration can also be embedded individually in the tabs (load *.cert file* in the above example). Individual adjustments can be made in the respective text box. The password for "Local private key"/"PKCS # 12" (if required) is entered in the corresponding tabs.



### Info

More detailed explanations of the individual terms, such as ca.crt client.crt, client.key, tls-auth and pkcs12 can be found at <https://community.openvpn.net/openvpn/wiki/Openvpn23ManPage>

### Log tab

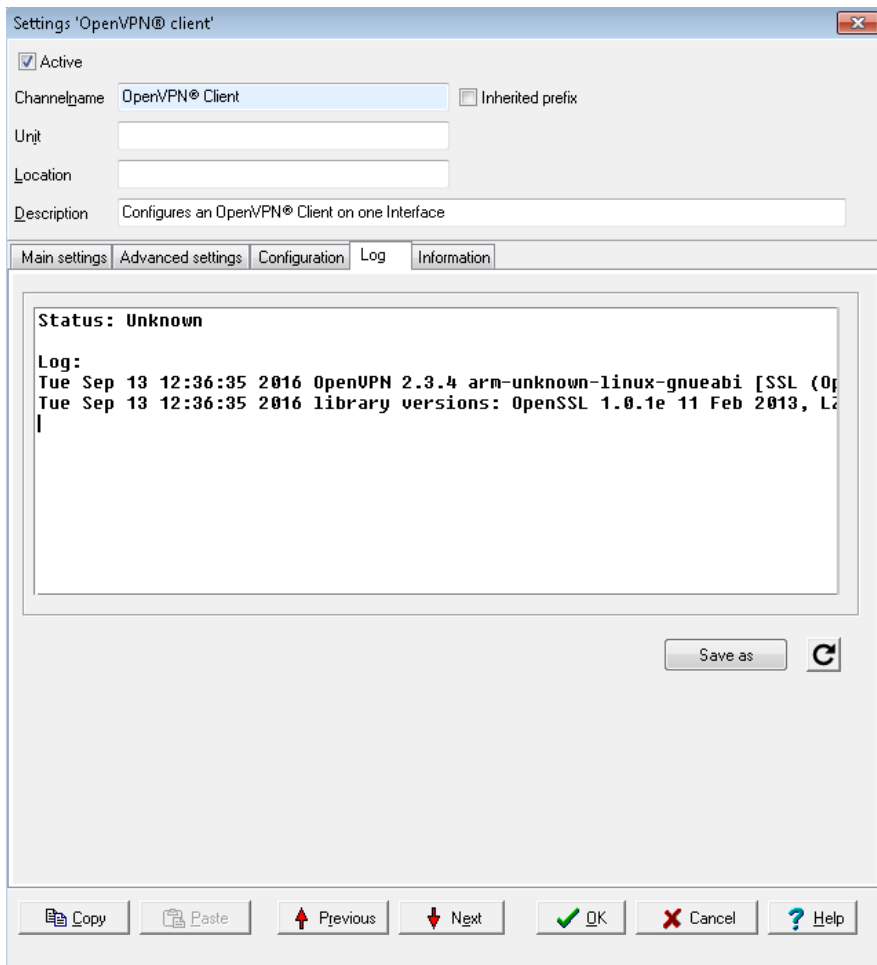

The log of the **Open VPN** client is displayed here.

When you click the **Refresh** button, the log is updated.

When you click the **Save As** button, the log is saved on the computer.

## 4.13 Device memory


Setting subgroups within the "Memory" group enables more efficient partitioning of memory. From the context menu, select **Create channel** → **Memory group**. Divide the available memory among these groups and use the **Channel list** tab in the configuration dialogue of the memory group to set how often the group's channels are to be saved. Via the **External**

**memory backup** tab, you can set whether and where the captured data is to be stored (backup to external medium).

Using the context menu **Read memory content**, you can also transfer to your PC the data of individual or all channels of this memory group at any time for any length of time, for example, to the default directory of **ProfiSignal** (ProfiSignal\Data). The data can also be converted to the ASCII format.

Refer also to "Settings for all dialogues" on page 46, "Additional settings tab" on page 48, "Information tab" on page 51, "Tolerance filter" on page 201, "USB device (host, such as memory)" on page 260.

### 4.13.1 Main settings tab

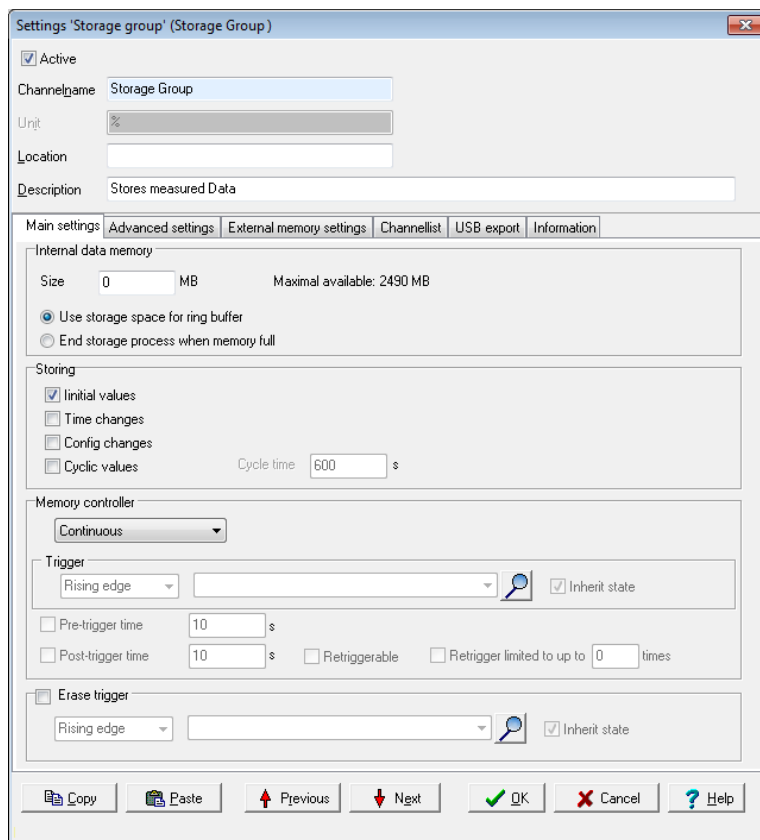

Settings 'Storage group' (Storage Group)

Active

Channel name: Storage Group

Unit: %

Location:

Description: Stores measured Data

Main settings | Advanced settings | External memory settings | Channellist | USB export | Information

Internal data memory

Size: 0 MB Maximal available: 2490 MB

Use storage space for ring buffer  
 End storage process when memory full

Storing

Initial values  
 Time changes  
 Config changes  
 Cyclic values Cycle time: 600 s

Memory controller: Continuous

Trigger

Rising edge [ ] [ ]  Inherit state

Pre-trigger time: 10 s  
 Post-trigger time: 10 s  Retriggerable  Retrigger limited to up to 0 times

Erase trigger

Rising edge [ ] [ ]  Inherit state

Copy Paste Previous Next OK Cancel Help



Use this tab to set the **Size** (amount) of memory that this group may use. The memory can either be written to until full (**End storage process when memory full**) or the group can be configured as a **Ring buffer**. As a ring buffer, the current value overwrites the oldest value when the memory is full. This means that the oldest values are deleted to make room for new ones.

An alternative to the ring buffer is the **Delete trigger function**. Enter a (digital) channel as the trigger for deletion. A calculated channel can be used that monitors memory capacity and then deletes the memory when a specified capacity has been reached.

### Save

- **Start values**: When enabled, the current values from all channels in the channel list are saved when the memory group starts. The storage group starts by activation in this dialogue or following the switching on/rebooting of the device and active storage group.
- **Time change**: When enabled, time changes, such as synchronising using NTP time, triggers extra saving to the memory group from the channels in the channel list. This helps identify the cause of a "time mismatch" of data.
- **Configuration changes**: When enabled, it saves changes to the channel configuration in this memory group along with the time of change, the version number and the configuration file history in the device (/pm/-config/channels/backup/).
- **Saving values cyclically**: When enabled, saving takes place at the given interval irrespective of any trigger or tolerance settings.

### Memory control


- **Continuous**: The current value is saved when a tolerance is exceeded depending on the tolerance settings for the channel in the channel list.
- **Single step**: Functions as for the edge trigger, but without pre- or post-trigger times.
- **Edge trigger**: Saving takes place with a change (edge) in a (digital) signal.
- **Level trigger**: Measurement data is saved as long as the given level remains active.

For **Edge trigger** and **Level trigger** options, an additional **pre-trigger** and/or **post-trigger** time before and/or after the trigger event can be specified for saving to take place. Data is then stored at these times when a value exceeds the tolerance settings for a particular channel.

**Retriggerable**: Use this option to set a new wait period for the post-trigger time if a new trigger occurs during the post-trigger time. The number of times this may happen is specified via **Retrigger limited to**.

## 4.13.2 External memory backup tab

First create an external memory (USB or network drive) via "Drives" on page 67 that you can then use further in this dialogue.

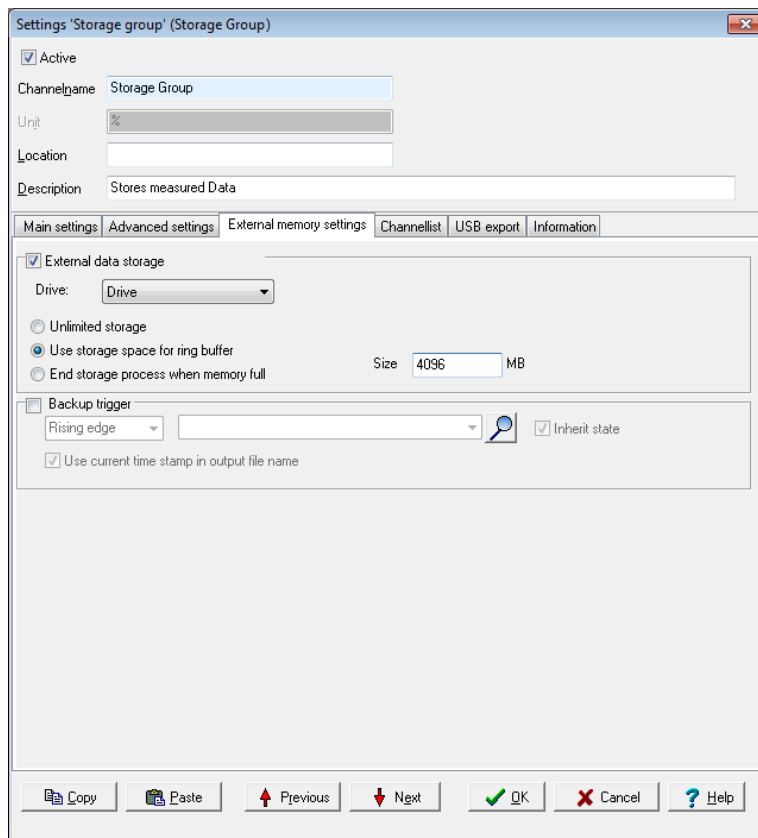

The screenshot shows the 'Settings: Storage group' dialog box with the 'External memory settings' tab selected. The 'Active' checkbox is checked. The 'Channelname' is 'Storage Group', 'Unit' is '%', and 'Location' is empty. The 'Description' is 'Stores measured Data'. The 'External data storage' section is active, with 'Drive' set to 'Drive', 'Unlimited storage' unselected, 'Use storage space for ring buffer' selected, and 'End storage process when memory full' unselected. The 'Size' is set to 4096 MB. The 'Backup trigger' section is inactive, with 'Rising edge' selected, an empty dropdown, and 'Inherit state' checked. The 'Use current time stamp in output file name' checkbox is also checked. The bottom of the dialog has buttons for Copy, Paste, Previous, Next, OK, Cancel, and Help.

The storage space configured on the *Main settings tab* is divided into 1% increments for recording purposes. Every time another percent is filled with data, the file is closed and a new one is started. Once a file is closed, it is copied to the external memory specified here. The copying process occurs only once.

**Unlimited memory:** At this time, only this setting is available, a requirement that a network drive generally meets. In the case of small USB memories, note the maximum space available and change the data carrier in time.



**Do not switch out a USB memory while the write process is in progress.**



### Info


Use a USB flash drive with an LED that blinks during the data transfer.

**Backup trigger:** With a backup trigger you can transfer to an external memory a file that has not reached the 1% limit and has therefore not been closed yet automatically. This way, *all* data, including the most current, will be available.

## Opening saved files

The files are initially created in a binary format and also copied in this format. The file extension of the respective data file is .ExternalDataStorage.xml. Double-click one of these files to call the file converter that was set up during the installation. The file is then converted to the **ProfiSignal**-readable format with the file extension .hds and opened in **ProfiSignal**.

### 4.13.3 Channel list tab

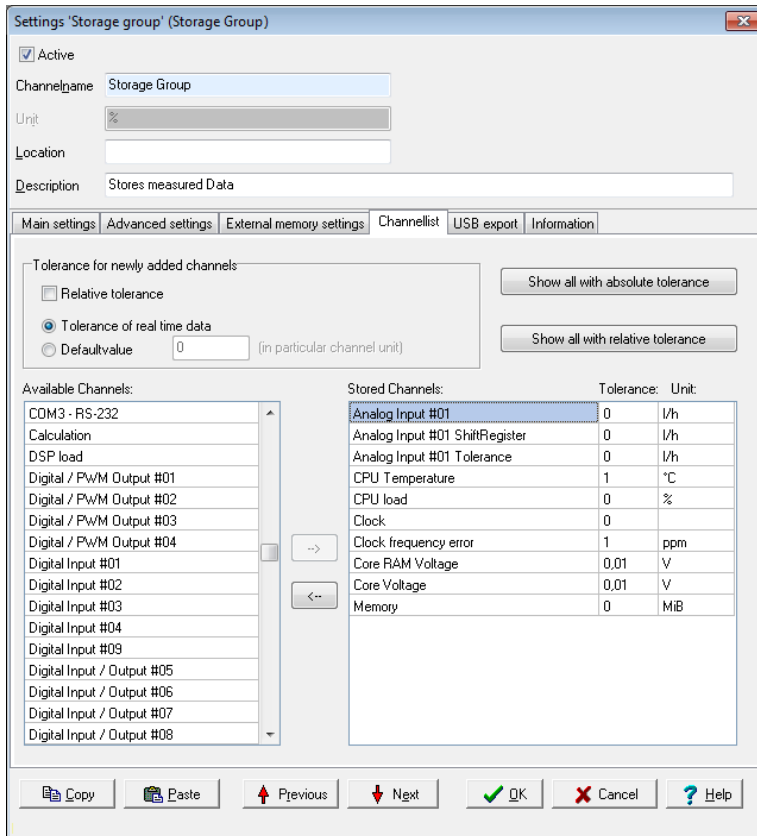

In this dialogue, you select the channels that are to be saved in this memory group.

How often measurement data is saved depends on the various settings (refer also to the *Main settings* tab) and may also be influenced by the *Tolerance for new channels*:

 
- **Real-time data tolerance:** The tolerances given for the channel in the *Additional settings* tab under *Data reduction* are also used for saving. The measurement value is saved when it differs from the previously saved measurement value by more than the value given there. The effective value for the channel is displayed in the field *Saved channels* once it is adopted.
- **Default value:** The value specified here is used for the channel that is to be assigned to the group. The tolerance only applies for saving to this memory

group. For everything else, such as a calculation using this channel, the effective tolerance value is the one given in the channel. The effective value for the channel is displayed in the field *Saved channels* once it is adopted.

- If *Relative tolerance* is enabled, data is not displayed according to the channel's unit, but as a percentage based on the channel's range given in the *Main settings* tab for *Conversion*.

Finally, select the channels from which values are to be stored: Mark the

channel and click




.



### Info

Adopt the settings under *Tolerance for newly added channels* before

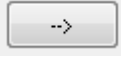clicking . A subsequent change to the settings will have no effect. For the change to be effective, the channel first needs to be deleted and then reinstated.


## 5 Measurement technology notes

This Section contains general information and recommendations on using measurement technology.

### 5.1 Galvanic isolation

Each of the devices' inputs, the Ethernet, external BUS (where available), CAN1 and COM1, CAN2 and COM2 and COM3 interfaces, are all galvanically isolated from the central unit (CPU and power) as well as from each other. The CAN1 and COM1 or CAN2 and COM2 ports are not galvanically isolated from each other. For system reasons, the USB interface is not isolated.

The diagram shows the individual galvanic isolating properties of the devices. The **Expert Logger** does not have external BUS, so two Ethernet interfaces are available.

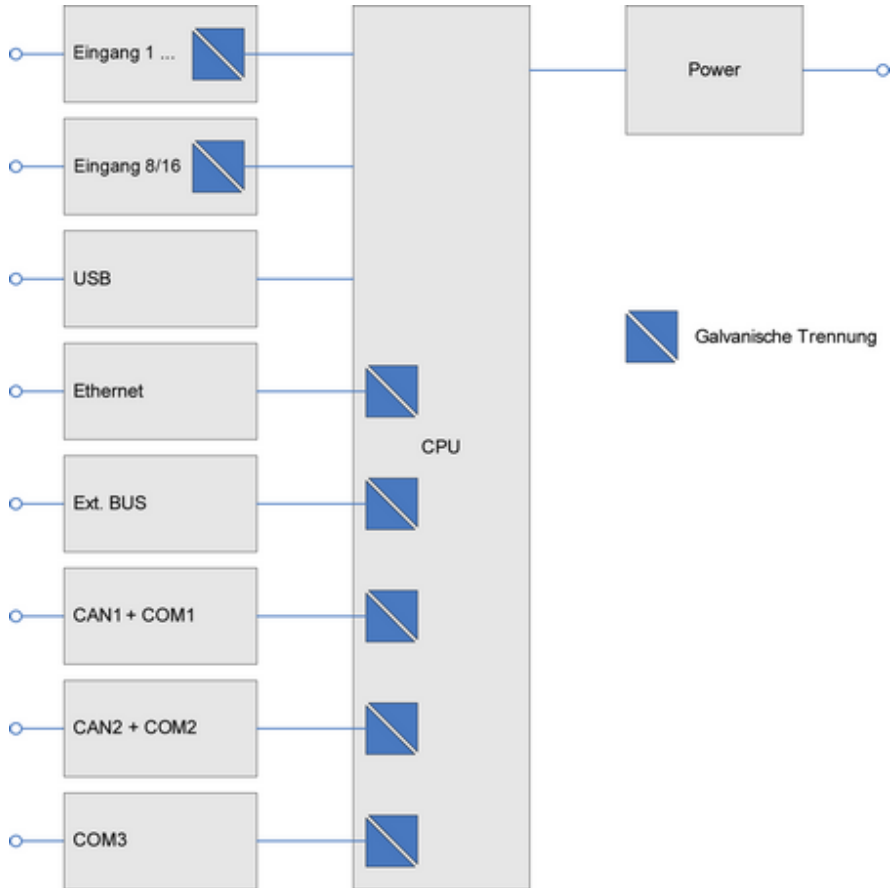

See also [Shielding](#).

## 5.2 Earthing

The PE terminal for the power supply is the ground terminal for the device. This terminal is internally connected to the metal housings of the USB/LAN and COM ports but has no connection to the 0V terminal(s).



Connect the PE terminal with a  $\geq 2.5\text{mm}^2$  cable to the protective earth of your power supply.

Refer also to [Shielding](#), [Galvanic isolation](#).


### 5.3 Earth loops

By linking sensor, measurement device, and computer, connections then exist between different ground points. Unless the individual devices are connected to protective earth, this electro conductive connection creates an electrical circuit between the devices. The result is what is known as an earth or ground loop (shown red in the example).

#### This can have the following effects:

- In practice the earthing points U1 to U3 shown in the graph do not necessarily possess equal potential. Constant or changing potential differences can occur between the earthing points due to the earthing plan and wiring. Compensating currents then occur in the sensor and communication circuits.
- Interference in the sensor or communication circuits, for example through electromagnetic fields, enable parasitic currents to occur within the circuit.

Compensation and parasitic currents lead to interference or noise voltage at the input of the measuring instrument and thus constant or shifting errors in measurement.

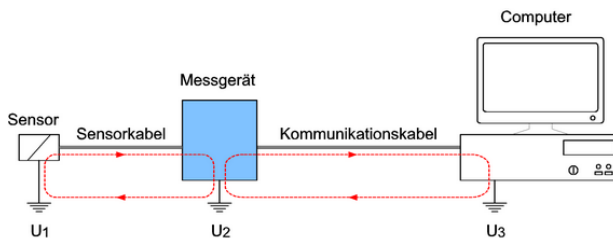

**Prevent earth loops.**

#### Sensor–measurement device earth loop

Galvanic isolation of the inputs to the central device, means earth loops via the sensor circuit as shown in the example, can not occur within the device



. Earth loops can however occur between the sensors of different channels of a module.

To avoid such loops, we recommend the use of earth-free sensors or signal sources.

See also [Potential differences](#).

### Measuring device—computer earth loop

Most of the device's interfaces are galvanically isolated towards each other and towards the central device. The earth loop through the communication circuit as shown in the example does not occur with this device.

Use these interfaces to connect the device to PCs, PLCs or to other manufacturers' equipment.

See also [Galvanic isolation](#).

## 5.4 Shielding

Measurement signals can be disrupted by the occurrence of magnetic and electric fields in the measuring circuits, for example generated by neighbouring current-carrying circuits. Shielded cables should therefore always be used for sensor circuitry and kept at least 50 cm away from other current-carrying circuits.


The smaller the sensor signal and/or the higher the sensor impedance, the more important good shielding becomes for a low noise, accurate reading.

To prevent [earth loops](#), earth the shield on one side of the circuit only (see example).

### a) Sensors without earth


Earthing of the shield is in this case one-sided and directly at the device (PE connection on the power supply).

See also [Earthing](#).

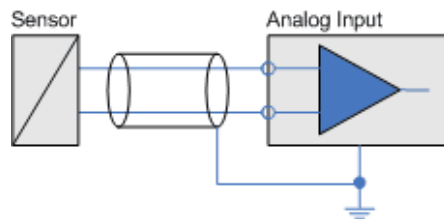


### b) Sensors with earthing

When the use of earth-free sensors is not possible, earth the shield only or attach it to the sensor's earth potential (see example).  
See also [Potential differences](#).

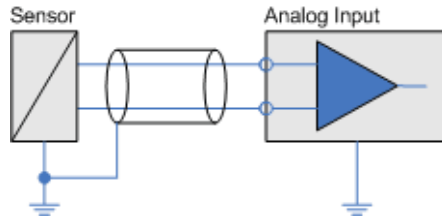

## 5.5 ESD protection

The **Expert VibroExpert Logger** device and the ADGT 3.0 module have earth terminals specifically for ESD protection (ESD, ElectroStatic Discharge ) of the inputs.

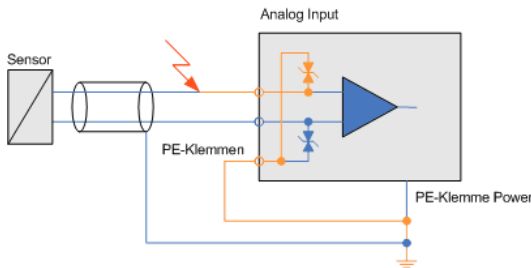

Connect this with PE labelled terminal(s) via a  $\geq 2.5 \text{ mm}^2$  cable to the protective earth of your power supply.

See also [Earthing](#).




**Discharge static before coming into contact with the connecting terminals. Simply touch a housing with protective earth, or the PE terminal. Inputs can be damaged if static is not discharged.**

## 5.6 Potential differences

Potential differences can, in principle, always occur between reference potentials of multiple-sensor measurement signals that are connected to the analogue inputs of an I/O module. The following figure shows the

sensor signals as **green** arrows and  $U_{\text{Mess}}$ , and the potential difference between the two sensor signals as an **orange** arrow and  $U_{\text{Differenz}}$

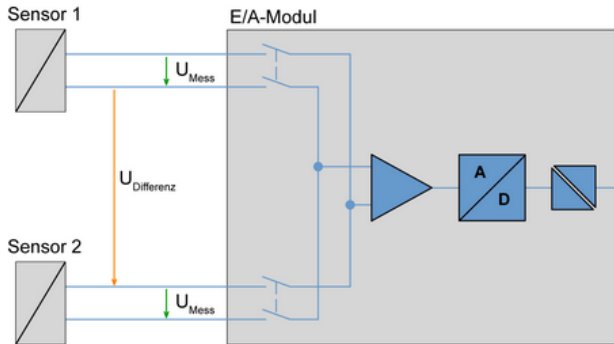

The reference potential of a measurement circuit of an analogue input for a device occurs by a change of channel of the sensors' different reference potentials. Depending on the input circuit of the various device inputs, the difference voltage  $U_{\text{Differenz}}$  between certain channels, may not exceed specified maximum values. These are the 'Permissible differential voltages from channel to channel' specified in the [Technical specifications](#).



## WARNING!

**Connecting terminals carry electrical potential from the attached sensors/actuators.**

**Before coming into contact with the connections, ensure the power is off. Check for any voltages at the connecting terminals when the attached sensors have varying degrees of electrical potential or when they have high electrical potentials with earthing, for example, when measuring electrical current for a mains voltage phase.**

**Differences in electrical potential between two channels of a module can not be determined from the measurement data.**



### **Info**

If the connected sensors have different potentials and high currents are expected in the event of a short circuit between the sensor potentials, take measures to protect the device and the measurement installation from subsequent damage.

## 6 Technical specifications Expert Vibro 8/16

Version	8	16
<b>Analogue inputs</b>	<b>8</b>	<b>16</b>
Sampling rate, set by channel	20 Hz ... 50 kHz	
Signal bandwidth	DC ... 20 kHz	
Analogue anti-aliasing filter	Bessel, 28.1 kHz/4. Order	
Measuring range	± 25 V	
Signal conditioning, software switchable	None, AC coupling, IEPE	
Cut-off frequency high-pass AC coupling	0.01 Hz	
Resolution	24 bit	
Input impedance	4 MΩ	
Dielectric strength (tolerable overvoltage)	± 100 VDC	
Galvanic isolation against PE/a-against other channel	± 400 VDC	
Measurement accuracy	0.5 mV + 0.008% of the measured value	
Triggering	Source	Analogue input/digital input/-time/random channel
	Options	Threshold value, hysteresis, debouncing adjustable
	Redundancy	3-level (analogue input/digital input -> digital input -> time)
	Pulses/period	1 ... 1000
	Periods/trigger	1 ... 8
Digital filter	Type	High pass, Low pass, Bandstop, Anti-hum (notch)
	Characteristics	Butterworth, Chebychev, Bessel, critical attenuation
	Order	2, 4, 6, 8, 10
	Cut-off frequency high-pass	0.25 Hz/1 Hz/2 Hz/5 ... 20 kHz
	Cut-off frequency low-pass	5 ... 20 kHz
	Cut-off frequency band-pass	10 Hz ... 20 kHz
	Anti-hum frequency	16.67/25/50/60 Hz
Anti-hum attenuation	20/40/60 dB	
Decimation/downsampling	Fixed sampling rate	20–50 kHz
	Dynamic sampling rate	6 ... 48000 rpm

Version	8	16
Signal conditioning	Inversion	Yes
	Integration	off, basic, double
	Differentiation	Yes
	Envelope curve/-demodulation/rectification	Yes
Characteristic values in the time range	Min., max., peak-to-peak values	
	Mean, RMS, RMS-without-DC value	
	Maximum of vector sum	
	Local min/max values	
Spectrum	Samples	1k ... 32k
	Lines	400 ... 12800
	Window	Square (Dirichlet), von Hann, Hamming, FlatTop
	Data type	Amplitude, phase, amplitude + phase
	Averaging	2 ... 32 spectra block/PeakHold
	Type	Narrowband, broadband, envelope curve/demodulation
	Amplitude	Peak value, RMS value
Characteristic values in the spectrum range	Amplitude	Main vibration from entire spectrum, sub-band, rotation-adaptive band
		RMS, total value from entire spectrum, sub-band, rotation-adaptive band
		Harmonic (also < 1 and non-integral), residual value
	Phase	Main vibration from entire spectrum, sub-band, rotation-adaptive band
		Harmonic (also < 1 and non-integral)
	Frequency	Main vibration from entire spectrum, sub-band, rotation-adaptive band
Harmonic		
<b>Digital inputs (with counter/frequency measurement)</b>	<b>4</b>	<b>4</b>
Grouping	none	
Level	low	0 ... 1 V
	high	5 ... 100 VDC@3.5 mA
Debouncing	1 ... 60000 µs	

Version	8	16
Digital input	Max. edge change	32000 / s
Frequency/counter function	Measuring range	0.2 Hz ... 1 MHz
	Precision	0.01% of measurement value
	Resolution of frequency inputs	32-bit, time resolution 250 ns
	Minimum pulse width	500 ns
	Counter width	64 bit
	Quadrature decoder, optional reset	Yes
Galvanic isolation	Input to system/other channels/PE	±400 VDC
<b>Digital outputs (also PWM)</b>	<b>8</b>	<b>8</b>
Grouping	2 per group	
Electrical values	Max. switching voltage/current	50 V/2.5 A
	On-state resistance ( $R_{ds\ on}$ )	0.11 $\Omega$
	Maximum power loss ( $P_{tot}$ )	2.5 W
PWM	PWM basic frequency	5 Hz ... 10 kHz
	Duty cycle/resolution	1:1000
Galvanic isolation	Output to system/other channels/PE	±400 VDC
	Output-to-output same group	No
<b>Analogue outputs</b>	<b>4</b>	<b>4</b>
Grouping	4 per group	
Resolution	16 bit	
Max. output rate	50 Hz	
Output ranges, software switchable	0 ... 10 V/ ±10 V/0 ... 20 mA/4 ... 20 mA/±20 mA	
Current output	Output impedance	TBD M $\Omega$
	Max. load	650 $\Omega$
	Wire break monitoring	Yes
Voltage output	Output impedance	TBD $\Omega$
	Min. load	650 $\Omega$
	Short-circuit proof	Yes
	Overload monitoring	Yes
Galvanic isolation	Output to output	No
	Output to system/other channels/PE	±400 VDC
<b>PE terminals</b>	<b>TBD</b>	<b>TBD</b>

Software channels
Calculation channel
Limit value
...

Data storage	
Internal data storage, size/measurement values	2 ... 14 GB / approx. 30 million measurement values per GB
External data storage	USB, NFS, CIFS, (S)FTP

Interfaces	
Mechanical version COM 1/COM 2	RS485, 9-pin Sub-D socket, DIN EN ISO 19245-1
Mechanical version COM 3	RS232, 9-pin Sub-D connector
LAN	1 x 1000Base-TX / 1 x 100Base-T
WLAN (optional, alternative for WWAN)	802.11b/g/n
WWAN (optional, alternative for WLAN)	UMTS, LTE max. 100 MB (configuration, real-time data, e-mail)
	GSM, EDGE, GPRS (SMS)
USB device	2.0 Low-/Full-/High-Speed
USB host	2.0 Low-/Full-/High-Speed
CAN 2.0	2 x
PROFIBUS	2 x, max. 12 MB

Protocols	
PROFIBUS	DPV1 Slave
	Modbus RTU
RS 232/485	SCPI
	ASCII
CAN	CAN Raw
	Delphin CAN Protocol
TCP/IP	Modbus TCP
	OPC UA Server

General technical information	
Dimensions/weight	210 mm x 80 mm x 125 mm/750 g
Mounting	Mounting rail DIN EN 60715 or screw fastening



General technical information	
Signal connections	Pluggable screw terminals
	96 terminals in 2 series
	Conductor cross-section max. 1.5 mm <sup>2</sup>
Temperature range	-20 ... 50°C
Supply voltage	12 ... 24 VDC / ± 10%
Power input normal operation	max. 10 W
Power input sleep mode	5 mW @ 12 V, 10 mW @ 24 V
Backup battery	Lithium battery 3V Varta CR-2450
	Lifespan: 10 years

Display	
Type	LC display
Resolution	320 × 240 pixels
Colour depth	18 bit
Touch	Resistive
Backlight	Brightness adjustable

LEDs	
3 LEDs red/green	Function customer-programmable
Power LED blue/red	Identification/voltage OK/undervoltage/overvoltage
Ethernet	Link, speed, traffic

## 7.1 Connection examples

This Section shows you connection examples of typical sensors and actuators. It explains the available connection options and how to configure your sensors and actuators.

### 7.1.1 Connecting sensors

#### Measuring voltage at analogue input

Sensors with voltage signal can be directly connected.



The measurement range for **Expert Vibro** is  $\pm 10\text{V}$  bipolar.

#### Measuring 20 mA current at analogue input


For sensors with current signals you must connect what is known as a load resistor to the device input terminals. Suitable resistors are available as accessories.



The load resistor for **Expert Vibro** must be a maximum of  $1250\ \Omega$ .

#### Sensor at a digital input

#### Level detection for **Expert Vibro**

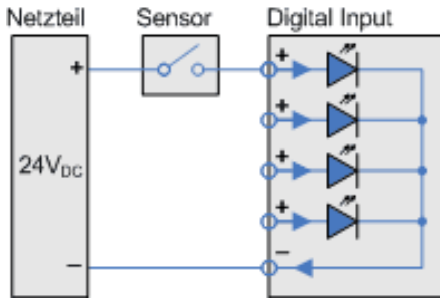


For reliable detection the input signal must have a 'low' level ranging from 0 V–2.5 V, a 'high' level ranging from 3.1 V–50 V and a minimum pulse width of 1 ms. A maximum of 50 signal changes per second (maximum signal frequency) can be recorded.

## IEPE/ICP<sup>®</sup> sensor

For an IEPE or ICP sensor feed use terminal 49 (or 57, 65 or 73, depending on the input) with +18 VDC – +30 VDC voltage and terminal 56 (or 64, 72 or 79) with 0 V.


If the **Expert Vibro** device supply voltage is in the +18 VDC–+30 VDC range, this can be used as a feed, however an separate signal feed can improve signal quality.

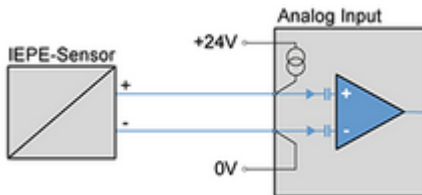


Use terminals 49 to 56 (or between the other ports) for the [potential equalisation](#) (PE).

## 7.1.2 Connecting actuators

### Actuator at an analogue output

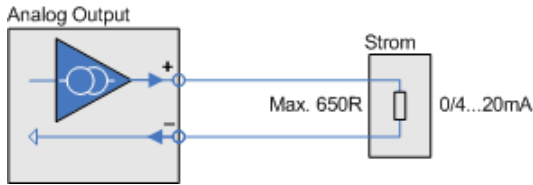

The maximum permissible load resistance of the actuator is 650  $\Omega$ .

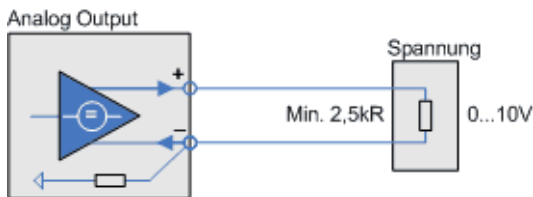


The minimum permissible load resistance of the actuator is 2.5 k $\Omega$ .

### Actuator at a digital output, resistive load

To connect an actuator at a digital output requires an external supply voltage of between 5 V<sub>DC</sub> and 50 V<sub>DC</sub> (24 V in the examples).

### Expert Vibro

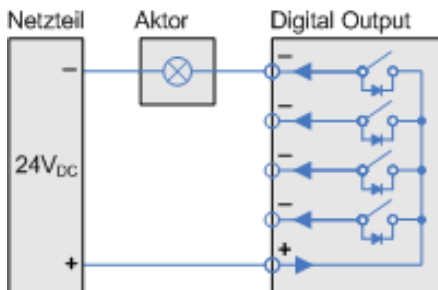




The maximum switching voltage is 50 V and a maximum switching current of 1 A.

### Actuator at a digital output, inductive load

To connect an actuator at a digital output requires an external supply voltage of between 5 VDC and 50 V<sub>DC</sub> (24 V in the examples).

#### Expert Vibro

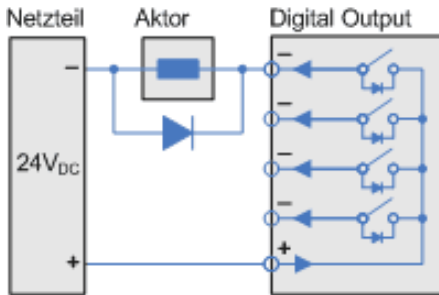

The maximum switching voltage is 50 V and a maximum switching current of 1 A.

To protect the output's electronic switches we recommend switching to recovery diodes in parallel with inductive loads.

## 8 Appendix

### 8.1 ISO 9001 certificate



## Zertifikat

Hiermit wird bescheinigt, dass das Managementsystem von:

### Delphin Technology AG

Lustheide 81, 51427 Bergisch Gladbach, Deutschland

durch Lloyd's Register Quality Assurance geprüft und bewertet wurde und den folgenden Normen entspricht:

ISO 9001:2015



P.G. Cornelissen

Ausgestellt von: Lloyd's Register Deutschland GmbH für und im Auftrag von: Lloyd's Register Quality Assurance Ltd

Bestehendes Zertifikat: 01. Juli 2017

Dieses Zertifikat ist gültig bis: 30. Juni 2020

Zertifikat-Nr.: 10019410

Erstmögliche Zulassung:

ISO 9001 – 27. Juni 1996

Gültigkeits-Nr.: ISO 9001 – 0017728

Das Managementsystem ist anwendbar für:

Entwicklung, Herstellung und Wartung von Datenloggern, Monitoring- und Messdatenerfassungssystemen, einschließlich zugehöriger Software.



001

Lloyd's Register Group Limited, its affiliates and subsidiaries, including Lloyd's Register Quality Assurance Limited (LRQA), and their respective officers, employees or agents are, individually and collectively, referred to in this clause as 'Lloyd's Register'. Lloyd's Register assumes no responsibility and shall not be liable to any person for any loss, damage or expense caused by reliance on the information or advice in this document or howsoever provided, unless that person has signed a contract with the relevant Lloyd's Register entity for the provision of this information or advice and in that case any responsibility or liability is exclusively on the terms and conditions set out in that contract.

Ausgestellt von: Lloyd's Register Deutschland GmbH, Adolf-Grimme-Allee 3 50829 Köln/Germany für und im Auftrag von: Lloyd's Register Quality Assurance Ltd, 1 Trinity Park, Bickenhill Lane, Birmingham B37 7ES, United Kingdom

Page 1 of 1

## 8.2 EC declaration on conformity

### EG-Konformitätserklärung EC-Declaration of Conformity

Hersteller / Manufacturer:	Delphin Technology AG
Anschrift / Address:	Lustheide 81 51427 Bergisch Gladbach, Deutschland / Germany Tel.: +49(0)2204/97685-0 Fax.: +49(0)2204/97685-85
Kontaktperson / Contact:	Claudia Göbel Vorstandsvorsitzende / CEO
Produkt / Product:	<b>Expert Series</b> Expert Logger (100/200/300) Expert Transient / Vibro (8/16)

Hiermit erklären wir, dass die oben genannten Produkte in ihrer Konzeption und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den grundlegenden Sicherheits- und Gesundheitsanforderungen der unten genannten EG-Richtlinien entsprechen. Bei einer mit uns nicht abgestimmten Änderung der Geräte verliert diese Erklärung ihre Gültigkeit.

*Hereby we explain that those corresponds to above designated products in its conception and design as well as in circulation the execution the fundamental safety and health requirements of the European Community Directive mentioned below brought by us. In the case of a change of these products not coordinated with us this explanation loses its validity.*

2004/108/EG	Richtlinie des Europäischen Parlaments und des Rates vom 15. Dezember 2004 zur Angleichung der Rechtsvorschriften der Mitgliedsstaaten über die elektromagnetische Verträglichkeit.
2004/108/EC	<i>Directive of the European parliament and the council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility.</i>

#### Angewandte Spezifikationen / references to the specifications:

EN 61010-1:2010	Sicherheitsbestimmungen für elektrische Mess-, Steuer-, Regel- und Laborgeräte – Teil 1: Allgemeine Anforderungen <i>Safety requirements for electrical equipment for measurement, control and laboratory use – Part 1: General requirements</i>
EN 61326-1:2012	Elektrische Mess-, Steuer-, Regel- und Laborgeräte – EMV-Anforderungen – Teil 1: Allgemeine Anforderungen <i>Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 1: General requirements</i>
EN 300328 V1.8.1	Elektromagnetische Verträglichkeit und Funkspektrumangelegenheiten (ERM) - Breitband-Übertragungssysteme - Datenübertragungsgeräte, die im 2,4 GHz-ISM-Band arbeiten und Bandspreiz-Modulationstechniken verwenden; Harmonisierte EN, die wesentliche Anforderungen nach Artikel 3.2 der R&TTE-Richtlinie enthält. <i>Electromagnetic compatibility and Radio spectrum Matters (ERM) - Wideband transmission systems - Data transmission equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering the essential requirements of article 3.2 of the R&amp;TTE Directive.</i>

07.08.2015 Claudia Göbel

Datum / Date Name / Name



Unterschrift / Sign

## Index

### A

- AC coupling 96
- Adder 145
- Advanced channel selection 52
- Advanced settings tab 48
- Alarm clock 204
- Analogue input 96
- Average 130, 170
- Averaging (FFT) 112

### B

- Bandstop 98
- Basic channel selection 52
- Basic Settings 19
- Batch alarms 187
- Browser information 36
- Buttons 21

### C

- Calculation channel 183
- CAN-Schnittstelle\Konfiguration 219
- CAN interfaces 219
- CE symbol 9
- Channel configuration 44
- Channel configuration (overview) 25
- Channel group 163
- Channel selection 52
- Channels overview 34
- Clock 59, 203
  - settings 61
- Clock frequency errors 203
- Clock settings 59
- COM connection 226
- COM interfaces 22
- Configuration 31
- Counter
  - Hardware 138
  - Software 206
- Current measurement 96



**D**

- Daylight saving time 203
- DCP 42
- Debouncing 91
- Default configuration 35
- Delay 152
- Delphin-CAN-Protocol 42
- Device configuration 44
- Device connections 21
- Device displays 21
- Device memory 271
- Device restart 22, 41
- Differentiator 98, 146
- Digital input 136
- Digital output 141
- Display 22, 66
- Display symbol meanings 22
- Displays 22
- Drives 67

**E**

- Earth loops 280
- Earthing 279
- EC declaration on conformity 295
- Edge trigger 53
- Erweiterungs-Bus\ :maximale Gesamtlänge 42
- ESD protection 282
- Establish device connection 12
- Event (Mail) 146
- Examples
  - Connecting actuators 291
  - Connecting sensors 290
- Expansion bus 42
- Explorer view 44
- Extension-Bus\ :maximale Gesamtlänge 42
- Extension bus 42
- Extension device 42

**F**

- Filter 98
- Firmware changelog 40
- Firmware changes 40

Flip-flop 150  
Frequency sampling over rotation 98

**G**

Galvanic isolation 278  
Gateway 256  
Getting started 11  
GPS antenna 60  
GSD file 37

**H**

Hardware test certificate 36  
High pass 98  
Hysteresis 91, 152

**I**

ICP sensor 96  
IEPE sensor 96  
Included in delivery 10  
Inherit status 54  
Install programs 11  
Integrator 98, 162  
Interfaces 212  
IP address 256  
ISO 9001 certificate 294

**K**

Kanalauswahl\;einfache 52  
Kanalauswahl\;erweiterte 52  
Konfiguration\;über Internet-Browser 31

**L**

LAN LEDs 22  
Latching 152  
LED indicators 22  
Level trigger 53  
Limit value 152  
Linearisation 163

Load configuration 56  
Load resistance 96  
Logic 165  
Login 63, 89  
Low pass 98

## M

Manual sample rate 98  
Markers 169  
Master/Slave 42  
Maximum 129  
Memory 271  
Minimum 129  
Modbus 213-214, 235-236, 238  
    Master 214, 236  
    Protocol 235  
    Slave 213, 238  
    TCP Client Server 213  
Module synchronisation 42

## N

Network 256  
Network configuration  
    XML template 36  
Network drive 68  
Network driver  
    for USB 38  
Network settings 12, 256  
NTP status 33  
Number of samples (FFT) 98  
Number of trigger pulses in a period 91

## O

Operating hours counter 145  
Order analysis (FFT) 112  
Overlap (FFT) 112

## P

Peak-to-peak value 129  
Peak values 129

Period 91  
Ports (TCP, UDP) 12  
Ports used (TCP, UDP) 12  
Potential differences 282  
Power input 21  
Power saving 88  
Power supply 21  
Power Supply 21  
PROFIBUS 37, 232  
PROFIBUS Bitmaps 36  
PROFIBUS GSD file 36  
PROFIBUS\Ausgang 232  
PROFIBUS\Eingang 232  
PROFIBUS\Kanal 232  
Pulse generator 153  
Pulse width modulation (PWM) 181  
PuTTY 36  
PWM 181

## Q

Quick Start 11

## R

Reboot 41  
Reset configuration 35  
Restart 41  
Restart main application 41  
RMS 130  
Rotation speed 95  
Rotation Speed 95

## S

Safety advice 8  
Save configuration 56  
Scaling 98  
Send mail 146  
Sensor connection 24  
Set network address 12  
Setpoint (software channel) 189  
Shielding 281  
Slave device 42  
Software 11

- Software channels 144
- Statistics 193
- Status generator 196
- Status monitoring 197
- Stopwatch 198
- Stratum 203
- Subnet mask 256
- Supply voltage 21
- Switch off (device) 22
- Switch off device 22
- Symbols in document 9
- Symbols used 9
- Synchronisation chain 203
- Synchronisation type 61
- System monitoring 71, 200
- System report 36-37

## T

- Terminal assignment 22, 24
- Terminal blocks assignment 24
- Terminal programme PuTTY 36
- Terminating resistor 42
- Threshold 91, 152
- Time and clock settings 59, 61
- Time delay 209
- Timezone 61, 203
- Track 98
- Trigger (software channel) 202
- Trigger group 91
- Trigger options 53
- Triggering 91

## U

- UDP scan 12
- Unix time 203
- Update device firmware 40
- Update firmware 40
- USB 22
- USB drive 67
- USB network driver 38
- Use multiple devices 42
- User 63, 89
- User management 63, 89
- Using GPS clock 60

**V**

Vector sum 132  
View channels 34  
Voltage measurement 96

**W**

Web configuration 31  
Window function (FFT) 112  
World time 203

**X**

XML network configuration template 36

# Delphin

---

Delphin Technology AG  
Lustheide 81  
51427 Bergisch Gladbach · Germany

Phone +49 (0) 2204 97685-0  
Fax +49 (0) 2204 97685-85  
info@delphin.de · www.delphin.com

