

# Practical Temperature Measurements

Application Note



# Contents

- Introduction..... 2
  - Early Measuring Devices ..... 2
  - Reference Temperatures ..... 3
- The Thermocouple..... 4
  - Measuring Thermocouple Voltage .. 4
  - The Reference Junction ..... 4
  - Reference Circuit ..... 6
  - Hardware Compensation..... 9
  - Voltage - Temperature Conversion 10
- Thermocouple Measurement..... 12
  - Noise Rejection..... 12
  - Isolation..... 12
  - Analogue Filter..... 13
  - Digital Filter ..... 13
  - Practical Precautions ..... 14
  - Poor Junction Connection..... 14
  - De-calibration ..... 14
  - Shunt Impedance..... 15
  - Galvanic Action ..... 15
  - Thermal Shunting..... 15
  - Wire Calibration..... 16
  - Documentation..... 16
  - Diagnostics..... 16
  - Summary..... 17
- The RTD ..... 18
  - History ..... 18
  - Metal Film RTD’s..... 19
  - Resistance Measurement ..... 19
  - Ω to Temperature Conversion ..... 20
  - Practical Precautions ..... 21
- The Thermistor ..... 22
  - Measurement ..... 22
- IC Temperature Sensor ..... 23
- The Measurement System..... 24
- Summary..... 26
- Appendix A - Laws..... 27
- Appendix B - Characteristics ..... 28
- Thermocouple Hardware..... 30
- Bibliography..... 31

# Introduction

The purpose of this application note is to explore the more common temperature measurement techniques, and introduce procedures for improving their accuracy.

We will focus on the four most common temperature transducers: the thermocouple, the RTD (Resistance Temperature Detector), the thermistor and the integrated circuit sensor. Despite the widespread popularity of the thermocouple, it is frequently misused. For this reason, we will concentrate primarily on thermocouple measurement techniques.

Appendix A contains the empirical laws of thermocouples which are the basis for all derivations used herein. Readers wishing a more thorough discussion of thermocouple theory are invited to read reference 3 in the Bibliography.

For those with a specific thermo couple application, Appendix B may aid in choosing the best type of thermocouple.

Throughout this application note we will emphasize the practical considerations of transducer placement, signal conditioning and instrumentation.

## Early Measuring Devices

Galileo is credited with inventing the thermometer, circa 1592.<sup>1,2</sup> In an open container filled with coloured alcohol, he suspended a long narrow-throated glass tube, at the upper end of which was a hollow sphere. When heated, the air in the sphere expanded and bubbled through the liquid. Cooling the sphere caused the liquid to move up the tube.<sup>1</sup> Fluctuations in the temperature of the sphere could then be observed by noting the position of the liquid inside the tube. This “upside-down” thermometer was a poor indicator since the level changed with barometric pressure, and the tube had no scale. Vast improvements were made in temperature measurement accuracy with the development of the Florentine

thermometer, which incorporated sealed construction and a graduated scale.

In the ensuing decades, many thermometric scales were conceived, all based on two or more fixed points. One scale, however, wasn’t universally recognized until the early 1700’s when Gabriel Fahrenheit, a Dutch instrument maker, produced accurate and repeatable mercury thermometers. For the fixed point on the low end of his temperature scale, Fahrenheit used a mixture of ice water and salt (or ammonium chloride). This was the lowest temperature he could reproduce, and he labelled it “zero degrees.” For the high end of his scale, he chose human blood temperature and called it 96 degrees.

Why 96 and not 100 degrees? Earlier scales had been divided into twelve parts. Fahrenheit, in an apparent quest for more resolution divided his scale into 24, then 48 and eventually 96 parts.

The Fahrenheit scale gained popularity primarily because of the repeatability and quality of the thermometers that Fahrenheit built.

Around 1742, Anders Celsius proposed that the melting point of ice and the boiling point of water be used for the two benchmarks. Celsius selected zero degrees as the boiling point and 100 degrees as the melting point. Later, the end points were reversed and the centigrade scale was born. In 1948 the name was officially changed to the Celsius scale.

In the early 1800’s William Thomson (Lord Kelvin), developed a universal thermodynamic scale based upon the coefficient of expansion of an ideal gas. Kelvin established the concept of absolute zero, and his scale remains the standard for modern thermometry.

The conversion equations for the four modern temperature scales are:  
°C = 5/9 (°F - 32)      k = °C + 273.15  
°F = 9/5 °C + 32      °R = °F + 459.67



The Rankine Scale (°R) is simply the Fahrenheit equivalent of the Kelvin scale, and was named after an early pioneer in the field of thermodynamics, W. J. M. Rankine. Notice the official Kelvin scale does not carry a degree sign. The units are expressed in “kelvins,” not degrees Kelvin.

## Reference Temperatures

We cannot build a temperature divider as we can a voltage divider, nor can we add temperatures as we would add lengths to measure distance. We must rely upon temperatures established by physical phenomena which are easily observed and consistent in nature.

The International Temperature Scale (ITS) is based on such phenomena. Revised in 1990, it establishes seventeen fixed points and corresponding temperatures. A sampling is given in Table 1.

Since we have only these fixed temperatures to use as a reference, we must use instruments to interpolate between them. However, accurately interpolating between these temperatures can require some fairly exotic transducers, many of which are too complicated or expensive to use in a practical situation. We shall limit our discussion to the four most common temperature transducers: thermocouples, resistance-temperature detector’s (RTD’s), thermistors, and integrated circuit sensors.

Figure 1 Sensor Types

Thermocouple	RTD	Thermistor	I.C. Sensor
<b>Advantages</b>			
SELF-POWERED SIMPLE RUGGED INEXPENSIVE WIDE VARIETY OF PHYSICAL FORMS WIDE TEMPERATURE RANGE	MOST STABLE MOST ACCURATE MORE LINEAR THAN THERMOCOUPLE	HIGH OUTPUT FAST TWO-WIRE OHMS MEASUREMENT	MOST LINEAR HIGHEST OUTPUT INEXPENSIVE
<b>Disadvantages</b>			
NON-LINEAR LOW VOLTAGE REFERENCE REQUIRED LEAST STABLE LEAST SENSITIVE	EXPENSIVE SLOW CURRENT SOURCE REQUIRED SMALL RESISTANCE CHANGE FOUR-WIRE MEASUREMENT	NON-LINEAR LIMITED TEMPERATURE RANGE FRAGILE CURRENT SOURCE REQUIRED SELF-HEATING	T<250°C POWER SUPPLY REQUIRED SLOW SELF-HEATING LIMITED CONFIGURATIONS

Table 1 ITS-90 Fixed Points

Element		Type	Temperature	
			K	°C
H2	HYDROGEN	TRIPLE POINT	13.8033 K	-259.3467° C
Ne	NEON	TRIPLE POINT	24.5561 K	-248.5939° C
O2	OXYGEN	TRIPLE POINT	54.3584 K	-218.7916° C
Ar	ARGON	TRIPLE POINT	83.8058 K	-189.3442° C
Hg	MERCURY	TRIPLE POINT	234.315 K	-38.8344° C
H2O	WATER	TRIPLE POINT	273.16K	+0.01° C
Ga	GALLIUM	MELTING POINT	302.9146 K	29.7646° C
In	INDIUM	FREEZING POINT	429.7485 K	156.5985° C
Sn	TIN	FREEZING POINT	505.078 K	231.928° C
Zn	ZINC	FREEZING POINT	692.677 K	419.527° C
Al	ALUMINIUM	FREEZING POINT	933.473 K	660.323° C
Ag	SILVER	FREEZING POINT	1234.93 K	961.78° C
Au	GOLD	FREEZING POINT	1337.33 K	1064.18° C

# The Thermocouple

When two wires composed of dissimilar metals are joined at both ends and one of the ends is heated, there is a continuous current which flows in the thermoelectric circuit. Thomas Seebeck made this discovery in 1821 (Figure 2).

If this circuit is broken at the centre, the net open circuit voltage (the Seebeck voltage) is a function of the junction temperature and the composition of the two metals (Figure 3).

All dissimilar metals exhibit this effect. The most common combinations of two metals are listed on page 28 of this application note, along with their important characteristics. For small changes in temperature the Seebeck voltage is linearly proportional to temperature:  $e_{AB} = \alpha T$

Where  $\alpha$ , the Seebeck coefficient, is the constant of proportionality. (For real world thermocouples,  $\alpha$  is not constant but varies with temperature. This factor is discussed under "Voltage-to-Temperature Conversion" on page 10.)

## Measuring Thermocouple Voltage

We can't measure the Seebeck voltage directly because we must first connect a voltmeter to the thermocouple, and the voltmeter leads, themselves, create a new thermoelectric circuit.

Let's connect a voltmeter across a copper-constantan (Type T) thermocouple and look at the voltage output (Figure 4).

We would like the voltmeter to read only  $V$ , but by connecting the voltmeter in an attempt to measure the output of Junction J we have created two more metallic junctions:  $J_2$  and  $J_3$ . Since  $J_3$  is a copper-to-copper junction, it creates no thermal e.m.f. ( $V_3 = 0$ ) but J is a copper-to-constantan junction which will add an e.m.f. ( $V_2$ ) in opposition to  $V_1$ . The resultant voltmeter reading  $V$  will be proportional to the temperature difference between  $J_1$  and  $J_2$ . This says that we can't find the temperature at  $J_1$  unless we first find the temperature of  $J_2$ .

## The Reference Junction

One way to determine the temperature  $J_2$  is to physically put the junction into an ice bath, forcing its temperature to be  $0^\circ\text{C}$  and establishing  $J_2$  as the Reference Junction. Since both voltmeter terminal junctions are now copper-copper, they create no thermal e.m.f. and the reading  $V$  on the voltmeter is proportional to the temperature difference between  $J_1$  and  $J_2$ .

Now the voltmeter reading is (See Figure 5):  
 $V = (V_1 - V_2) \cong \alpha(t_{J_1} - t_{J_2})$

If we specify  $T_{J_1}$  in degrees Celsius:  
 $T_{J_1}(\text{C}) + 273.15 = t_{J_1}(\text{K})$

then  $V$  becomes:  
 $V = V_1 - V_2 = \alpha[(T_{J_1} + 273.15) - (T_{J_2} + 273.15)]$   
 $= \alpha(T_{J_1} - T_{J_2}) = (T_{J_1} - 0)$

$$V = \alpha T_J$$

Figure 2, The Seebeck Effect

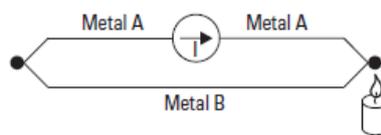


Figure 3, Seebeck Voltage


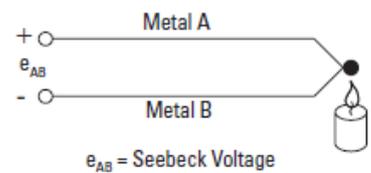


Figure 4, Measuring junction voltage with a DVM

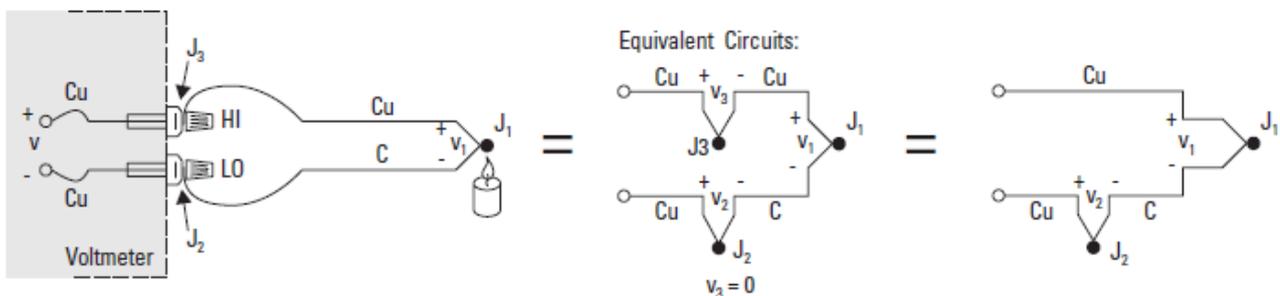

We use this protracted derivation to emphasize that the ice bath junction output  $V_2$  is not zero volts. It is a function of absolute temperature.

By adding the voltage of the ice point reference junction, we have now referenced the reading  $V$  to  $0^\circ\text{C}$ . This method is very accurate because the ice point temperature can be precisely controlled. The ice point is used by the National Institute of Standards and Technology (NIST) as the fundamental reference point for their thermocouple tables, so we can now look at the NIST tables and directly convert from voltage  $V$  to Temperature  $T_{J_1}$ .

The copper-constantan thermocouple shown in Figure 5 is a unique example because the copper wire is the same metal as the voltmeter terminals. Let's use an iron-constantan (Type J) thermocouple instead of the copper constantan. The iron wire (Figure 6) increases the number of dissimilar metal junctions in the circuit, as both voltmeter terminals become Cu-Fe thermocouple junctions.

This circuit will still provide moderately accurate measurements as long as the voltmeter high and low terminals ( $J_3$  &  $J_4$ ) act in opposition (Figure 7).

If both front panel terminals are not at the same temperature, there will be an error. For a more precise measurement, the copper voltmeter leads should be extended so the copper-to-iron junctions are made on an isothermal (same temperature) block (Figure 8).

The isothermal block is an electrical insulator but a good heat conductor and it serves to hold  $J_3$  and  $J_4$  at the same temperature. The absolute block temperature is unimportant because the two Cu-Fe junctions act in opposition. We still have:

$$V = \alpha (T_{J_1} - T_{REF})$$

Figure 5, External reference junction

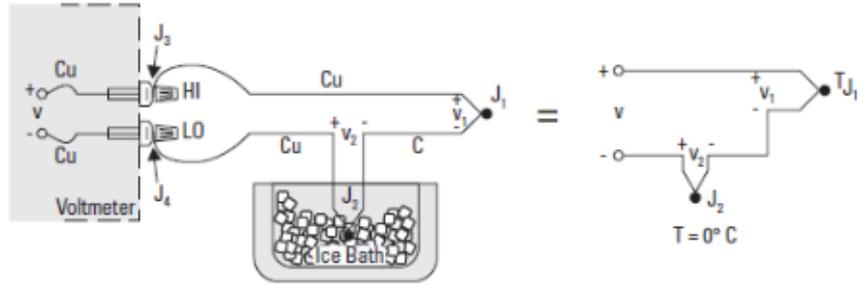


Figure 6, Iron Constantan couple

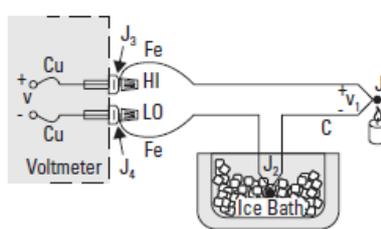


Figure 7, Junction voltage cancellation


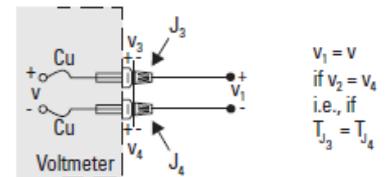


Figure 8, Removing junctions from DVM terminals

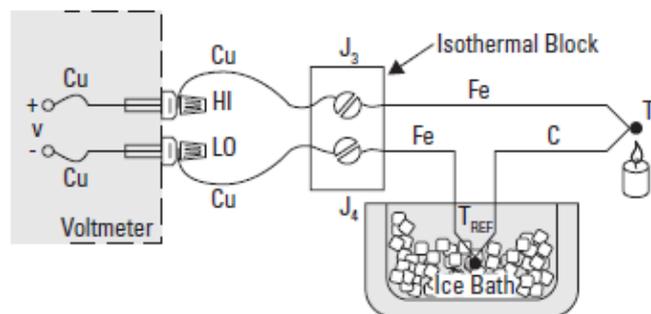

## Reference Circuit

The circuit in Figure 8 will give us accurate readings, but it would be nice to eliminate the ice bath if possible.

Let's replace the ice bath with another isothermal block (Figure 9).

The new block is at Reference Temperature  $T_{REF}$ , and because  $J_3$  and  $J_4$  are still at the same temperature we can again show that:  $V = \alpha (T_1 - T_{REF})$

This is still a rather inconvenient circuit because we have to connect two thermocouples. Let's eliminate the extra Fe wire in the negative (LO) lead by combining the Cu-Fe junction ( $J_4$ ) and the Fe-C junction ( $J_{REF}$ ).

We can do this by first joining the two isothermal blocks (Figure 10).

We haven't changed the output voltage  $V$ . It is still:  $V = \alpha (T_{J_1} - T_{REF})$

Now we call upon the law of intermediate metals (see Appendix A) to eliminate the extra junction. This empirical law states that a third metal (in this case, iron) inserted between the two dissimilar metals of a thermocouple junction will have no effect upon the output voltage as long as the two junctions formed by the additional metal are at the same temperature (Figure 11).

This is a useful conclusion, as it completely eliminates the need for the iron (Fe) wire in the LO lead (Figure 12).

Again  $V = \alpha (T_1 - T_{REF})$  where  $\alpha$  is the Seebeck coefficient for an Fe-C thermocouple.

Junctions  $J_3$  and  $J_4$  take the place of the ice bath. These two junctions now become the *reference junction*.

Figure 9, Eliminating the ice bath

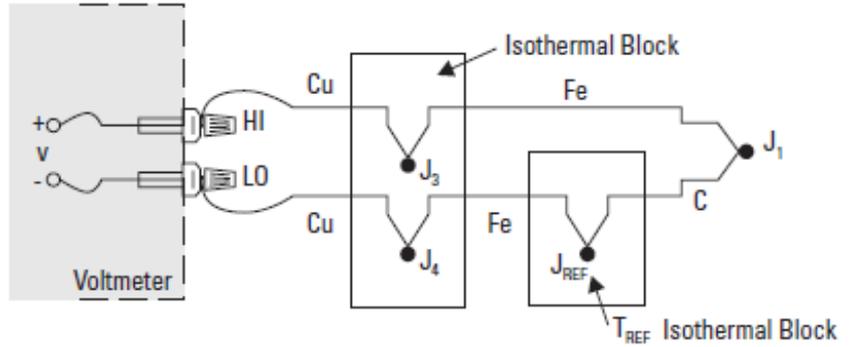


Figure 10, Joining the isothermal blocks



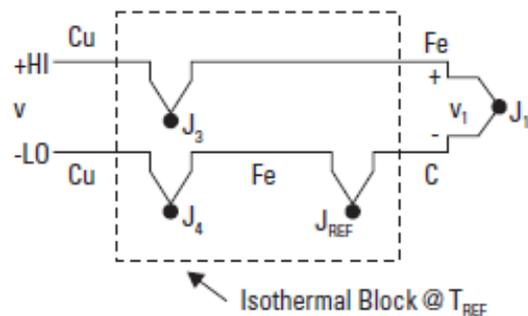


Figure 11, Law of intermediate metals

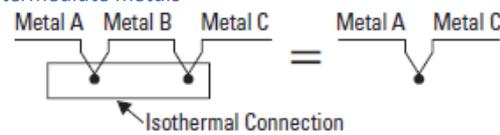

Thus the low lead in Fig. 9b:

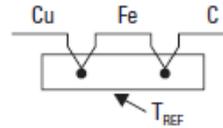

Becomes:


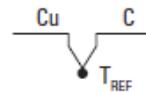


Figure 12, Equivalent circuit

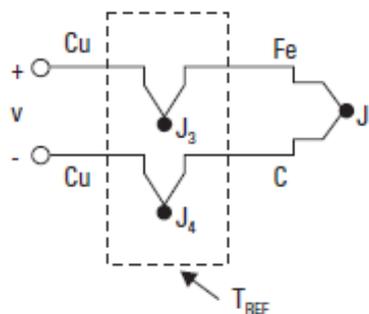

Now we can proceed to the next logical step: Directly measure the temperature of the isothermal block (the reference junction) and use that information to compute the unknown temperature,  $T_{J_1}$  (Figure 13).

A thermistor, whose resistance  $R_T$  is a function of temperature, provides us with a way to measure the absolute temperature of the reference junction. Junctions  $J_3$  and  $J_4$  and the thermistor are all assumed to be at the same temperature, due to the design of the isothermal block. Using a digital multimeter (DMM), we simply:

1. Measure  $R_T$  to find  $T_{REF}$  and convert  $T_{REF}$  to its equivalent reference junction voltage,  $V_{REF}$
2. Measure  $V$  and add  $V_{REF}$  to find  $V_1$  and convert  $V_1$  to temperature  $T_{J_1}$

This procedure is known as *software compensation* because it relies upon software in the instrument or a computer to compensate for the effect of the reference junction. The isothermal terminal block temperature sensor can be any device which has a characteristic proportional to absolute temperature: an RTD, a thermistor, or an integrated circuit sensor.

It seems logical to ask: If we already have a device that will measure absolute temperature (like an RTD or thermistor), why do we even bother with a thermocouple that requires reference junction compensation? The single most important answer to this question is that the thermistor, the RTD, and the integrated circuit transducer are only useful over a certain temperature range. Thermocouples, on the other hand, can be used over a range of temperatures, and optimized for various atmospheres. They are much more rugged than thermistors, as evidenced by the fact that thermocouples are often welded to a metal part or clamped under a screw. They can be manufactured on the spot, either by soldering or welding. In short, thermocouples are the most versatile temperature transducers available and since the measurement system performs the entire task of reference compensation and software voltage-to-

Figure 13, External reference junction – no ice bath

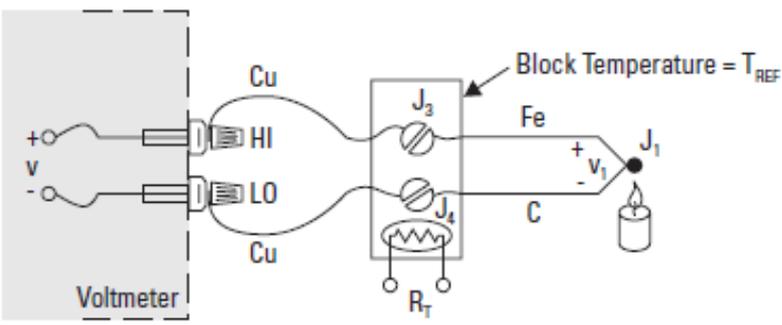


Figure 14, Switching multiple thermocouple types via scanning DMM


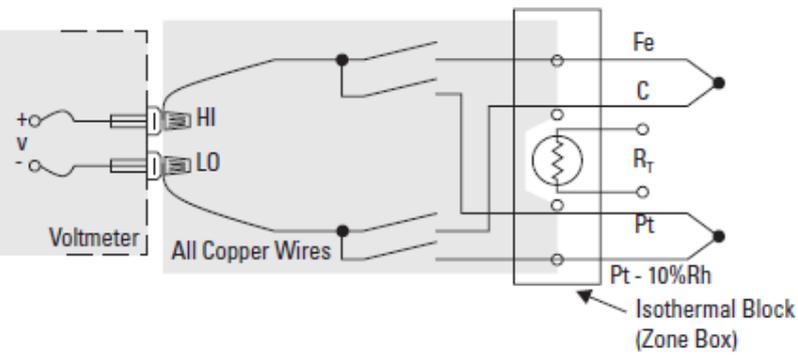


Figure 15, ADC per channel simultaneous multi-channel measurement

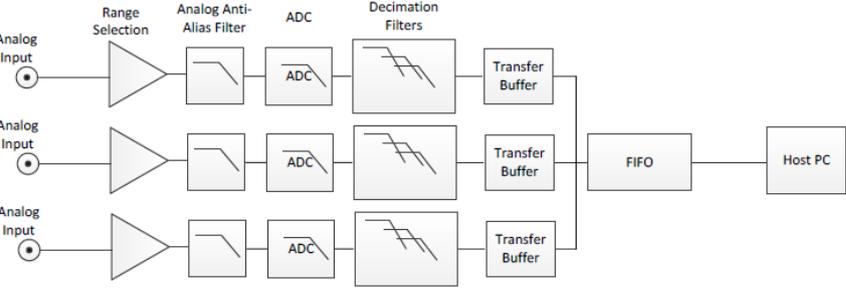

temperature conversion, using a thermocouple becomes as easy as connecting a pair of wires.

Thermocouple measurement becomes especially convenient when we are required to monitor a large number of data points. This is accomplished by using the isothermal reference junction for more than one thermocouple element (Figure 14). Traditionally a relay scanner was used to connect the voltmeter to the various thermocouples

in sequence. All of the voltmeter and scanner wires are copper, independent of the type of thermocouple chosen. In fact, as long as we know what each thermocouple is, we can mix thermocouple types on the same isothermal junction block (often called a *zone box*) and make the appropriate modifications in software. The junction block temperature sensor,  $R_T$  is located at the centre of the block to minimize errors due to thermal gradients.

Step forwards in time and we can now avoid the uncertainty, scan time, and reliability issues of using a relay and instead use a 24-bit Sigma-Delta ADC per measuring channel, rather than scanning the inputs we can now simultaneously measure multiple channels with far greater accuracy (Figure 15). This is in

Looking at a modern ADC per channel system we have a block diagram as shown in Figure 16

At the front end we have the Thermocouple generally terminated with a Type U (universal copper) mini thermocouple connector or a generic copper termination. Such terminations can be used for both voltage and thermocouple measurement. Each connector has a dedicated thermistor mounted internally for cold junction compensation. Good mechanical design ensures that the CJC is thermally isolated from the active electronics and maintained close to ambient temperature to ensure best performance.

Good practice ensures each input is protected with ESD clamping circuits that present a small capacitance to earth ground (i.e., the metal enclosure, which is also grounded to the local earth.) Adding gas discharge tubes on both inputs that will arc (short to ground) for any excessive common mode voltage adds another level of input protection

With thermocouple wire being easily damaged is particularly useful to detect if a thermocouple connection breaks and becomes open circuit. Devices such as the VTI Instruments EX1401 employ a Open Transducer Detection (OTD) system. The OTD circuit presents a very small current (typically less than 10nA) into both sides of the mini TC connector inputs. The current will normally flow through the thermocouple wire from the (+) side to the (-) side. As long as the thermocouple wire presents a short circuit (as it normally does) then there is

no fault detected. These current sources are small enough not to affect measurement accuracy, but large enough to drive the high-impedance input of the instrumentation amplifier (IA) deterministically into saturation in the event of an open condition. When enabled, they provide continuous monitoring of the input and will generate an open indication event when the open is intermittent in nature. An important feature of the OTD is that the current sources can be enabled or disabled on a per channel basis. This permits the user to choose which of their input signals require open circuit detection.


As the modern temperature measuring system employs an individual ADC per channel then each channel has its own dedicated analogue signal conditioning chain as well. To support this there are two low pass filters in the chain, one prior to the programmable gain amplifier (PGA) and one prior to the ADC. Both are single pole filters with a nominal 3dB cut-off at 30kHz. These two filters, along with a filter in the PGA section, provide the Nyquist frequency rejection for the ADC. These analogue filters keep anti-aliasing of high frequency to a minimum so the digital data output of the ADC can then be confidently filtered by the subsequent digital filters inside the FPGA.

With modern FPGA's and System on a Chip technology being so capable now, we can add features such as Built In Self-Test (BIST) where each channel has its own, circuit which includes a separate ADC from the measurement path. The BIST ADC can operate at a slower rate. This lower sample rate provides the high accuracy needed for CJC measurement and reference measurement.

The BIST ADC is responsible for measuring the output of the thermistor used for CJC. The thermistor is part of a resistor divider circuit typically driven by an on-board precision voltage reference. The BIST ADC can measure both the reference and the thermistor output so only a ratio metric calculation needs to be done to find the thermistor resistance. Calculation of the junction temperature is then done digitally in the FPGA based on the coefficients of the thermistor used.

Software compensation is the most versatile technique we have for measuring thermocouples. In addition, when using a data acquisition system with a built-in zone box, we simply connect the thermocouple as we would a pair of test leads. All of the conversions are performed by the instrument's software. The one disadvantage is that it requires a small amount of additional time to calculate the reference junction temperature. With modern FPGA's and microprocessors this calculation time is not really an issue. In the past it could be avoided with hardware compensation

Figure 16, Modern thermocouple measuring system

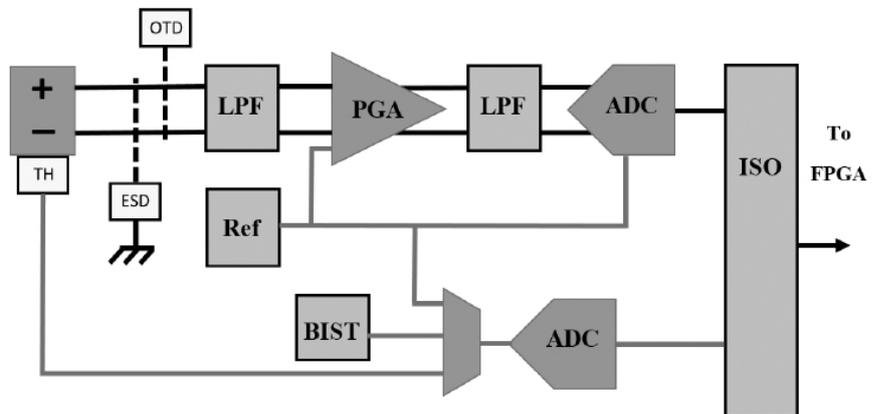

## Hardware Compensation

Rather than measuring the temperature of the reference junction and computing its equivalent voltage as we did with software compensation, we could insert a battery to cancel the offset voltage of the reference junction. The combination of this hardware compensation voltage and the reference junction voltage is equal to that of a 0° C junction (Figure 17).

The compensation voltage,  $e$ , is a function of the temperature sensing resistor,  $R_T$ . The voltage  $V$  is now referenced to 0° C, and may be read directly and converted to temperature by using the NIST tables.

Another name for this circuit is the *electronic ice point reference*.<sup>6</sup> These circuits are commercially available for use with any voltmeter and with a wide

variety of thermocouples. The major drawback is that a unique ice point reference circuit is usually needed for each individual thermocouple type.

Figure 18 shows a practical ice point reference circuit that can be used in conjunction with a relay scanner to compensate an entire block of thermocouple inputs. All the thermocouples in the block must be of the same type, but each block of inputs can accommodate a different thermocouple type by simply changing gain resistors.

The advantage of the hardware compensation circuit or electronic ice point reference is that we eliminate the need to compute the reference temperature. This saves us two computation steps and makes a hardware compensation temperature measurement somewhat faster than a

software compensation measurement. However, today's faster microprocessors and advanced data acquisition designs continue to blur the line between the two methods, with software compensation speeds challenging those of hardware compensation in practical applications (Table 2).

Table 2 Hardware V Software compensation

Hardware Compensation	Software Compensation
FAST	REQUIRES MORE SOFTWARE MANIPULATION TIME
RESTRICTED TO ONE THERMOCOUPLE TYPE PER REFERENCE JUNCTION	VERSATILE – ACCEPTS ANY THERMOCOUPLE
HARD TO RECONFIGURE – REQUIRES HARDWARE CHANGE FOR NEW THERMOCOUPLE TYPE	EASY TO RECONFIGURE

Figure 17, Hardware compensation circuit


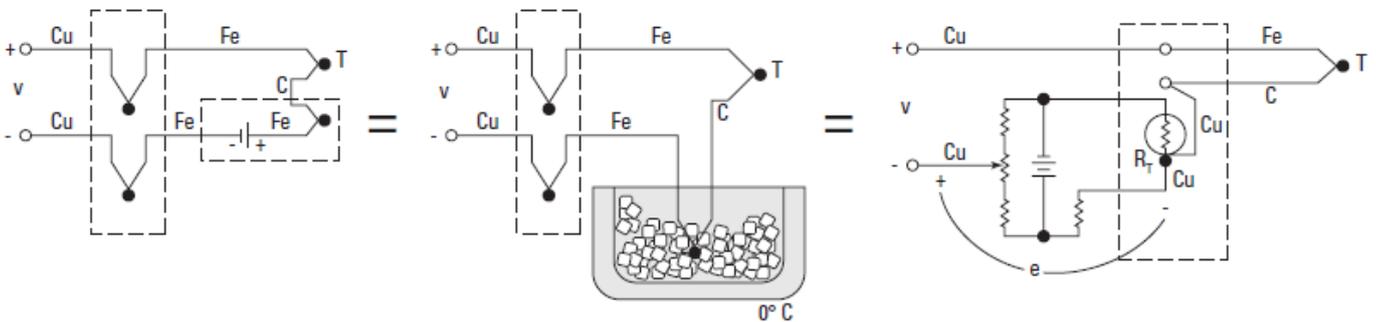


Figure 18, Practical hardware compensation

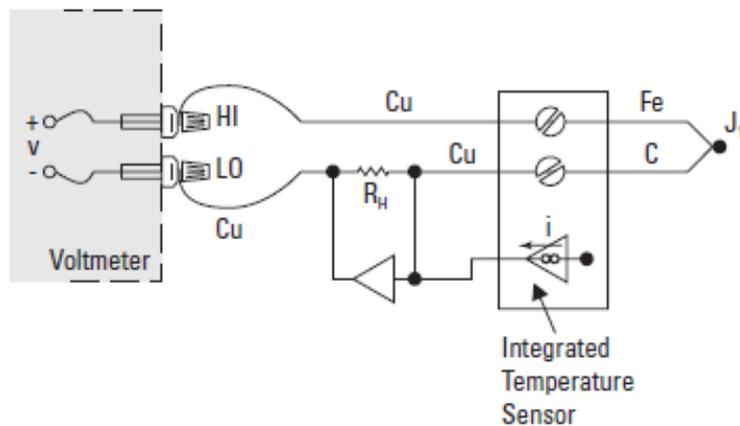

## Voltage - Temperature Conversion

We have used hardware or software compensation to synthesize an ice point reference. Now all we have to do is to read the digital voltmeter or ADC and convert the voltage reading to a temperature. Unfortunately, the temperature-versus-voltage relationship of a thermocouple is not linear. Output voltages for some popular thermocouples are plotted as a function of temperature in Figure 19. If the slope of the curve (the Seebeck coefficient) is plotted vs. temperature, as in Figure 20, it becomes quite obvious that the thermocouple is a non-linear device.

A horizontal line in Figure 20 would indicate a constant  $\alpha$ , in other words, a linear device. We notice that the slope of the type K thermocouple approaches a constant over a temperature range from 0° C to 1000° C. Consequently, the type K can be used with a multiplying voltmeter and an external ice point reference to obtain a moderately accurate direct readout of temperature. That is, the temperature display involves only a scale factor.

By examining the variations in Seebeck coefficient, we can easily see that using one constant scale factor would limit the temperature range of the system and restrict the system accuracy. Better conversion accuracy can be obtained by reading the voltmeter or ADC and consulting the NIST Thermocouple Tables4 (NIST Monograph 175 see Table 3).

Memory permitting, we can store these look-up tables in the device firmware, something that was not possible in the past. However, look-up tables are limited by their step size and so can cause accuracy issues. Often a more viable approach is to approximate the table values using a power series polynomial:

$$t_{90} = C_0 + C_1X + C_2X^2 + C_3 X^3 + \dots + C_nX^n$$


where

$t_{90}$  = Temperature

x = Thermocouple Voltage

c = Polynomial coefficients unique to each thermocouple  
n = Maximum order of the polynomial

Figure 19, Thermocouple temperature vs voltage graph

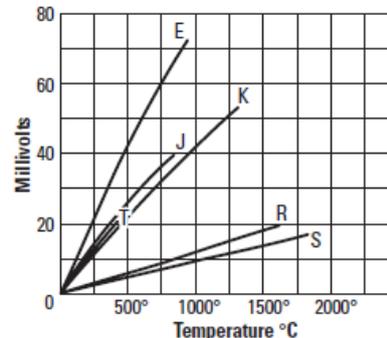

Type	Metals	
	+	-
E	CHROMEL	CONSTANTAN
J	IRON	CONSTANTAN
K	CHROMEL	ALUMEL
R	PLATINUM	PLATINUM + 13% RHODIUM
S	PLATINUM	PLATINUM + 10% RHODIUM
T	COPPER	CONSTANTAN

Figure 20, Seebeck coefficient vs temperature

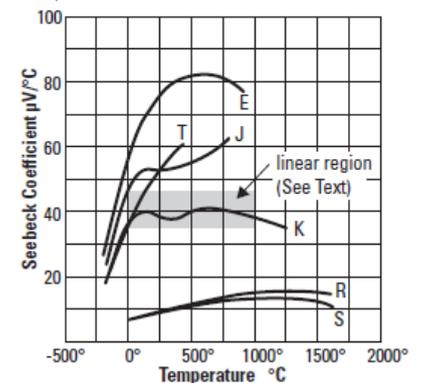


Table 3, Type E Thermocouple

Temperatures in °C (ITS-90)												
mV	.00	.01	.02	.03	.04	.05	.06	.07	.08	.09	.10	mV
0.00	0.00	0.17	0.34	0.51	0.68	0.85	1.02	1.19	1.36	1.53	1.70	0.00
0.10	1.70	1.87	2.04	2.21	2.38	2.55	2.72	2.89	3.06	3.23	3.40	0.10
0.20	3.40	3.57	3.74	3.91	4.08	4.25	4.42	4.59	4.76	4.92	5.09	0.20
0.30	5.09	5.26	5.43	5.60	5.77	5.94	6.11	6.28	6.45	6.61	6.78	0.30
0.40	6.78	6.95	7.12	7.29	7.46	7.63	7.79	7.96	8.13	8.30	8.47	0.40
0.50	8.47	8.64	8.80	8.97	9.14	9.31	9.48	9.64	9.81	9.98	10.15	0.50
0.60	10.15	10.32	10.48	10.65	10.82	10.99	11.15	11.32	11.49	11.66	11.82	0.60
0.70	11.82	11.99	12.16	12.33	12.49	12.66	12.83	12.99	13.16	13.33	13.50	0.70
0.80	13.50	13.66	13.83	14.00	14.16	14.33	14.50	14.66	14.83	15.00	15.16	0.80
0.90	15.16	15.33	15.50	15.66	15.83	16.00	16.16	16.33	16.49	16.66	16.83	0.90
1.00	16.83	16.99	17.16	17.32	17.49	17.66	17.82	17.99	18.15	18.32	18.49	1.00
1.10	18.49	18.65	18.82	18.98	19.15	19.31	19.48	19.64	19.81	19.98	20.14	1.10
1.20	20.14	20.31	20.47	20.64	20.80	20.97	21.13	21.30	21.46	21.63	21.79	1.20
1.30	21.79	21.96	22.12	22.29	22.45	22.61	22.78	22.94	23.11	23.27	23.44	1.30
1.40	23.44	23.60	23.77	23.93	24.10	24.26	24.42	24.59	24.75	24.92	25.08	1.40

As n increases, the accuracy of the polynomial improves. Lower order polynomials may be used over a narrow temperature range to obtain higher system speed. The EX1401's channels can be configured with a unique custom 12th order polynomial for very accurate results. Table 4 is an example of the polynomials used in conjunction with software compensation for a data acquisition system. Rather than directly calculating the exponentials, the software is programmed to use the *nested polynomial* form to save execution time. The polynomial fit rapidly degrades outside the temperature range shown in Table 4 and should not be extrapolated outside those limits.

Previously the calculation of high-order polynomials was a time-consuming task. As a result, time was saved by using a lower order polynomial for a smaller temperature range. In the software for one data acquisition system, the thermocouple characteristic curve could be divided in up to eight sectors and each sector was approximated by a third-order polynomial (Figure 21). With the advances in FPGA's and embedded processors 12<sup>th</sup> order polynomials are easily calculated on the fly and such polynomial division into sectors is no longer needed or used.

There are two thermocouple type-specific calculations that are performed in the EX1401. The first calculation transforms the CJC temperature into a compensating voltage that is mathematically added to the measured input voltage. The second calculation transforms this total voltage into its final thermocouple temperature. For maximum accuracy, both of these calculations are performed using the full-order polynomial equations and coefficients from the NIST ITS-90 Thermocouple Database, not from lookup tables or piecewise linear approximations.

All the foregoing procedures assume the thermocouple voltage can be measured accurately and easily; however, a quick glance at Table 5 shows us that

thermocouple output voltages are very small indeed. Examine the requirements of the system voltmeter.

Table 4, NIST ITS-90 Polynomial Coefficients

Thermocouple Type	Type J		Type K	
	Temperature Range Error Range Polynomial Order			
	-210° C to 0° C ± 0.05° C 8th order	0° C to 760° C ± 0.04° C 7th order	-200° C to 0° C ± 0.04° C 8th order	0° C to 500° C ±0.05° C 9th order
C <sub>0</sub>	0	0	0	0
C <sub>2</sub>	1.9528268 x 10 <sup>-2</sup>	1.978425 x 10 <sup>-2</sup>	2.5173462 x 10 <sup>-2</sup>	2.508355 x 10 <sup>-2</sup>
C <sub>1</sub>	-1.2286185 x 10 <sup>-6</sup>	-2.001204 x 10 <sup>-7</sup>	-1.1662878 x 10 <sup>-6</sup>	7.860106 x 10 <sup>-8</sup>
C <sub>3</sub>	-1.0752178 x 10 <sup>-9</sup>	1.036969 x 10 <sup>-11</sup>	-1.0833638 x 10 <sup>-9</sup>	-2.503131 x 10 <sup>-10</sup>
C <sub>4</sub>	-5.9086933 x 10 <sup>-13</sup>	-2.549687 x 10 <sup>-16</sup>	-8.9773540 x 10 <sup>-13</sup>	8.315270 x 10 <sup>-14</sup>
C <sub>5</sub>	-1.7256713 x 10 <sup>-16</sup>	3.585153 x 10 <sup>-21</sup>	-3.7342377 x 10 <sup>-16</sup>	-1.228034 x 10 <sup>-17</sup>
C <sub>6</sub>	-2.8131513 x 10 <sup>-20</sup>	-5.344285 x 10 <sup>-26</sup>	-8.6632643 x 10 <sup>-20</sup>	9.804036 x 10 <sup>-22</sup>
C <sub>7</sub>	-2.3963370 x 10 <sup>-24</sup>	5.099890 x 10 <sup>-31</sup>	-1.0450598 x 10 <sup>-23</sup>	-4.413030 x 10 <sup>-26</sup>
C <sub>8</sub>	-8.3823321 x 10 <sup>-29</sup>		-5.1920577 x 10 <sup>-28</sup>	1.057734 x 10 <sup>-30</sup>
C <sub>9</sub>				-1.052755 x 10 <sup>-35</sup>

Temperature Conversion Equation:  $t_{90} = c_0 + c_1x + c_2x^2 + \dots + c_9x^9$


Nested Polynomial Form (4th order example):  $t_{90} = c_0 + x(c_1 + x(c_2 + x(c_3 + c_4x)))$

Table 5, Required ADC sensitivity

Thermocouple Type	Seebeck Coefficient at 25° C (µV/°C)	ADC Sensitivity for 0.1° C (µV)
E	61	6.1
J	52	5.2
K	40	4.0
R	6	0.6
S	6	0.6
T	41	4.1

Even for the common type K thermocouple, the ADC must be able to resolve 4 µV to detect a 0.1° C change. This demands both excellent resolution (the more bits, the better, for this reason you'll find 24-bit ADC's incorporated in the EX1401 from VTI Instruments) and measurement accuracy from the ADC. The magnitude of this signal is an open invitation for noise to creep into any system. For this reason, instrument designers utilize several fundamental noise rejection techniques such as, digitally selectable low pass filtering and pre-ADC gain stages, as well as isolation.

Figure 21, Curve derived into sectors (required by old low speed processors)

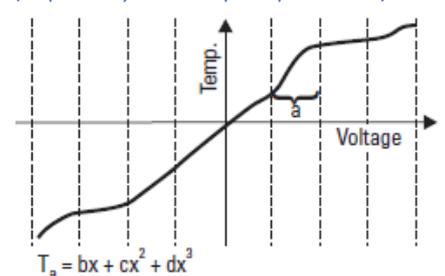

# Thermocouple Measurement


## Noise Rejection

With a relay based DMM scanning system a method called Tree Switching was employed. Tree switching was a method of organizing the channels of a scanner into groups, each with its own main switch.

Without tree switching, every channel would contribute noise directly through its stray capacitance. With tree switching, groups of parallel channel capacitances were in series with a single tree switch capacitance. The result was greatly reduced crosstalk in a large data acquisition system, due to the reduced channel to channel capacitance (Figure 22).

In a modern ADC per channel system no such switching is required as all channels are isolated from each other, this both improves accuracy, reduces noise, and reduces acquisition time.

Figure 22 Tree Switching

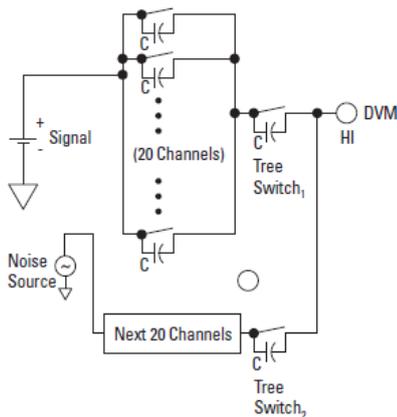

Shielded thermocouple wire can be used to raise the system’s rejection of electrical interference. Shielded wire encloses the two thermocouple wires with a low impedance conductor that should be terminated by the user to a convenient earth ground. The EX1401 provides an external ground stud that can be used for this purpose, but any earth ground point is acceptable.

Magnetic interference, which is present wherever high currents are flowing, is conversely decreased by minimizing the loop area represented by the two thermocouple wires. That is, the wires should be run closely together from the thermocouple junction to the connections in the thermocouple jack. Fortunately, most thermocouple wire comes with a sheath that covers the two thermocouple conductors, inherently creating a small loop area.

Many test applications involve the monitoring of a test article in a chamber, requiring the routing of numerous types of signals through the chamber’s cable access ports. It is recommended that the thermocouple wires be run through a separate port and conduit from cables carrying power or high frequency signals.


## Isolation

A noise source that is common to both high and low measurement leads is called common mode noise. Isolated inputs help to reduce this noise as well as protect the measurement system from ground loops and transients.

Let’s assume a thermocouple wire has been pulled through the same conduit as a 220V AC supply line (exactly as directed to avoid in the previously). The capacitance between the power lines and the thermocouple lines will create an AC signal of approximately equal magnitude on both thermocouple wires. This is not a problem in an ideal circuit, but the voltmeter is not ideal. It has some capacitance between its low terminal and safety ground (earth). Current flows through this capacitance and through the thermocouple lead resistance, creating a normal mode signal which appears as measurement error.

This error is reduced by isolating the input terminals from safety ground with a careful design that minimizes the low-earth capacitance. Non-isolated or ground-referenced inputs (“single-ended” inputs are often ground-referenced) don’t have the ability to reject common mode noise.

Figure 23, ADC per channel

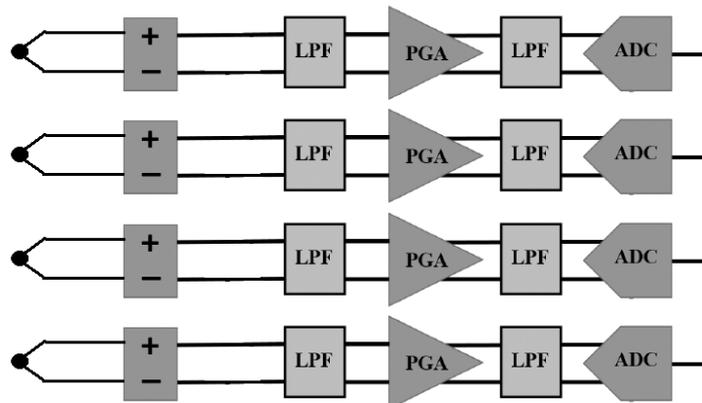

Instead, the common mode current flows through the low lead directly to ground, causing potentially large reading errors. Isolated inputs are particularly useful in eliminating ground loops created when the thermocouple junction comes into direct contact with a common mode noise source.

In Figure 24 we want to measure the temperature at the centre of a molten metal bath that is being heated by electric current. The potential at the centre of the bath is 120 VRMS. The equivalent circuit is shown in Figure 25. Isolated inputs reject the noise current by maintaining a high impedance between LO and Earth. A non-isolated system, represented in Figure 24, completes the path to earth resulting in a ground loop. The resulting currents can be dangerously high and can be harmful to both instrument and operator. Isolated inputs are required for making measurements with high common mode noise.

Figure 24,


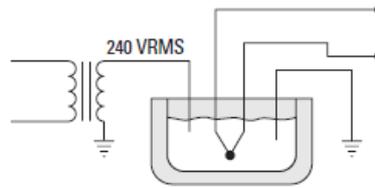


Figure 25,

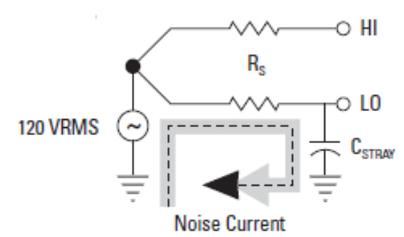

## Analogue Filter

Traditionally a filter was used directly at the input of a voltmeter to reduce noise. This was generally an RC type filter and as such it reduced interference dramatically, but caused the voltmeter to respond more slowly to step inputs (Figure 26).


Today devices like the EX1401 where input channel has a fixed, 2-pole, 30kHz RC low pass filter for anti-alias filtering. The analogue signals after the anti-alias filter are over sampled at 320kHz to 640kHz by the ADCs. This combination of anti-alias filter with ADC oversampling provides 60dB of noise rejection at the aliasing band, this is not something that would be possible with a scanning DMM.

## Digital Filter

A typical digital filter allows the user to configure different types of digital filters per channel. These digital filters are implemented inside the FPGA of the device, such that they perform consistently and without loading the host computer resources. Users can optimize the filter settings for aggressive filter performance or lower data latency time. In addition, users can customize the Finite Impulse Response (FIR) filter performance by editing the coefficients of the filter. This provides ultimate flexibility in designing a filter to suit the application needs. The advantages of digital FIR filters are that:

- They do not create large phase differences, therefore it is possible to create zero phase filters
- They are always stable
- They do not require feedback loops
- The transient response will always have a finite duration

Figure 26, Typical analogue filter

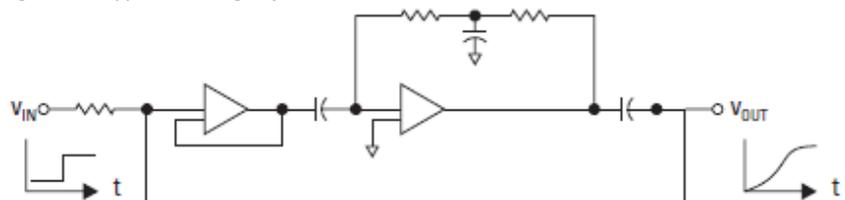

## Practical Precautions

We have discussed the concepts of the reference junction, how to use a polynomial to extract absolute temperature data and what to look for in a data acquisition system to minimize the effects of noise. Now let's look at the thermocouple wire itself. The polynomial curve fit relies upon the thermocouple wire being perfect; that is, it must not become de-calibrated during the act of making a temperature measurement. We shall now discuss some of the pitfalls of thermocouple thermometry.

Aside from the specified accuracies of the data acquisition system and its isothermal reference junction, most measurement error may be traced to one of these primary sources:

1. Poor junction connection
2. De-calibration of thermocouple wire
3. Shunt impedance and galvanic action
4. Thermal shunting
5. Noise and leakage currents
6. Thermocouple specifications
7. Documentation


### Poor Junction Connection

There are a number of acceptable ways to connect two thermocouple wires: soldering, silver-soldering, welding, etc. When the thermocouple wires are soldered together, we introduce a third metal into the thermocouple circuit. As long as the temperatures on both sides of the thermocouple are the same, the solder should not introduce an error. The solder does limit the maximum temperature to which we can subject this junction (Figure 27).

To reach a high measurement temperature, the joint must be welded. But welding is not a process to be taken lightly.<sup>5</sup> Overheating can degrade the wire, and the welding gas and the atmosphere in which the wire is welded

can both diffuse into the thermocouple metal, changing its characteristics. The difficulty is compounded by the very different nature of the two metals being joined.

Figure 27, Soldering a thermocouple

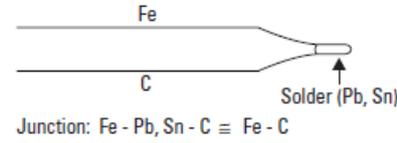

Commercial thermocouples are welded on expensive machinery using a capacitive-discharge technique to insure uniformity.

A poor weld can, of course, result in an open connection, which can be detected in a measurement system that employs Open Transducer Discovery such as the EX1401.

### De-calibration

De-calibration is a far more serious fault condition than the open thermocouple because it can result in temperature reading that appears to be correct. De-calibration describes the process of unintentionally altering the physical makeup of the thermocouple wire so that it no longer conforms to the NIST polynomial within specified limits. De-calibration can result from diffusion of atmospheric particles into the metal, caused by temperature extremes. It can be caused by high temperature annealing or by coldworking the metal, an effect that can occur when the wire is drawn through a conduit or strained by rough handling or vibration. Annealing can occur within the section of wire that undergoes a temperature gradient.

Robert Moffat in his *Gradient Approach to Thermocouple Thermometry* explains that the thermocouple voltage is actually generated by the section of wire that contains a temperature gradient, and not necessarily by the junction.<sup>9</sup> For example, if we have a thermal probe located in a molten metal bath, there will be two regions that are virtually


isothermal and one that has a large gradient.

In Figure 28, the thermocouple junction will not produce any part of the output voltage. The shaded section will be the one producing virtually the entire thermocouple output voltage. If, due to aging or annealing, the output of this thermocouple was found to be drifting, replacing only the thermocouple junction would not solve the problem. We would have to replace the entire shaded section, since it is the source of the thermocouple voltage.

Thermocouple wire obviously can't be manufactured perfectly; there will be some defects which will cause output voltage errors. These inhomogeneities can be especially disruptive if they occur in a region of steep temperature gradient.

Since we don't know where an imperfection will occur within a wire, the best thing we can do is to avoid creating a steep gradient. Gradients can be reduced by using metallic sleeving or by careful placement of the thermocouple wire.

Figure 28, Gradient produces voltage

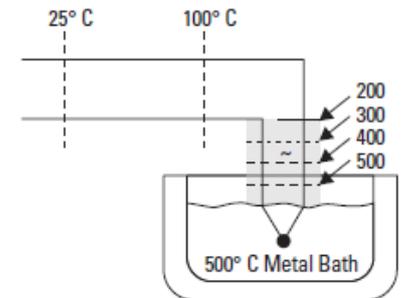

## Shunt Impedance

High temperatures can also take their toll on thermocouple wire insulators. Insulation resistance decreases exponentially with increasing temperature, even to the point that it creates a virtual junction. Assume we have a completely open thermocouple operating at a high temperature (Figure 29).

The leakage resistance,  $R_L$  can be sufficiently low to complete the circuit path and give us an improper voltage reading. Now let's assume the thermocouple is not open, but we are using a very long section of small diameter wire (Figure 30).


If the thermocouple wire is small, its series resistance,  $R_S$ , will be quite high and under extreme conditions  $R_L \ll R_S$ . This means that the thermocouple junction will appear to be at  $R_L$  and the output will be proportional to  $T_1$ , not  $T_2$ .

High temperatures have other detrimental effects on thermocouple wire. The impurities and chemicals within the insulation can actually diffuse into the thermocouple metal causing the temperature-voltage dependence to deviate from the published values. When using thermocouples at high temperatures, the insulation should be chosen carefully. Atmospheric effects can be minimized by choosing the proper protective metallic or ceramic sheath.

## Galvanic Action

The dyes used in some thermocouple insulation will form an electrolyte in the presence of water. This creates a galvanic action, with a resultant output hundreds of times greater than the Seebeck effect. Precautions should be taken to shield the thermocouple wires from all harsh atmospheres and liquids.

Figure 29, Leakage resistance

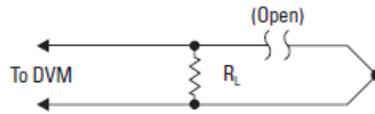


## Thermal Shunting

No thermocouple can be made without mass. Since it takes energy to heat any mass, the thermocouple will slightly alter the temperature it was meant to measure. If the mass to be measured is small, the thermocouple must naturally be small. But a thermocouple made with small wire is far more susceptible to the problems of contamination, annealing, strain, and shunt impedance.<sup>7</sup> To minimize these effects, thermocouple extension wire can be used.

Extension wire is commercially available wire primarily intended to cover long distances between the measuring thermocouple and the voltmeter. Extension wire is made of metals having Seebeck coefficients very similar to a particular thermocouple type. It is generally larger in size so that its series resistance does not become a factor when traversing long distances. It can also be pulled more readily through conduit than very small thermocouple wire. It generally is specified over a much lower temperature range than premium-grade thermocouple wire. In addition to offering a practical size advantage, extension wire is less expensive than standard thermocouple wire. This is especially true in the case of platinum-based thermocouples.

Figure 30, Virtual junction

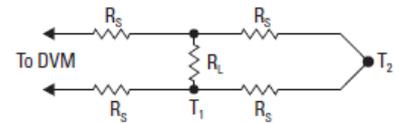

Since the extension wire is specified over a narrower temperature range and it is more likely to receive mechanical stress, the temperature gradient across the extension wire should be kept to a minimum. This, according to the gradient theory, assures that virtually none of the output signal will be affected by the extension wire.

Noise - We have already discussed the line-related noise as it pertains to the data acquisition system. The techniques of isolation serve to cancel most line-related interference. Broadband noise can be rejected with an analogue filter.

The one type of noise the data acquisition system cannot reject is a DC offset caused by a DC leakage current in the system. While it is less common to see DC leakage currents of sufficient magnitude to cause appreciable error, the possibility of their presence should be noted and prevented, especially if the thermocouple wire is very small and the related series impedance is high.

End to end calibration can help in such DC offset scenarios as it will highlight the unexpected offset. If this offset is manageable it can be factored into the devices offset adjustment. Such features are available in the EX1401 including supporting drivers and software where such corrections can also be applied.

## Wire Calibration

Thermocouple wire is manufactured to a certain specification signifying its conformance with the NIST tables. The specification can sometimes be enhanced by calibrating the wire (testing it at known temperatures). Consecutive pieces of wire on a continuous spool will generally track each other more closely than the specified tolerance, although their output voltages may be slightly removed from the centre of the absolute specification.

If the wire is calibrated in an effort to improve its fundamental specifications, it becomes even more imperative that all of the aforementioned conditions be heeded in order to avoid de-calibration.

## Documentation

It may seem incongruous to speak of documentation as being a source of voltage measurement error, but the fact is that thermocouple systems, by their very ease of use, invite a large number of data points. The sheer magnitude of the data can become quite unwieldy. When a large amount of data is taken, there is an increased probability of error due to mislabelling of lines, using the wrong NIST curve, etc.

Since channel numbers invariably change, data should be categorized by measurement and, not just channel number.<sup>10</sup> Information about any given measurand, such as transducer type, output voltage, typical value, and location can be maintained in a data file. This can be done under PC control or simply by filling out a pre-printed form. No matter how the data is maintained, the importance of a concise system should not be underestimated, especially at the outset of a complex data gathering project.

## Diagnostics

Most of the sources of error that we have mentioned are aggravated by using the thermocouple near its temperature limits. These conditions will be encountered infrequently in most applications. But what about the situation where we are using small thermocouples in a harsh atmosphere at high temperatures? How can we tell when the thermocouple is producing erroneous results? We need to develop a reliable set of diagnostic procedures.

Through the use of diagnostic techniques, R.P. Reed has developed an excellent system for detecting a faulty thermocouple and data channels.<sup>10</sup> Three components of this system are the event record, the zone box test and the thermocouple resistance history.

**Event Record** – The first diagnostic is not a test at all, but a recording of all pertinent events that could even remotely affect the measurements. An example is:

Figure 31

March 18 Event Record	
10:43	Power failure
10:47	System power returned
11:05	Changed M821 to type K thermocouple
13:51	New data acquisition program
16:07	M821 appears to be bad reading

We look at our program listing and find that measurand #M821 uses a type J thermocouple and that our new data acquisition program interprets it as type J. But from the event record, apparently thermocouple #M821 was changed to a type K, and the change was not entered into the program. While most anomalies are not discovered this easily, the event record can provide valuable insight into the reason for an unexplained change in a system measurement. This is especially true in a system configured to measure hundreds of data points.

**Thermocouple Resistance** - A sudden change in the resistance of a thermocouple circuit can act as a warning indicator. If we plot resistance vs. time for each set of thermocouple wires, we can immediately spot a sudden resistance change, which could be an indication of an open wire, a wire shorted due to insulation failure, changes due to vibration fatigue or one of many failure mechanisms.

For example, assume we have the thermocouple measurement shown in Figure 32.

We want to measure the temperature profile of an underground seam of coal that has been ignited. The wire passes through a high temperature region, into a cooler region. Suddenly, the temperature we measure rises from 300° C to 1200° C. Has the burning section of the coal seam migrated to a different location, or has the thermocouple insulation failed, thus causing a short circuit between the two wires at the point of a hot spot? If we have a continuous history of the thermocouple wire resistance, we can deduce what has actually happened (Figure 33).

Figure 32, Burning coal seam


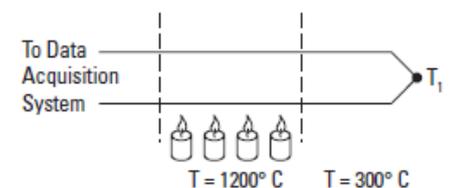


Figure 33, Thermocouple resistance vs time

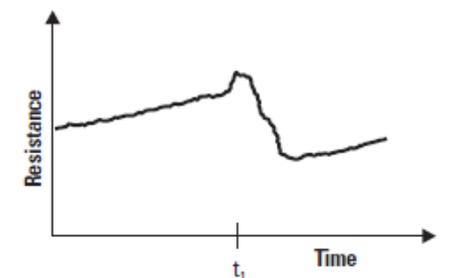


The resistance of the thermocouple will naturally change with time as the resistivity of the wire changes due to varying temperatures. But a sudden change in resistance is an indication that something is wrong. In this case, the resistance has dropped abruptly, indicating that the insulation has failed, effectively shortening the thermocouple loop (Figure 34).

The new junction will measure temperature  $T_s$ , not  $T_1$ . The resistance measurement has given us additional information to help interpret the physical phenomenon that has occurred. This failure would not have been detected by a standard open-thermocouple check.

**Measuring Resistance** - We have casually mentioned checking the resistance of the thermocouple wire, as if it were a straightforward measurement. But keep in mind that when the thermocouple is producing a voltage, this voltage can cause a large resistance measurement error. Measuring the resistance of a thermocouple is akin to measuring the internal resistance of a battery. We can attack this problem with a technique known as *offset compensated ohms measurement*.

Figure 34, Cause of the resistance change

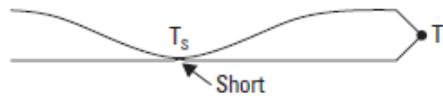


As the name implies, the data acquisition unit first measures the thermocouple offset voltage without the ohms current source applied. Then the ohms current source is switched on and the voltage across the resistance is again measured. The instrument firmware compensates for the offset voltage of the thermocouple and calculates the actual thermocouple source resistance.

**Special Thermocouples** - Under extreme conditions, we can even use diagnostic thermocouple circuit configurations. Tip-branched and leg-branched thermocouples are four wire thermocouple circuits that allow redundant measurement of temperature, noise voltage and resistance for checking wire integrity (Figure 35). Their respective merits are discussed in detail in Bibliography 8.

Only severe thermocouple applications require such extensive diagnostics, but it is comforting to know that there are procedures that can be used to verify the integrity of an important thermocouple measurement.

Figure 35

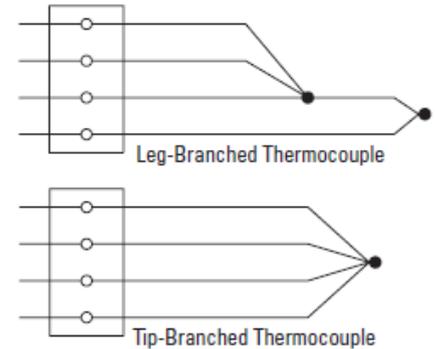

## Summary

In summary, the integrity of a thermocouple system may be improved by following these precautions:

- Use the largest wire possible that will not shunt heat away from the measurement area.
- If small wire is required, use it only in the region of the measurement and use extension wire for the region with no temperature gradient
- Avoid mechanical stress and vibration, which could strain the wires.
- When using long thermocouple wires, use shielded, twisted pair extension wire.
- Avoid steep temperature gradients.
- Try to use the thermocouple wire well within its temperature rating.
- Use an integrating A/D converter with high resolution and good accuracy such as the EX1401 from VTI Instruments.
- Use isolated inputs with ample offset capability.
- Use the proper sheathing material in hostile environments to protect the thermocouple wire.
- Use extension wire only at low temperatures and only in regions of small gradients
- Keep an event log and a continuous record of thermocouple resistance.

# The RTD

## History

The same year that Seebeck made his discovery about thermoelectricity, Sir Humphrey Davy announced that the resistivity of metals showed a marked temperature dependence. Fifty years later, Sir William Siemens proffered the use of platinum as the element in a resistance thermometer. His choice proved most propitious, as platinum is used to this day as the primary element in all high-accuracy resistance thermometers. In fact, the platinum resistance temperature detector, or PRTD, is used today as an interpolation standard from the triple point of equilibrium hydrogen ( $-259.3467^{\circ}\text{C}$ ) to the freezing point of silver ( $961.78^{\circ}\text{C}$ ).

Platinum is especially suited to this purpose, as it can withstand high temperatures while maintaining excellent stability. As a noble metal, it shows limited susceptibility to contamination.

The classical resistance temperature detector (RTD) construction using platinum was proposed by C.H. Meyers in 1932.<sup>12</sup> He wound a helical coil of platinum on a crossed mica web and mounted the assembly inside a glass tube. This construction minimized strain on the wire while maximizing resistance (Figure 36).

Although this construction produces a very stable element, the thermal contact between the platinum and the measured point is quite poor. This results in a slow thermal response time. The fragility of the structure limits its use today primarily to that of a laboratory standard.

Another laboratory standard has taken the place of the Meyer's design. This is the bird-cage element proposed by Evans and Burns.<sup>16</sup> The platinum element remains largely unsupported, which allows it to move freely when

Figure 36, Meyers RTD construction


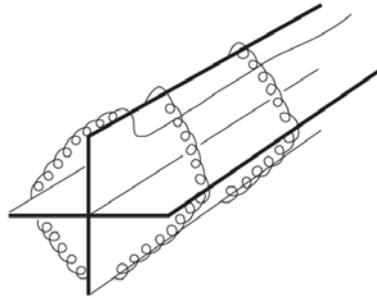


Figure 37, Bird-caged PRTD

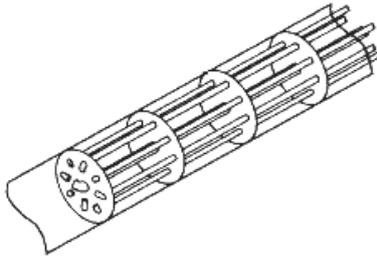

expanded or contracted by temperature variations (Figure 37).

Strain-induced resistance changes caused by time and temperature are thus minimized and the bird-cage becomes the ultimate laboratory standard. Due to the unsupported structure and subsequent susceptibility to vibration, this configuration is still a bit too fragile for industrial environments.

A more rugged construction technique is shown in Figure 38. The platinum wire is bifilar wound on a glass or ceramic bobbin. The bifilar winding reduces the effective enclosed area of the coil to minimize magnetic pickup and its related noise. Once the wire is wound onto the bobbin, the assembly is then sealed with a coating of molten glass. The sealing process assures that the RTD will maintain its integrity under extreme vibration, but it also limits the expansion of the platinum metal at high temperatures.

Figure 38, Sealed bifilar winding

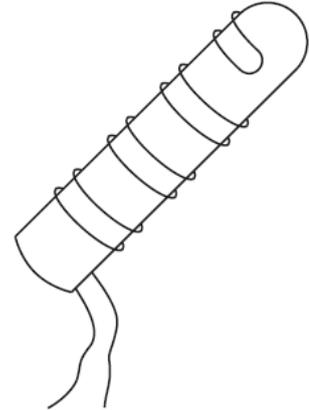


Figure 39, Helical RTD


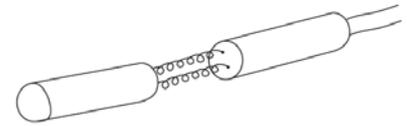


Figure 40, Film RTD

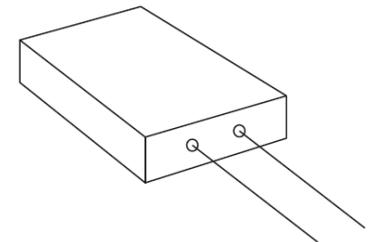

Unless the coefficients of expansion of the platinum and the bobbin match perfectly, stress will be placed on the wire as the temperature changes, resulting in a strain-induced resistance change. This may result in a permanent change in the resistance of the wire.

There are partially supported versions of the RTD which offer a compromise between the bird-cage approach and the sealed helix. One such approach uses a platinum helix threaded through a ceramic cylinder (Figure 39) and affixed via glass-frit. These devices will maintain excellent stability in moderately rugged vibrational applications.

## Metal Film RTD's

In the newest construction technique, a platinum or metal-glass slurry film is deposited or screened onto a small flat ceramic substrate, etched with a laser trimming system, and sealed. The film RTD offers substantial reduction in assembly time and has the further advantage of increased resistance for a given size. Due to the manufacturing technology, the device size itself is small, which means it can respond quickly to step changes in temperature. Film RTD's are less stable than their wire-wound counterparts, but they are more popular because of their decided advantages in size, production cost and ruggedness.

Metals - All metals produce a positive change in resistance for a positive change in temperature. This, of course, is the main function of an RTD. As we shall soon see, system error is minimized when the nominal value of the RTD resistance is large. This implies a metal wire with a high resistivity. The lower the resistivity of the metal, the more material we will have to use.

Table 6 lists the resistivities of common RTD materials.

Due to their lower resistivities, gold and silver are rarely used as RTD elements. Tungsten has a relatively high resistivity, but is reserved for very high temperature applications because it is extremely brittle and difficult to work.

Copper is used occasionally as an RTD element. Its low resistivity forces the element to be longer than a platinum element, but its linearity and very low cost make it an economical alternative. Its upper temperature limit is only about 120° C.

Figure 41, Effect of lead resistance

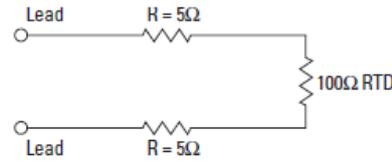


Table 6, Resistivity of common RTD metals


Metal		Resistivity Ω/CMF (CMF = circular mil foot)
GOLD	AU	13.00
SILVER	AG	8.8
COPPER	CU	9.26
PLATINUM	PT	59.00
TUNGSTEN	W	30.00
NICKEL	NI	36.00

The most common RTD's are made of either platinum, nickel, or nickel alloys. The economical nickel derivative wires are used over a limited temperature range. They are quite non-linear and tend to drift with time. For measurement integrity, platinum is the obvious choice.

## Resistance Measurement

The common values of resistance for a platinum RTD range from 10 Ω for the bird-cage model to several thousand Ω for the film RTD. The single most common value is 100 Ω at 0° C. The DIN 43760 standard temperature coefficient of platinum wire is  $\alpha = .00385$ . For a 100 Ω wire this corresponds to +0.385 W/°C at 0° C. This value for  $\alpha$  is actually the average slope from 0° C to 100° C. The more chemically pure platinum wire used in platinum resistance standards has an  $\alpha$  of +.00392 Ω/Ω/° C.

Figure 42, Wheatstone bridge

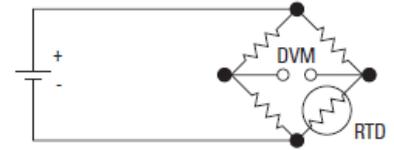

Both the slope and the absolute value are small numbers, especially when we consider the fact that the measurement wires leading to the sensor may be several ohms or even tens of ohms. A small lead impedance can contribute a significant error to our temperature measurement (Figure 41).

A 10 Ω lead impedance implies 10/.385 @ 26° C error in our measurement. Even the temperature coefficient of the lead wire can contribute a measurable error. The classical method of avoiding this problem has been the use of a bridge (Figure 42). The VTI Instruments EX1403A is a 16-channel precision bridge and strain gauge instrument with a 24-bit ADC per channel. A high-resolution ADC and accurate analogue gain control are required when making measurements of such small changes in resistance.

The bridge output voltage is an indirect indication of the RTD resistance. The bridge requires four connection wires, an external source, and three resistors that have a zero-temperature coefficient. To avoid subjecting the three bridge-completion resistors to the same temperature as the RTD, the RTD is separated from the bridge by a pair of extension wires (Figure 43).

These extension wires recreate the problem that we had initially: The impedance of the extension wires affects the temperature reading. This effect can be minimized by using a three-wire bridge configuration (Figure 44).

If wires A and B are perfectly matched in length, their impedance effects will cancel because each is in an opposite leg of the bridge. The third wire, C, acts as a sense lead and carries no current.

The Wheatstone bridge shown in Figure 41 creates a non-linear relationship between resistance change and bridge output voltage change. This compounds the already non-linear temperature-resistance characteristic of the RTD by requiring an additional equation to convert bridge output voltage to equivalent RTD impedance.

Figure 43, Wheatstone bridge with separated RTD


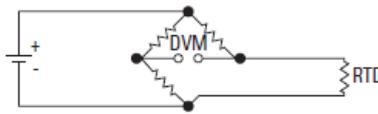


Figure 44, 3 wire bridge connection

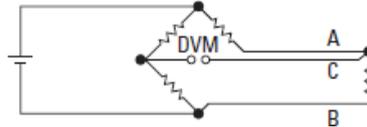


**4-Wire Ohms** - The technique of using a current source along with a remotely sensed digital voltmeter alleviates many problems associated with the bridge. Since no current flows through the voltage sense leads, there is no IR drop in these leads and thus no lead resistance error in the measurement.

The output voltage read by the DVM is directly proportional to RTD resistance, so only one conversion equation is necessary. The three bridge-completion resistors are replaced by one reference resistor. The digital voltmeter measures only the voltage dropped across the RTD and is insensitive to the length of the lead wires (Figure 45).

To improve things further modern testing systems such as the EX1403A incorporate an accurate programmable excitation source with bridge completion resistors and a 24 bit sigma-delta ADC per channel. Having all the needed parts in one device greatly reduces size, removes the risk of human error when configuring, and improves accuracy with minimal cable run lengths. The added bonus is speed, a modern 24 bit ADC is not only more accurate than a standard DVM, but also a lot faster, couple that with have 16 ADC's in one device and the acquisition speed becomes orders of magnitude faster.

Figure 45, 4 wire  $\Omega$  measurement

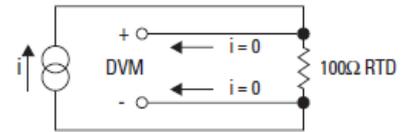

The one disadvantage of using 4-wire  $\Omega$  is that we need one more extension wire than the 3-wire bridge. This is a small price to pay if we are at all concerned with the accuracy of the temperature measurement.

## $\Omega$ to Temperature Conversion

The RTD is a more linear device than the thermocouple, but it still requires curve-fitting. The Callendar-Van Dusen equation has been used for years to approximate the RTD curve.<sup>11, 13</sup>

$$R_T = R_0 + R_0 \alpha \left[ T - \delta \left( \frac{T}{100} - 1 \right) \left( \frac{T}{100} \right) - \beta \left( \frac{T}{100} - 1 \right) \left( \frac{T}{100} \right)^3 \right]$$

Where:

$R_T$  = resistance at temperature T

$R_0$  = resistance at T = 0° C

$\alpha$  = temperature coefficient at T = 0° C  
(typically + 0.00392  $\Omega/\Omega/^\circ$  C)

$\delta$  = 1.49 (typical value for .00392 platinum)

$\beta$  = 0 T > 0

0.11 (typical) T < 0

The exact values for coefficients a, d and b are determined by testing the RTD at four temperatures and solving the resultant equations. This familiar equation was replaced in 1968 by a 20th order polynomial in order to provide a more accurate curve fit.

The plot of this equation shows the RTD to be a more linear device than the thermocouple (Figure 46).


### Practical Precautions

The same practical precautions that apply to thermocouples also apply to RTD's, i.e., use shields and twisted pair wire, use proper sheathing, avoid stress and steep-gradients, use large extension wire, keep good documentation and use an integrating DMM. In addition, the following precautions should be observed.

**Construction** - Due to its construction, the RTD is somewhat more fragile than the thermocouple, and precautions must be taken to protect it.

**Self-Heating** - Unlike the thermocouple, the RTD is not self-powered. A current must be passed through the device to provide a voltage that can be measured. The current causes Joule ( $I^2R$ ) heating within the RTD, changing its temperature. This self-heating appears as a measurement error. Consequently, attention must be paid. Having a test instrument such as the EX1403A that has programmable excitation current can reduce this local heating effect while still achieving the full dynamic range of the RTD

Figure 46, RTD linearity

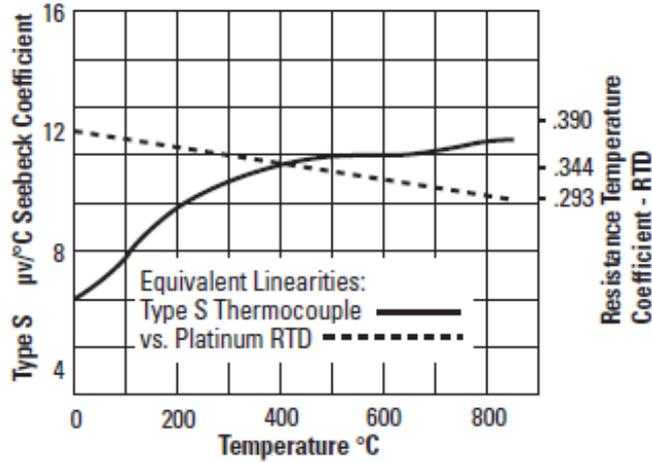

Small RTD	Large RTD
Fast response time	Slow response time
Low thermal shunting	Poor thermal shunting
High self-heating error	Low self-heating

to the magnitude of the measurement current supplied by the ohmmeter. A typical value for self-heating error is 1/2° C per milliwatt in free air. Obviously, an RTD immersed in a thermally conductive medium will distribute its Joule heat to the medium and the error due to self-heating will be smaller. The same RTD that rises 1° C per milliwatt in free air will rise only 1/10° C per milliwatt in air which is flowing at the rate of one meter per second.<sup>6</sup>

To reduce self-heating errors, use the minimum ohms measurement current that will still give the resolution you

require, and use the largest RTD you can that will still give good response time. Obviously, there are compromises to be considered.

**Thermal Shunting** – Thermal shunting is the act of altering the measurement temperature by inserting a measurement transducer. Thermal shunting is more a problem with RTD's than with thermocouples, as the physical bulk of an RTD is greater than that of a thermocouple.

**Thermal EMF** - The platinum-to copper connection that is made when the RTD is measured can cause a thermal offset voltage. The offset compensated ohms technique can be used to eliminate this effect.

# The Thermistor

Like the RTD, the thermistor is also a temperature-sensitive resistor. While the thermocouple is the most versatile temperature transducer and the PRTD is the most stable, the word that best describes the thermistor is *sensitive*. Of the three major categories of sensors, the thermistor exhibits by far the largest parameter change with temperature.

Thermistors are generally composed of semiconductor materials. Although positive temperature coefficient units are available, most thermistors have a negative temperature coefficient (TC); that is, their resistance decreases with increasing temperature. The negative TC can be as large as several percent per degree C, allowing the thermistor circuit to detect minute changes in temperature which could not be observed with an RTD or thermocouple circuit.

The price we pay for this increased sensitivity is loss of linearity. The thermistor is an extremely non-linear device which is highly dependent upon process parameters. Consequently, manufacturers have not standardized thermistor curves to the extent that RTD and thermocouple curves have been standardized (Figure 47). An individual thermistor curve can be very closely approximated through use of the Steinhart-Hart equation:<sup>18</sup>

$$\frac{1}{T} = A + B(\ln R) + C(\ln R)^3$$

where:


T = kelvins

R = Resistance of the thermistor

A,B,C = curve-fitting constants

A, B, and C are found by selecting three data points on the published data curve and solving the three simultaneous equations. When the data points are chosen to span no more than 100° C within the nominal centre of the thermistor's temperature range, this equation approaches a rather remarkable ±.02° C curve fit.

Figure 47, TC, RTD and Thermistor curves

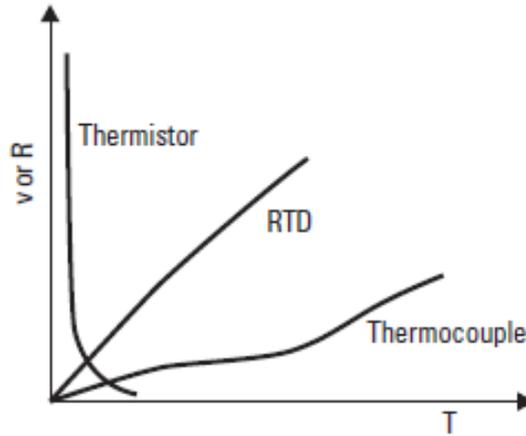

Somewhat faster computer execution time is achieved through a simpler equation:

$$T = \frac{1}{(\ln R) - A} - C$$

where A, B, and C are again found by selecting three (R,T) data points and solving the three resultant simultaneous equations. This equation must be applied over a narrower temperature range in order to approach the accuracy of the Steinhart-Hart equation.

## Measurement

The high resistivity of the thermistor affords it a distinct measurement advantage. The four-wire resistance measurement may not be required as it is with RTD's. For example, a common thermistor value is 5000W at 25° C. With a typical TC of 4%/° C, a measurement lead resistance of 10W produces only .05° C error. This error is a factor of 500 times less than the equivalent RTD error.

**Disadvantages** - Because they are semiconductors, thermistors are more susceptible to permanent de-calibration at high temperatures than are RTD's or thermocouples. The use of thermistors is generally limited to a few hundred degrees Celsius, and manufacturers warn that extended exposures even well below maximum operating limits will cause the thermistor to drift out of its specified tolerance.

Thermistors can be made very small which means they will respond quickly to temperature changes. It also means that their small thermal mass makes them especially susceptible to self-heating errors. Thermistors are a good deal more fragile than RTD's or thermocouples and they must be carefully mounted to avoid crushing or bond separation.

## IC Temperature Sensor


An innovation in thermometry is the integrated circuit temperature transducer. These are available in both voltage and current-output configurations. Both supply an output that is linearly proportional to absolute temperature. Typical values are  $1 \mu\text{A/K}$  and  $10 \text{ mV/K}$  (Figure 48).

Some integrated sensors even represent temperature in a digital output format that can be read directly by a microprocessor.

Except that they offer a very linear output with temperature, these IC sensors share all the disadvantages of thermistors. They are semiconductor devices and thus have a limited temperature range. The same problems of self-heating and fragility are evident and they require an external power source.

These devices provide a convenient way to produce an easy-to-read output that is proportional to temperature. Such a need arises in thermocouple reference junction hardware, and in fact these devices are increasingly used for thermocouple compensation.

Figure 48, typical IC temperature device

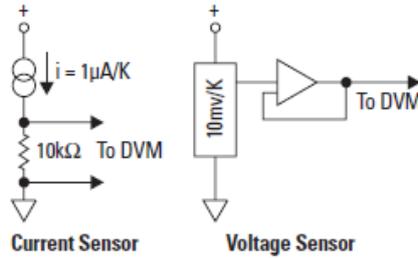

## The Measurement System

When looking to thermocouple measuring, the VTI Instruments EX1401 delivers isolated, differential, accurate, and highly repeatable thermocouple ( $\pm 0.20^{\circ}\text{C}$ ) and voltage measurements by implementing fully integrated signal conditioning, 24-bit sigma-delta ADC's, and independent Cold Junction Compensation (CJC) on a per-channel basis.

With industry-leading sample rates of 20 kSa/s/channel, the EX1401 is well-suited for a wide range of applications that require maximum accuracy, flexible sampling rates, and protection against damaging voltage levels. Figure 49 shows this instrument with its industry standard mini TC connectors on the front panel.

**Cold Junction Compensation** - The heart of any truly accurate thermocouple measurement system is the CJC implementation. The EX1401 is designed to measure the actual cold junction temperature at the point where the dissimilar metals meet. To further ensure the precision of the data, each channel has its own dedicated CJC sensor to reduce errors associated with temperature gradients across the box.

**Open Thermocouple Detection** - (OTD) circuitry is incorporated and gives continuous visual indication via an LED whenever a broken transducer link is detected. OTD conditions can also be configured in the application through the supplied API and can be activated/deactivated on a per-channel basis.

**Built-in self-test** - (BIST) can be invoked under software control prior to each critical test. A simple pass-fail result will be returned after completing system health diagnostics, including temperature and voltage level measurements of the on-board processor and can be

used to prevent a test from running in the event of a failure.


**Isolated Measurements** - Challenging measurement environments such as areas with a high level of electrical noise or where transient power surges can occur require unique protection capabilities in order to safeguard against common mode noise or ground loop problems.

The EX1401 provides exceptional input protection and isolation across a wide range of operating conditions, protecting the instrument from harmful voltages while ensuring measurement integrity. The Ethernet communications interface and input power are isolated from the analogue front-end inputs.

16-Channel Isolated Thermocouple and Voltage Measurement Instrument

- Typical accuracies of  $\pm 0.20^{\circ}\text{C}$
- 16-channel isolated universal thermocouple/voltage inputs
- Power over Ethernet+ (PoE+)
- 20K samples/second/channel sample rate
- 24-bit ADC per channel
- 500 V channel-ground isolation
- 1000 V channel-channel isolation
- Data logger acquisition mode
- Built-in parallel data streaming
- Full-featured embedded web interface
- LXI Ethernet interface
- 8-bit bank isolated digital I/O
- Compact 1U half-rack form factor

Figure 49, The EX1401 temperature measuring system

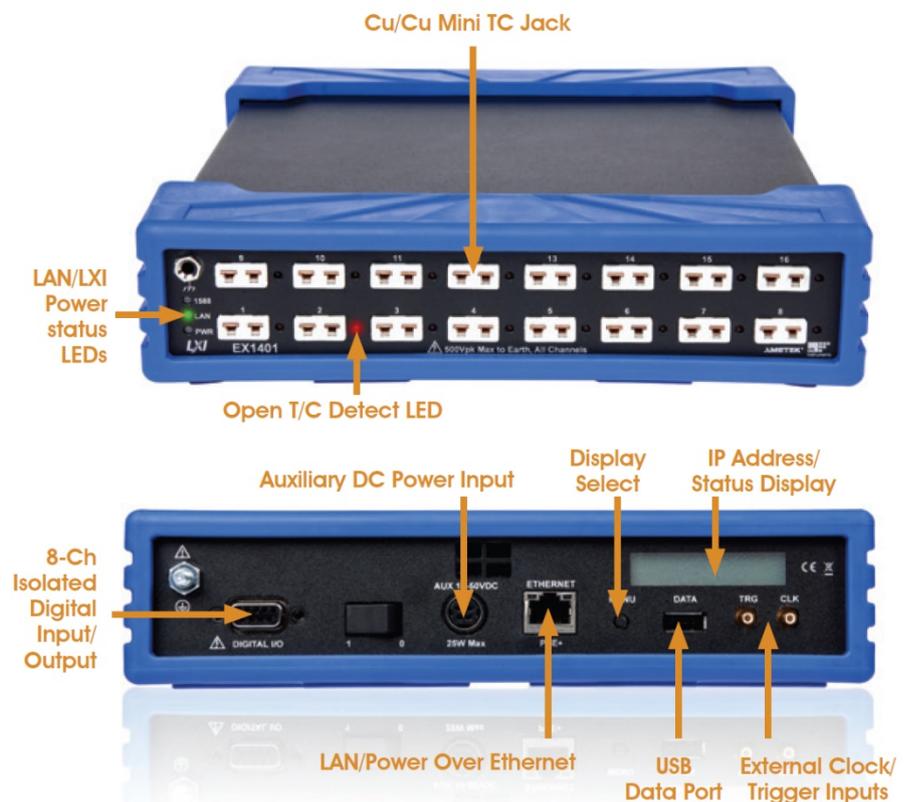


When looking to RTD measuring, the VTI Instruments EX1403A delivers differential, accurate, and highly repeatable resistance and voltage measurements by implementing fully integrated signal conditioning, 24-bit sigma-delta ADC's, signal conditioning and filtering on a per-channel basis. Figure 50 shows the connections and layout of the EX1403A using rugged RJ45 connectors for resistance and voltage measurements.

Built-in signal conditioning, programmable excitation, and selectable bridge completion, all integrated into the instrument and configurable on a per-channel basis, greatly simplify setup and configuration. With unmatched performance, accuracy and reliability, 2 wire or 4 wire ohm measurements lend themselves to accurate RTD temperature results

**Confidence** - Manufacturing and test environments of today are dynamic, dictating minimal downtime of test systems in order to meet increasing product throughput demands. Ensuring that acquired data is reliable and that instrument calibration can be turned around quickly are keys to the success of any production team. VTI embeds intelligence into the EX1403A to facilitate maximum system "uptime" and increase manufacturing efficiency.

**Built-In-Self-Test** - (BIST), Self-CAL, Lead-Wire CAL, or Shunt CAL can be executed prior to a critical test to have confidence that digitizer and connections to transducers are OK.

Figure 50, The EX1403A precision resistance and voltage instrument.

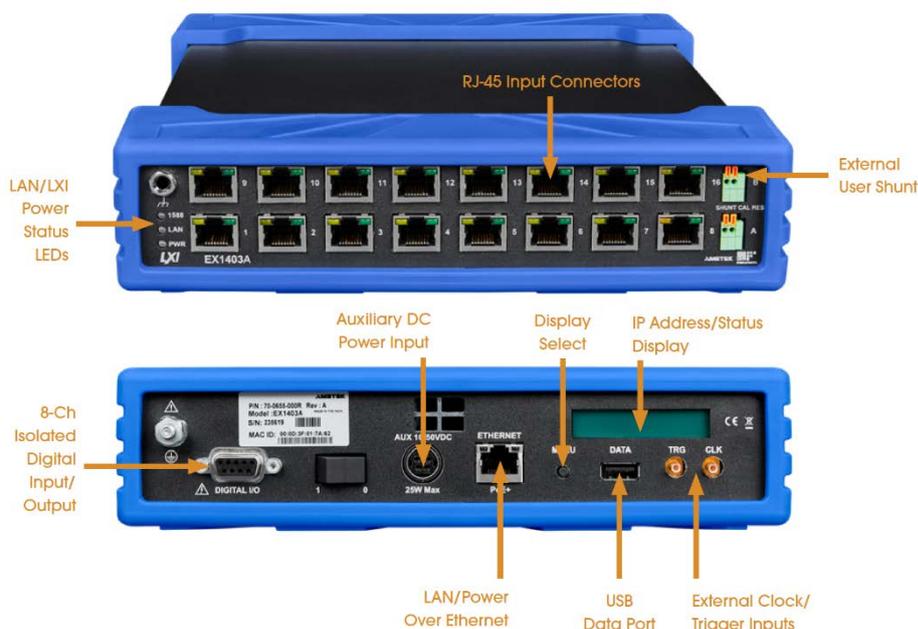

The important factor in these systems is scalability, especially in high-speed synchronised data acquisition systems which are often distributed / decentralised adding to the challenge.

The EX1400 series in addition to its core set of features, integrates Extended Functions as defined in the LXI specifications to provide box-to-box synchronization to correlate acquired data precisely. Time-stamping of data and LAN Event Messaging that simplify inter-module communication and flexible triggering options over Ethernet; this eliminates the overhead normally attributed to application software running on the host controller.

The EX1400 series supports easy integration and synchronization of multiple devices through the IEEE-1588 v2 Precision Time Protocol standard for synchronization, providing an architecture that can be scaled from tens to thousands of channels. Multiple instruments can be easily distributed extremely close to the measurement points of interest, reducing the run length of analogue cabling and minimizing errors induced by noisy environments.

Additionally, Power Over Ethernet (PoE) enables a single cable to be used for both power and data capture. All measurement data is returned with IEEE-1588 timestamp codes with typical accuracies of <200nS, ensuring that acquired data is tightly correlated across the test article.

## Summary


Reliable temperature measurements require a great deal of care in both selecting and using the transducer, as well as choosing the right measurement system. With proper precautions observed for self-heating, thermal shunting, transducer de-calibration, specifications and noise reduction, even the most complex temperature monitoring project will produce repeatable, reliable data. Today's data acquisition system assumes a great deal of this burden, allowing us to concentrate on meaningful test results.

## Appendix A - Laws

### The Empirical Laws of Thermocouples<sup>2</sup>


The following examples illustrate the empirically derived laws of thermocouples which are useful in understanding and diagnosing thermocouple circuits.

#### The Law of Intermediate Metals

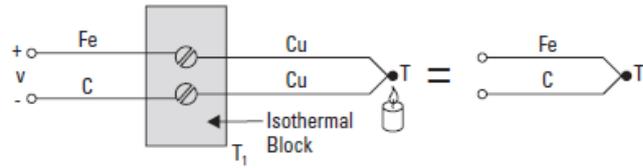


Inserting the copper lead between the iron and constantan leads will not change the output voltage  $V$ , regardless of the temperature of the copper lead. The voltage  $V$  is that of an Fe-C thermocouple at temperature  $T_1$ .

#### The Law of Interior Temperatures

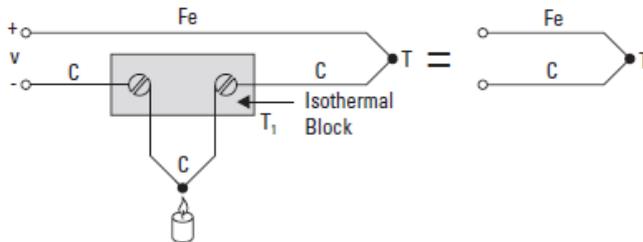

The output voltage  $V$  will be that of an Fe-C thermocouple at temperature  $T$ , regardless of the external heat source applied to either measurement lead.

#### The Law of Inserted Metals

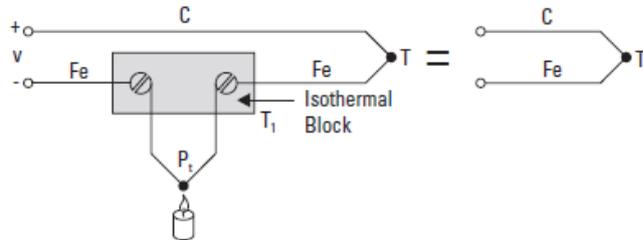

The voltage  $V$  will be that of an Fe-C thermocouple at temperature  $T$ , provided both ends of the platinum wire are at the same temperature. The two thermocouples created by the platinum wire (Fe-Pt and Pt-Fe) act in opposition.

All of the above examples assume the measurement wires are homogeneous; that is, free of defects and impurities.

## Appendix B - Characteristics

### Thermocouple Characteristics

Over the year's specific pairs of thermocouple alloys have been developed to solve unique measurement problems. Idiosyncrasies of the more common thermocouples are discussed here.


We will use the term "standard wire error" to refer to the common commercial specification published in the *Annual Book of ASTM Standards*. It represents the allowable deviation between the actual thermocouple output voltage and the voltage predicted by the tables in NIST Monograph 175.

#### Noble Metal Thermocouples -

The noble metal thermocouples, types B, R, and S, are all platinum or platinum-rhodium thermocouples and hence share many of the same characteristics.

**Diffusion** - Metallic vapor diffusion at high temperatures can readily change the platinum wire calibration, hence platinum wires should only be used inside a non-metallic sheath such as high-purity alumina. The one exception to this rule is a sheath made of platinum, and this option is prohibitively expensive.

**Stability** - The platinum-based couples are by far the most stable of all the common thermocouples. Type S is so stable that it is specified as the standard for temperature calibration between the antimony point (630.74° C) and the gold point (1064.43° C).

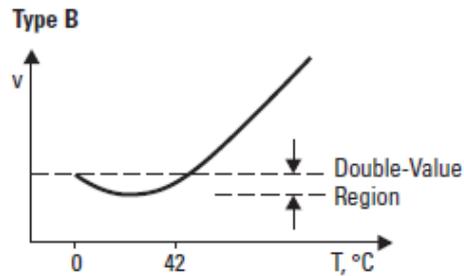

**Type B** - The B couple is the only common thermocouple that exhibits a double-valued ambiguity.

Due to the double-valued curve and the extremely low Seebeck coefficient at low temperatures, Type B is virtually useless below 50° C. Since the output is nearly zero from 0° C to 42° C, Type B has the unique advantage that the reference junction temperature is almost immaterial, as long as it is between 0° and 40° C. Of course, the measuring junction temperature is typically very high.

#### Base Metal Thermocouples

Unlike the noble metal thermocouples, the base metal couples have no specified chemical composition. Any combination of metals may be used which results in a voltage vs. temperature curve fit that is within the standard wire errors. This leads to some rather interesting metal combinations. Constantan, for example, is not a specific metal alloy at all, but a generic name for a whole series of copper-nickel alloys. Incredibly, the Constantan used in a type T (copper-Constantan) thermocouple is not the same as the Constantan used in the type J (iron-Constantan) thermocouple.<sup>3</sup>

**Type E** - Although Type E standard wire errors are not specified below 0° C, the type E thermocouple is ideally suited for low temperature measurements because of its high Seebeck coefficient (58 V/°C), low thermal conductivity and corrosion resistance.

The Seebeck coefficient for Type E is greater than all other standard couples, which makes it useful for detecting small temperature changes.

**Type J** - Iron, the positive element in a J thermocouple is an inexpensive metal rarely manufactured in pure form. J thermocouples are subject to poor conformance characteristics because of impurities in the iron. Even so, the J thermocouple is popular because of its high Seebeck coefficient and low price.


The J thermocouple should never be used above 760° C due to an abrupt magnetic transformation that can cause de-calibration even when returned to lower temperatures.

**Type T** - This is the only thermocouple with published standard wire errors for the temperature region below 0° C; however, type E is actually more suitable at very low temperatures because of its higher Seebeck coefficient and lower thermal conductivity.

Type T has the unique distinction of having one copper lead. This can be an advantage in a specialized monitoring situation where a temperature difference is all that is desired.

The advantage is that the copper thermocouple leads are the same metal as the DVM terminals, making lead compensation unnecessary.

**Types K & N** - Type K has long been a popular thermocouple. It is especially suited to higher temperature applications due to its resistance to oxidation. The type N thermocouple is gaining popularity as a replacement for type K. It has a slightly lower output (smaller Seebeck coefficient) than type K, but an even higher resistance to oxidation. The type N thermocouple output curve is dependent upon wire size, and there are two distinct Nicrosil-Nisil characteristic curves published in NIST Monograph 175, the differences being wire size and temperature range.<sup>14</sup>

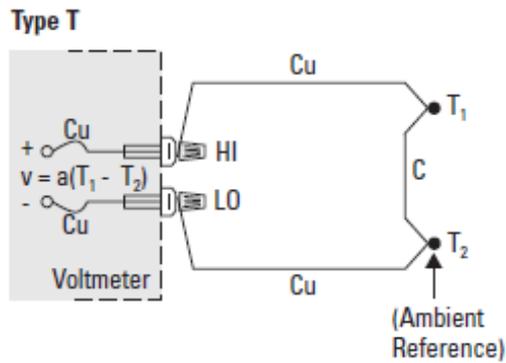

**Tungsten** - There are three common types of tungsten thermocouples. All are alloyed with rhenium to make the metal more malleable.

- Type G\* W vs W-26% Re
- Type C\* W-5% Re vs W-26% Re
- Type D\* W-3% Re vs W-25% Re

Tungsten thermocouples are used for measuring very high temperatures in either a vacuum or an inert atmosphere.

# Thermocouple Hardware



**Connector**  
Composed of same metals as thermocouple, for minimum connection error.



**Thermocouple Well**

- lower gradient
- protects wire
- change thermocouple without interrupting process



**Undergrounded Junction**

- best protection
- electrically isolated



**Grounded Junction**

- wires protected
- faster response



**Exposed Junction**

- wires unprotected
- fastest response



**Thermocouple Washers**

- couple built into washer
- convenient mounting

Type	Metal		Standard U.S. Colour Code		$\Omega$ /Double Foot@ 20°C	Seebeck Coefficient	Wire Error in °C			NIST Specified Material Range † (°C)	
	-	+	+	-			20 AWG	Range	Standard		Special
B	PLATINUM – 30% RHODIUM	PLATINUM – 6% RHODIUM	GRAY	RED	0.22	5.96	600	870 TO 1700	±0.5%	±0.25%	0 TO 1820
E	NICKEL – 10% CHROMIUM	CONSTANTAN	VIOLET	RED	0.71	58.67	0	0 TO 900	±1.7 OR ±0.5%	±1 OR ±0.4%	-270 TO 1000
J	IRON	CONSTANTAN	WHITE	RED	0.36	50.38	0	0 TO 750	±2.2 OR ±0.75%	±1.1 OR ±0.4%	-210 TO 1200
K	NICKEL – 10% CHROMIUM	NICKEL	YELLOW	RED	0.59	39.45	0	0 TO 1250	±2.2 OR ±0.75%	±1.1 OR ±0.4%	-270 TO 1372
N	NICROSIL	NISIL	ORANGE	RED	0.78	25.93	0	0 TO 1250	±2.2 OR ±0.75%	±1.1 OR ±0.4%	-270 TO 1300
R	PLATINUM – 13% RHODIUM	PLATINUM	BLACK	RED	0.19	11.36	600	0 TO 1450	±1.5 OR ±0.25%	±0.6 OR ±0.1%	-50 TO 1768
S	PLATINUM – 10% RHODIUM	PLATINUM	BLACK	RED	0.19	10.21	600	0 TO 1450	±1.5 OR ±0.25%	±0.6 OR ±0.1%	-50 TO 1768
T	COPPER	CONSTANTAN	BLUE	RED	0.30	38.75	0	0 TO 350	±1 OR ±0.75%	±0.5 OR ±0.4%	-270 TO 400

## Bibliography

1. Charles Herzfeld, F.G. Brickwedde: Temperature - Its Measurement and Control in Science and Industry, Vol. 3, Part 1, Reinhold, New York, 1962.
2. Robert P. Benedict: Fundamentals of Temperature, Pressure and Flow Measurements, John Wiley & Sons, Inc., New York, 1969.
3. Manual on the Use of Thermocouples in Temperature Measurement, Fourth Edition, Revision of ASTM Special Publication 470B, Philadelphia, PA., 1993.
4. Temperature-Electromotive Force Reference Functions and Tables for the Letter-Designated Thermocouple Types Based on the ITS-90, NIST Monograph 175, National Institute of Standards and Technology, Washington, D.C., 1993
5. H. Dean Baker, E.A. Ryder, N.H. Baker: Temperature Measurement in Engineering, Omega Press, Division of Omega Engineering Inc.
6. Temperature Measurement Handbook 1983, Omega Engineering, Stamford, Connecticut, 06907.
7. R.L. Anderson: Accuracy of Small Diameter Sheathed Thermocouples for the Core Flow Test Loop, Oak Ridge National Laboratories, ORNL-5401, (available from National Information Service), April, 1979.
8. R.P. Reed: Branched Thermocouple Circuits in Underground Coal Gasification Experiments, Proceedings of the 22nd ISA International Instrumentation Symposium, Instrument Society of America, 1976.
9. R.J. Moffat: The Gradient Approach to Thermocouple Circuitry, from Temperature – Its Measurement and Control in Science and Industry, Reinhold, New York, 1962.
10. R.P. Reed: A Diagnostics-oriented System for Thermocouple Thermometry, Proceedings of 24<sup>th</sup> ISA International Instrumentation Symposium, Instrument Society of America, 1978.
11. Harry R. Norton: Handbook of Transducers for Electronic Measuring Systems, Prentice-Hall, Englewood Cliffs, New Jersey.
12. C.H. Meyers: Coiled Filament Resistance Thermometers, NBS Journal of Research, Vol. 9, 1932.
13. Bulletin 9612, Rev. B: Platinum Resistance Temperature Sensors, Rosemount Engineering Co., 1962.
14. Burley, Powell, Burns, & Scroger: The Nicrosil vs. Nisil Thermocouple: Properties and Thermoelectric Reference Data, NBS Monograph 161, U.S. Dept. of Commerce, Washington, D.C., 1978.
15. J.P. Tavener: Platinum Resistance Temperature Detectors - State of the Art, Measurements & Control, Measurements & Data Corporation, Pittsburgh, PA., April 1974.
16. J.P. Evans and G.W. Burns: A Study of Stability of High Temperature Platinum Resistance Thermometers, in Temperature - Its Measurement and Control on Science and Industry, Reinhold, New York, 1962.
17. D.D. Pollock: The Theory and Properties of Thermocouple Elements, ASTM STP 492, Omega Press, Ithaca, New York, 1979.
18. YSI Precision Thermistors, Yellow Springs Instruments, Inc., Yellow Springs, Ohio, 1977
19. R.P. Reed: Thermoelectric Thermometry. A Functional Model, from Temperature – Its Measurement and Control in Science and Industry, Vol. 5, American Institute of Physics, N.Y. 1982.

## The Company

Located in San Diego, CA, AMETEK Programmable Power designs, manufactures, and markets precision, AC and DC programmable power supplies, electronic loads, application specific power subsystems, and compliance test solutions for customers requiring and valuing differentiated power products and services. Also, part of our business is VTI Instruments, which delivers precision modular instrumentation and systems for electronic signal distribution, acquisition, and monitoring, used in the world's most demanding test applications.

AMETEK Programmable Power boasts one of the industries' broadest portfolios of programmable power products under the well-known and respected Sorensen, Elgar, and California Instruments brands. AMETEK Programmable Power's products serve a wide range of stimulus (T&M) and process power needs in applications including semiconductor fabrication, commercial and defence ATE, oil exploration, solar array and battery string simulation, avionics, general R&D and EMC compliance testing.

VTI Instruments provides products and systems which are used to monitor and record data that characterizes the physical integrity and performance of aircraft, engines, and other large structures, as well as automate the functional testing of complex electronic systems. VTI Instruments is recognized as an industry leader with a reputation of providing reliable data, first time, every time.

With strong brands, a broad product portfolio, exceptional precision power conversion and control expertise, proven power system integration capabilities and deep applications knowledge, AMETEK Programmable Power is your source for programmable power supplies, precision data acquisition instruments, and more.

VTI INSTRUMENTS  
9250 Brown Deer Rd,  
San Diego, CA 92121, USA  
+1 (858) 450-0085  
[www.vtiinstruments.com](http://www.vtiinstruments.com)

